



Philips
Earhook Headphones

15mm drivers/open-back
Earhook

SHS8200BK



Clear natural sound

These rotatable earhooks adjust to your ears for a soft but highly secure fit. The choice of three cap sizes ensures a perfect seal to enhance the premium quality sound.

For superb music pleasure

- 24k gold-plated plug ensures an ultra reliable connection
- Passive noise isolation for better sound at lower volume
- Turbo Bass gives you superb deep and dynamic bass tones
- Ultra small efficient driver for perfect fit, perfect sound

Made to fit you and your lifestyle

- 3 interchangeable rubber ear caps for optimal fit in all ear
- Flexible rubber earhooks for a comfortable and secure fit
- Rear cable exit enhances comfort and convenience

Always ready to go

- A 1.2m long cable that is ideal for outdoor use
- Anti-tug design for an extra secure fit

PHILIPS

Specifications

Sound

- Acoustic system: open
- Magnet type: Neodymium
- Voice coil: CCAW
- Diaphragm: Mylar dome
- Frequency response: 9 - 24 000 Hz
- Impedance: 16 ohm
- Maximum power input: 30 mW
- Sensitivity: 107 dB

- Speaker diameter: 15 mm
- Type: Dynamic

Connectivity

- Cable Connection: one-sided
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: gold-plated
- Type of cable: OFC

Highlights


24k Gold-plated plug

Rest assured that the precious metal gold finishing on the plug will give you a more reliable connection for better quality audio.

1.2m cable

The ideal cable length to give you the freedom to put your audio device where you want.

For optimal fit in all ears

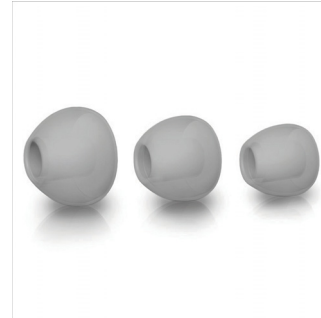

With a choice of 3 interchangeable ear caps from size small to large, surely there is a pair that makes these Philips earphones fit your ear perfectly.

Anti-pull design

Thanks to its unique design no matter what activities you participate in these headphones will remain securely and comfortably inside your ears. When the cable is pulled they grip tighter.

Flexible rubber earhooks

The rubber earhooks provide a non-slip grip for an extra secure and comfortable fit, ensuring that the headphones remain in place for hours of comfort. Ideal for active use.

Passive noise isolation

The perfect, snug fit inside your ear stops unwanted background noise detracting from the pure pleasure of your favorite music. This means you still enjoy the headphones' superb sound quality at lower volume settings, and also benefit from a longer battery life.

Rear cable exit

The headphone cable is centered at the back of the neckband so you're hardly aware it's even there.

Turbo Bass

The unique bass wave design 'turbo-charges' the low tones by directing them towards your ears. The result is a fantastic realistic and a more involved experience.

Ultra small efficient driver

This means you still enjoy the headphones' superb sound quality at lower volume settings, and also benefit from a longer battery life.



Issue date 2015-11-10

Version: 1.0.5

12 NC: 8670 001 31962
EAN: 69 25970 70809 8

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com