




Philips
Headphones

14.2 mm drivers/open-back
Ear bud

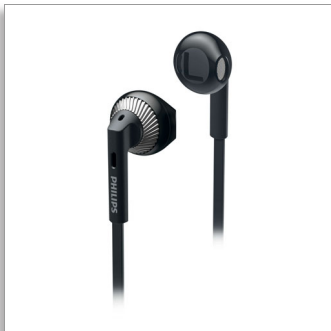

SHE3200BK

Rich bass, clear sound

Designed to comfortably fit the shape of your ear

Designed for optimal fit and comfort, the SHE3200 earphones feature 14.2 mm drivers and bass vents for rich bass and clear sound. Available in a choice of 6 vibrant colours to match your Apple watch.

Enjoy quality sound

- 14.2 mm speaker drivers for rich bass and clear sound
- Neodymium magnets enhance bass performance

Ultimate wearing comfort

- Designed to comfortably fit the shape of your ear

Design for convenience

- Flexi-Grip design for durability

PHILIPS

Headphones
14.2 mm drivers/open-back Ear bud

Specifications

Sound

- Acoustic system: open
- Frequency response: 8–24,000 Hz
- Magnet type: Neodymium
- Speaker diameter: 14.2 mm
- Sensitivity: 107 dB
- Maximum power input: 30 mW
- Impedance: 32 ohm

Connectivity

- Type of cable: copper
- Cable Connection: two-parallel, symmetric
- Finishing of connector: nickel plated
- Cable length: 1 m
- Connector: 3.5 mm

Design

- Colour: Black

SHE3200BK/27

Highlights

14.2 mm speaker drivers




Quality 14.2 mm speaker drivers with neodymium magnet delivers rich bass and clear sound.

Designed for comfort

The design is based on ear geometry for comfortable wear and a snug fit for everyone.

Flexi-Grip

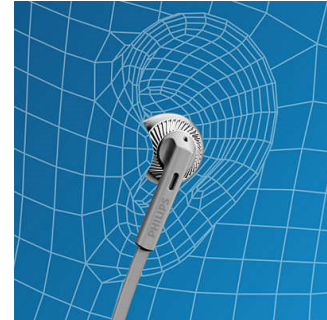

A soft, flexible part that connects the housing and the cable protects the cable connection from damage, even if bended heavily.

Neodymium magnets



Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, providing a better bass response and higher overall sound quality.



Issue date 2024-03-12

Version: 1.0.5

UPC: 8 89446 00298 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com