

Philips
5.1 Home theater

Blu-ray



HTS3551



Cinematic surround sound

with Blu-ray

Bring the power of the cinema into your home! Powerful speakers with double basspipes and high definition HDMI 1080p upscaling with Blu-ray Disc playback pump up your home entertainment experience.

Great listening experience

- Powerful speakers with double basspipes for great sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 300W RMS power delivers great sound for movies and music

Simply enjoy all your entertainment

- Plays Blu-ray Discs, DVD, VCD, CD and USB devices
- Access your favorite YouTube videos & Picasa photos easily
- HDMI for high definition movies and picture quality
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Highlights

Access YouTube and Picasa




Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

Double bass sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

Dolby TrueHD and DTS-HD

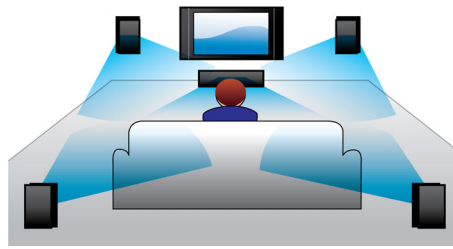

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

300W RMS power



300W RMS power delivers great sound for movies and music

Play it all



Play virtually any disc and any media format you want - whether they be Blu-ray Discs, DVDs, VCDs, CDs or USB devices. Experience the

unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Audio Playback

- Compression format: AAC, MP3, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Front / Side connections: Music iLINK, USB
- Rear Connections: AUX IN 1, AUX IN 2, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC)

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.7 kg
- Center Speaker (W x H x D): 161 x 95 x 92 mm
- Center Speaker Weight: 0.5 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 95 x 161 x 87 mm

- Front Speaker Weight: 0.5 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 95 x 161 x 87 mm
- Rear Speaker Weight: 0.5 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 126 x 307 x 369 mm
- Subwoofer Weight: 3.2 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 468 x 370 x 410 mm
- Weight incl. Packaging: 10.1 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 12 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 55 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Center speaker output power: 50 W
- Satellite speaker output power: 50 W x 4
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

Tuner/Reception/Transmission

- Tuner Bands: FM



Issue date 2015-09-03

Version: 4.2.11

12 NC: 8670 000 75837
EAN: 87 12581 60222 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To upgrade for access to YouTube and Picasa, visit www.philips.com/support

**Only for models that are Wi-Fi ready, for details, please refer to the product specification.