



Philips  
docking station for iPod/  
iPhone

with Lightning connector  
for iPod/iPhone  
FM, dual alarm  
20W



AJ7045D



## Wake up to great sound from your iPod/iPhone

with this docking station

Start each day right with your favorite music from iPod/iPhone with Lightning connector. Built-in with Bass Reflex speakers, this sleek Philips docking station delivers rich, deep bass and powerful sound.

### Enrich your sound experience

- 20W RMS total output power
- FM digital tuning with presets
- Fast charging and play music via Lightning connector

### Easy to use

- All-in-one remote control for your system and iPod/iPhone
- Adjustable display brightness for comfort viewing
- Auto sync time via iPod/iPhone dock with Lightning connector
- Audio-in for easy portable music playback


### Start the day your way

- Rise to radio or iPod/iPhone music via Lightning connector
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- Sleep timer for easy falling asleep to your favorite music

# PHILIPS


# Highlights

## Dual alarm

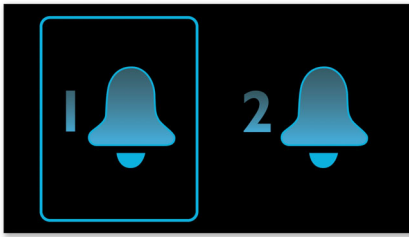

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## All-in-one remote control

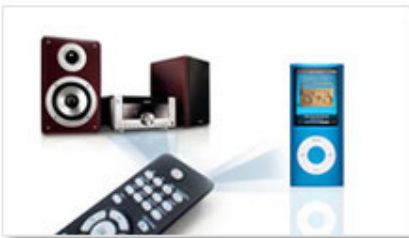

With the Philips all-in-one remote control, you can now navigate both your Philips music system and your iPod/iPhone through hundreds of songs easily with the one simple press of the remote control. Displaying information listed according to playlist, album, artist, genre or track, the navigation offers speedy yet simple through hundreds of files. It allows one handed operation and guarantees a unique user experience.


## Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted

awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

## 20W RMS total output power

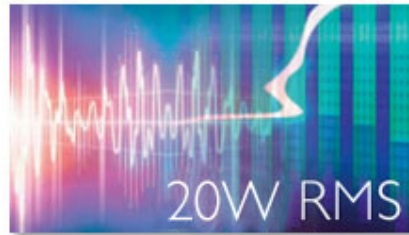

RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

## Adjustable display brightness

Adjustable display brightness allows you to customize the display to your needs.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy

your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Auto sync time

Auto sync time via iPod/iPhone dock with Lightning connector

## FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

## Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to work about the battery running out.

## Rise to radio or iPod/iPhone

Rise to radio or iPod/iPhone music via Lightning connector



Docking station for iPod/iPhone  
with Lightning connector for iPod/iPhone, FM, dual alarm, 20W

# Specifications

## iPhone compatibility

- Compatible with: iPhone 5

## iPod compatibility

- Compatible with: iPod touch 5th generation, iPod nano 7th generation

## Audio Playback

- Cradle playback mode: Charging iPod, Charging iPhone, Play and Pause, Next and Previous track, Fast forward and backward

## Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: 87.5-108 MHz
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

## Clock

- Type: Digital
- Time format: 12H, 24H

## Alarm

- No. of alarms: 2
- Alarm source: Dock, FM radio, Buzzer
- 24 hours alarm reset
- Snooze (repeat alarm): Yes, 9mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Convenience

- Remote Control: Multi-functional
- Display type: LED display

- Backlight color: Amber
- Display Enhancements: Brightness Control
- Display brightness: High/ Mid/ Low

## Sound

- Sound System: Stereo
- Output power (RMS): 20W
- Volume control: up/down

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- Audio in (3.5mm)

## Power

- Mains power: 100-240V, 50/60Hz
- Power type: 10V, 1.8A

## Dimensions

- Product dimensions (WxDxH): 290 x 113 x 159 mm
- Packaging dimensions (WxDxH): 318 x 143 x 204 mm
- Weight: 1.5 kg
- Weight incl. Packaging: 2.08 kg

## Accessories

- AC/DC Adaptor
- Remote control
- Quick start guide
- World Wide Warranty leaflet



Issue date 2014-08-13

Version: 2.0.4

12 NC: 8670 001 02148  
EAN: 87 12581 68441 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)