



Philips
wireless portable speaker

Bluetooth®

Built-in microphone for calls
Rechargeable battery
2W

BT100P

Keep your tunes close

Go anywhere compactness meets great sound and a range of colors. Combined with built-in Bluetooth wireless streaming, the BT100 is ideal for the globetrotting fashionista in everyone.

Simplicity in use

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth

Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion free music

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere


PHILIPS

wireless portable speaker
Bluetooth® Built-in microphone for calls, Rechargeable battery, 2W

BT100P/37


Highlights

Wireless music streaming

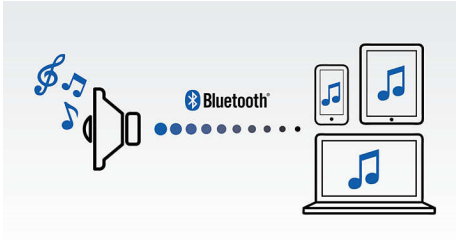

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Anti-clipping function

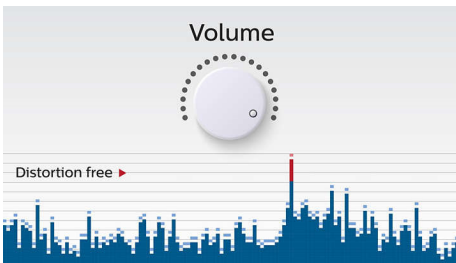

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from

300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



Audio-in for easy connection to almost any electronic device

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

Advanced audio performance

Advanced audio performance with a compact design

wireless portable speaker
Bluetooth® Built-in microphone for calls, Rechargeable battery, 2W

BT100P/37

Specifications

Sound

- Output power (RMS): 2W
- Sound System: Mono

Design and finishing

- Color: Pink

Loudspeakers

- Speaker driver: 1 x 1.75"

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)
- USB charging

Convenience

- Built-in microphone: for speaker conference

Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 8 hour(s)

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Weight incl. Packaging: 0.3 kg
- Product dimensions (WxDxH): 63 x 63 x 82 mm
- Packaging dimensions (WxDxH): 99 x 99 x 121 mm
- Product weight: 0.18 kg



Issue date 2024-03-25

Version: 2.0.6

UPC: 4 89518 56132 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com