



Philips Soundbar speaker

2.1 CH wireless slim subwoofer
Bluetooth® aptX, AAC and NFC
1 HDMI in & HDMI out ARC
Only 29.8mm slimness



HTL6145C



Powerful sound for any TV

with slim wireless subwoofer

The Philips HTL6145C soundbar combines a wafer thin profile with quality sound and thundering bass. Its ultra slim subwoofer can be placed anywhere to maximize impact.

Richer sound for watching TV and movies

- Powerful 320W sound output
- Dual reflex system for impactful bass
- Premium soft dome tweeters for Crystal Clear Sound
- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and DTS for great surround sound

Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI ARC to access all the sound from your TV
- Connect to one HDMI in for great picture and sound quality

Designed to enhance your living space

- 2.98cm slimness
- Slim wireless subwoofer for vertical & horizontal placement
- Minimalistic chic design to suit a modern decor

PHILIPS

Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness


Highlights

Dual reflex system




Most subwoofers on the market use a single bass port and a single driver, but for bigger and clearer bass, two bass ports are needed. The larger volume of open space created by two bass ports increases airflow which reduces distortion while simultaneously allowing more bass to be created. With two 6.5" drivers and two bass ports, the dual bass reflex system far surpasses the bass created by a normal subwoofer.

Premium soft dome tweeters

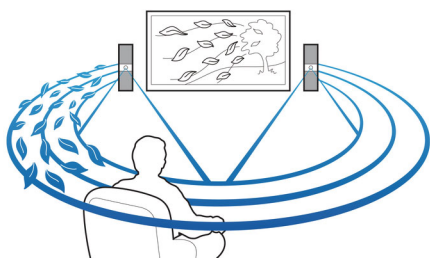

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

Bluetooth® (aptX® and AAC)

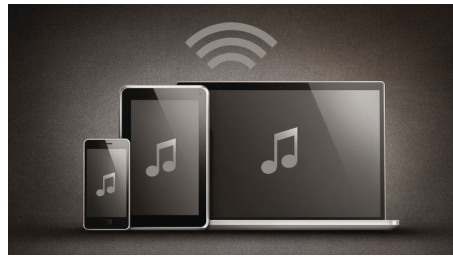

Bluetooth® (aptX® and AAC) for wireless music streaming

NFC technology




Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output to the connection in your non-3D AV receiver.

Virtual Surround Sound

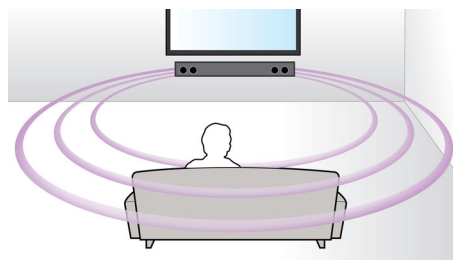


Philips Virtual Surround Sound produces rich and immersive surround sound from less than

HTL6145C/12


five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Wireless subwoofer

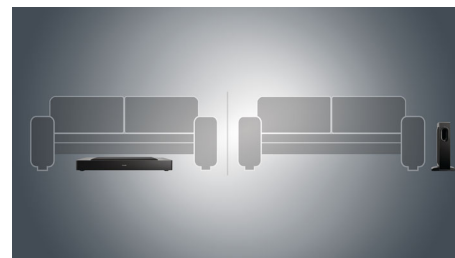

Slim wireless subwoofer for vertical & horizontal placement

Dolby Digital and DTS

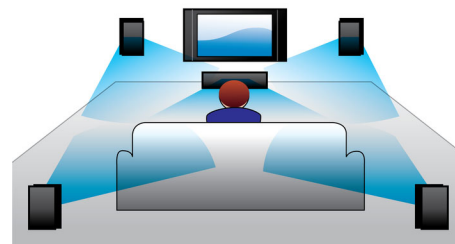

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX ,AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness

HTL6145C/12

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Audio sync, Auto Volume Leveler, Virtual Surround Sound, Night Mode
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220W
- Speaker output power: 100W
- Total Power RMS @ 10% THD: 320 W

Loudspeakers

- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Soundbar: 2X 1" soft dome tweeters, 6 X 2" neodymium woofers
- Subwoofer driver: 2 X 6.5" woofers

Connectivity

- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC, Wireless subwoofer
- Integrated Connections: Bluetooth APT-X, NFC

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power supply: 110-240V, 50Hz
- Standby power consumption: <0.5 W

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, Wall mount bracket

Packaging dimensions

- EAN: 87 12581 72090 2
- Packaging dimensions (W x H x D): 110 x 23 x 40 cm
- Gross weight: 13.6 kg
- Nett weight: 9.6 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 4 kg
- Type of shelf placement: Laying

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 1046X71.6X29.8mm mm
- Subwoofer (W x H x D): 730 X 83 X 330 mm

Outer Carton

- EAN: 87 12581 72090 2
- Gross weight: 13.6 kg
- Outer carton (L x W x H): 110 x 40 x 23 cm
- Nett weight: 9.6 kg
- Number of consumer packagings: 1
- Tare weight: 4 kg

Product dimensions

- Product dimensions (W x H x D): 104.6 x 7.2 x 3 cm
- Weight: 1.47 kg



Issue date 2022-06-03

Version: 3.2.5

12 NC: 8670 001 14728
EAN: 87 12581 72090 2

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com