

Philips
5.1 Home theatre

DoubleBASS
3D Blu-ray
dock iPod/iPhone



HTS4562



Enjoy powerful cinema in your home with DoubleBass

Obsessed with sound

Maximise your home cinema sound experience with dynamic Double Basspipes speakers! Play all your favourite entertainment content including 3D Blu-ray on this innovative Philips 4000 series home cinema system.

Great listening experience

- 1000 W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- DoubleBASS technology for fuller and deeper bass
- Powerful speakers with double basspipes for great sound

Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience

PHILIPS


Highlights

Double bass sound



Powerful speakers with a bass-reflex system and double bass pipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

Wireless rear speakers option

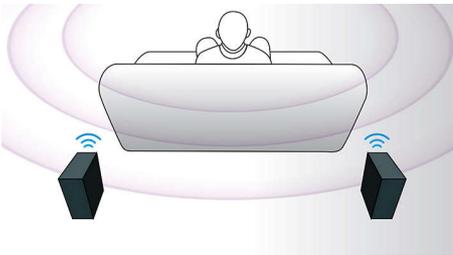

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.


Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the

latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Dolby TrueHD and DTS-HD

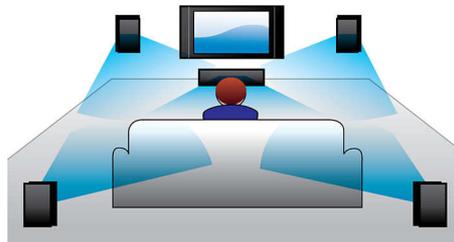

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

1000 W RMS power




1000 W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

Unique touch controls

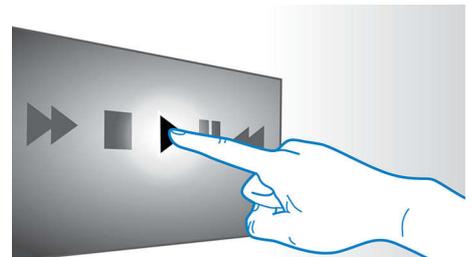

Touch controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the main unit.

Specifications

Sound

- Sound Enhancement: Dialogue Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby True HD, Dolby Digital 5.1, Dolby Digital Plus, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 230 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Centre speaker output power: 230 W
- Satellite speaker output power: 135 W x 4
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Centre speaker drivers: 1 x 3" Full range woofer
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 3 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Centre speaker freq. range: 150–20k Hz
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Subwoofer impedance: 3 ohm

Connectivity

- Access to Content: DLNA
- Front/Side connections: Music iLINK, USB/Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40
- RDS: Station Name

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

Power

- Power consumption: 105 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

Accessories

- Compatible accessories: RWSS5510 Wireless Rear Audio, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, DCK3060

Dock for iPod/iPhone, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, WUB1110 Wi-Fi USB Adaptor

Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Weight incl. Packaging: 14.4 kg
- Main Unit Weight: 3.7 kg
- Packaging (W x H x D): 400 x 440 x 520 mm
- Centre Speaker (W x H x D): 161 x 92 x 95 mm
- Centre Speaker Weight: 0.8 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 95 x 161 x 87 mm
- Subwoofer (W x H x D): 123 x 309 x 369 mm
- Front Speaker Weight: 0.6 kg
- Subwoofer Weight: 3.6 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 95 x 161 x 87 mm
- Rear Speaker Weight: 0.6 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3, WMA, AAC, WAV
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: aac, mka, mp3, wav, wma
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Matching Philips Televisions*

- 4000 Series: 32PFL4606, 37PFL4606, 42PFL4606, 47PFL4606
- 3000 Series: 32PFL3606, 42PFL3606

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD



Issue date 2024-05-07

Version: 8.3.5

EAN: 87 12581 58843 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The home theatre can also be matched with all other Philips TVs.