

Philips  
docking speaker



DS9010

## Experience true fidelity

Obsessed with sound

This docking speaker delivers true-to-the-original audio, letting you enjoy all you hold dear in your music. Built with aircraft aluminum, this beautifully designed docking station brings magic to audio experiences at home.

### Peerless sound quality

- Audiophile-quality drivers for authentic sound reproduction
- Passive crossover for full audible spectrum reproduction
- SoundCurve for superb crystal-clear sound
- Pure digital processing technology for best sound clarity
- Precisely tuned bass pipes for deep, tight bass reproduction
- Smooth-edged enclosure to limit sound diffraction

### Exquisite design and finishing

- Premium design finish in anodized brushed aluminum
- Design fit for iPod/iPhone/iPad

### Advanced intuitive control

- Proximity sensor to activate backlit control panel
- Dock any iPod/iPhone/iPad, even in its case
- Free DockStudio app for internet radio & other cool feature



# PHILIPS


# Highlights

## Audiophile-quality drivers



Philips docking speaker features a ring radiator tweeter - a high quality transducer used in Hi-Fi speaker concepts - which blends ultimate high-frequency reproduction with astonishing accuracy and details. Distortion is reduced to an absolute minimum, allowing the finest music nuances to be revealed in its full fidelity.

## Bass pipes

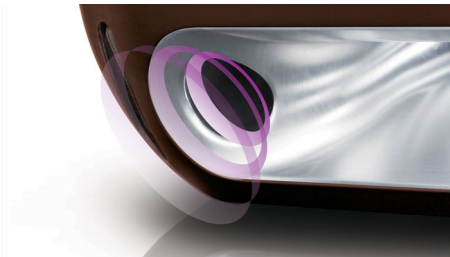

The generous 3L acoustic volume allocated to each woofer is perfectly aligned with precisely tuned back-firing bass pipes to deliver truly impressive and tight bass performance from such a compact speaker. The result - exceptional realism and immersive listening experience.

## Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared

Made for  
 iPod iPhone iPad

to the conventional analog audio processing technology that is found in docking players that use the analog audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

## Proximity sensor



Most top-grade audiophile appliances allow the display to be turned off – for absolute enjoyment of music, and for power to be focused on sound reproduction. With the proximity sensor feature, you can enjoy that too. Walk away and the illuminated functional keys automatically dim. When your hand draws near, the functional keys light up so you can control your music without fuss.

## DockStudio app on App Store



The free app adds an array of exclusive cool features to your docking speaker. You can check the weather, tell the time and even use your favorite images as wallpaper. DockStudio also lets you listen to thousands of Internet radio stations worldwide. More updates on skin styles and new functions on the way.

## Anodized brushed aluminum

Premium design finish in anodized brushed aluminum

# Specifications

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

## iPod/iPhone/iPad App

- Compatibility: iOS 4.3 to iOS 10.3

## iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch, iPod touch 2nd Generation, iPod touch 2nd Gen 8/16/32GB, iPod touch 4th generation, iPod with color display, iPod 5th Generation

## iPod/iPhone App

- Free download from App store
- App name: DockStudio
- Playback: Album/track navigation, Playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: Analog display, Digital display
- Alarm: Multiple alarms, Sleep timer, Wake up to music, Wake up to nature sounds, Wake up to photo

## Audio Playback

- Cradle playback mode: Charging iPhone, Charging iPod, Play and Pause, Next and Previous track

## Sound

- Output power (RMS): 2x50W
- Sound System: Stereo
- Loudspeaker types: Bass Reflex Speaker System
- Volume Control: Volume Control up/down

## Loudspeakers

- Speaker Drivers: 2 x 1" tweeters, 2 x 4" woofers

## Connectivity

- Aux in

## Convenience

- Remote Control: Multi-functional

## Power

- Power supply: 100-240VAC, 50/60Hz

## Accessories

- Included accessories: AC Power Cord, Remote Control, 3.5mm stereo line in cable, Warranty certificate, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Product dimensions (W x H x D): 563 x 214 x 225 mm
- Weight: 7.2 kg
- Weight incl. Packaging: 9.3 kg
- Packaging dimensions (W x H x D): 619 x 276 x 276 mm



Issue date 2017-12-30

Version: 5.0.4

12 NC: 8670 000 71552  
 EAN: 87 12581 58010 0

© 2017 Koninklijke Philips N.V.  
 All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)