

Always there to help you





Register your product and get support at
www.philips.com/welcome

DCM1170






EN Short User Manual
ZH-CN 简明用户手册

PHILIPS

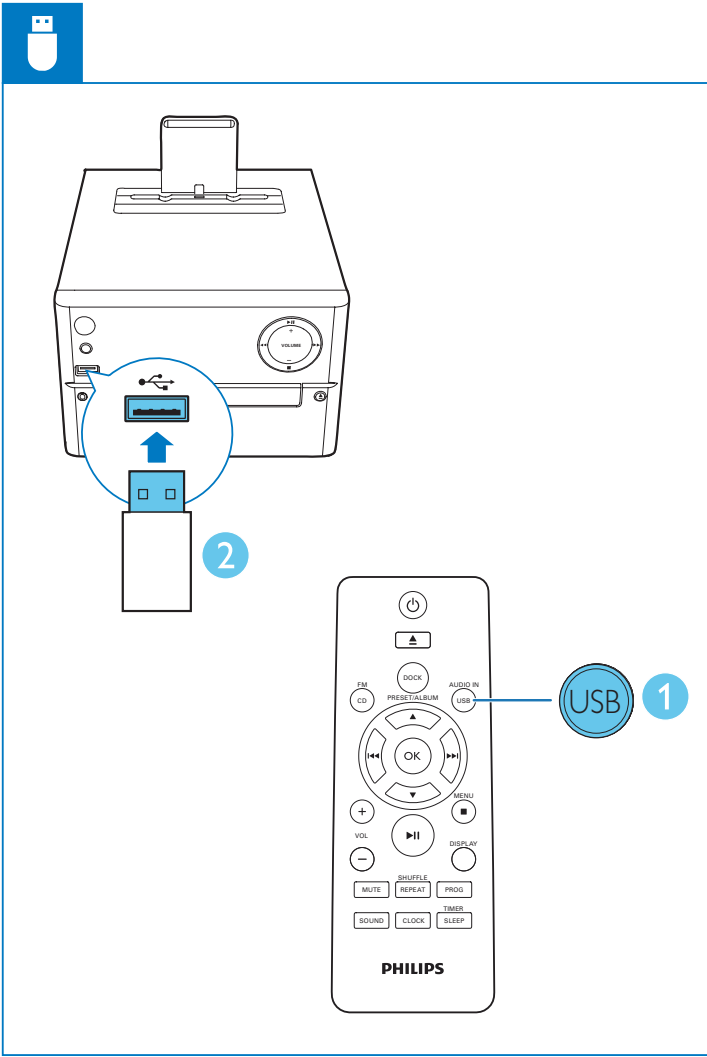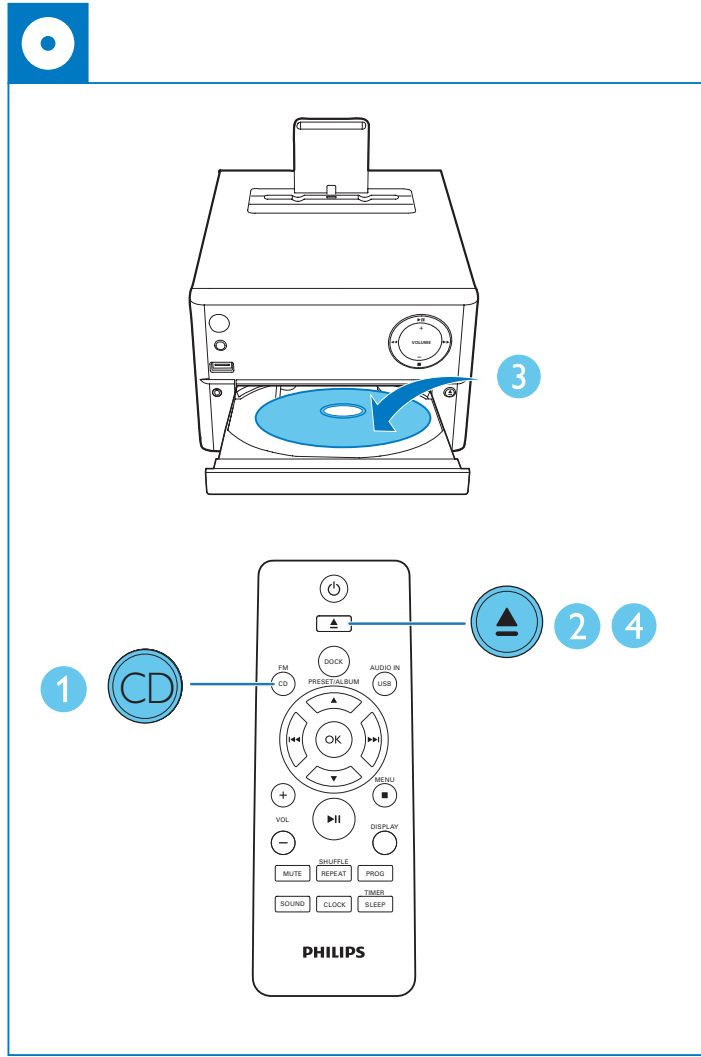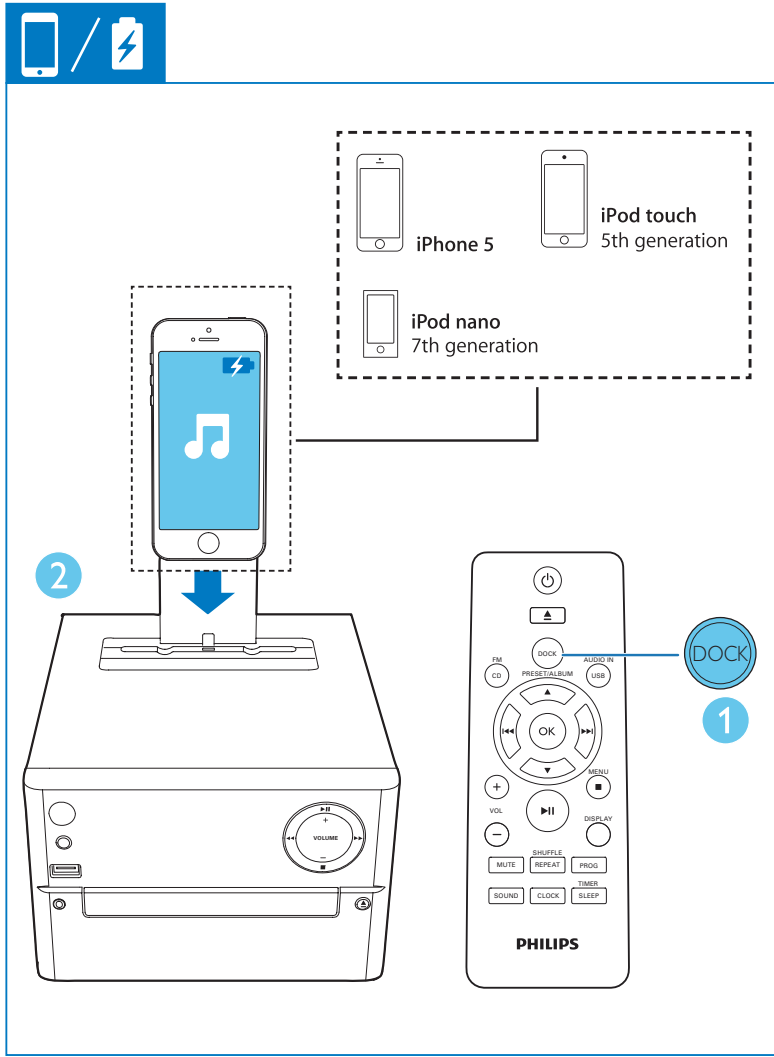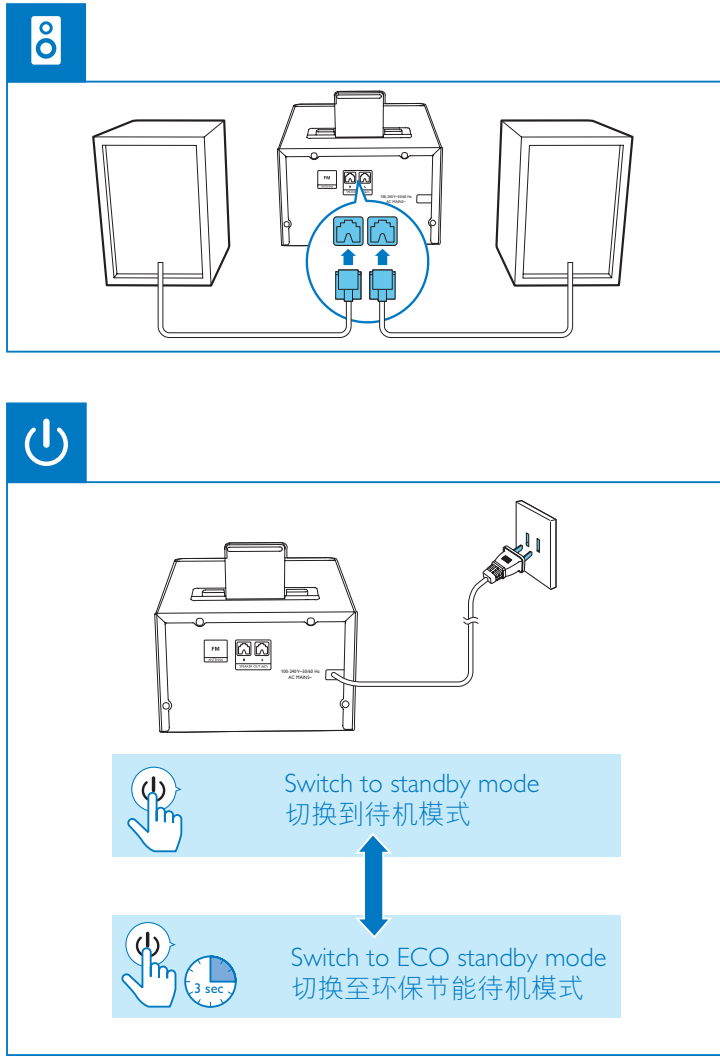

Control play	
▲/▼	Select a folder.
◀/▶	Select an audio file.
⏸	Pause or resume play.
■	Stop play.
MENU (menu)	Access iPod/iPhone menu.
OK (OK)	Confirm a selection.
REPEAT (repeat)	Play a track or all tracks repeatedly.
SHUFFLE (shuffle)	Play tracks randomly.
VOL +/-	Increase or decrease the volume.
MUTE (mute)	Mute or restore sound.
SOUND (sound)	Enrich sound effect with DSC: balanced, clear, powerful, warm, and bright.
DISPLAY (display)	Adjust display brightness.
控制播放	
▲/▼	选择文件夹。
◀/▶	选择音频文件。
⏸	暂停或继续播放。
■	停止播放。
MENU (菜单)	访问 iPod/iPhone 菜单。
OK (确定)	确认选择。
REPEAT (重复播放)	复播放一首曲目或所有曲目。
SHUFFLE (随机播放)	将随机播放曲目。
VOL +/-	提高或降低音量。
MUTE (静音)	静音或恢复声音。
SOUND (声音)	DSC 带来丰富的音效: 均衡、清晰、强劲、暖调和响亮。
DISPLAY (显示屏)	调节显示屏亮度。

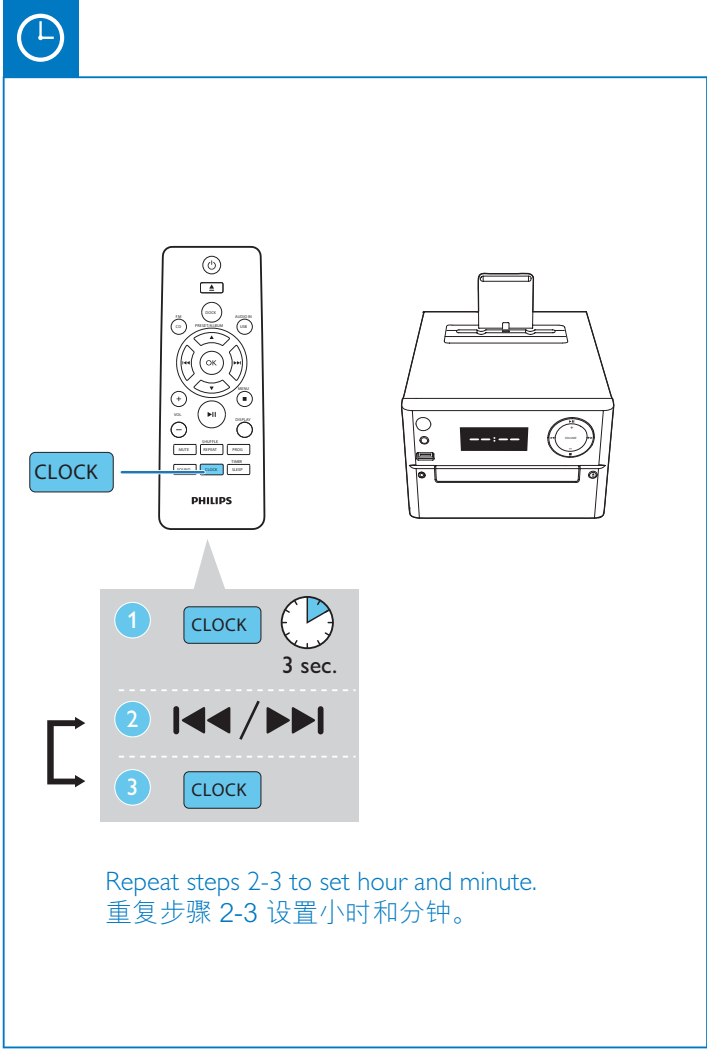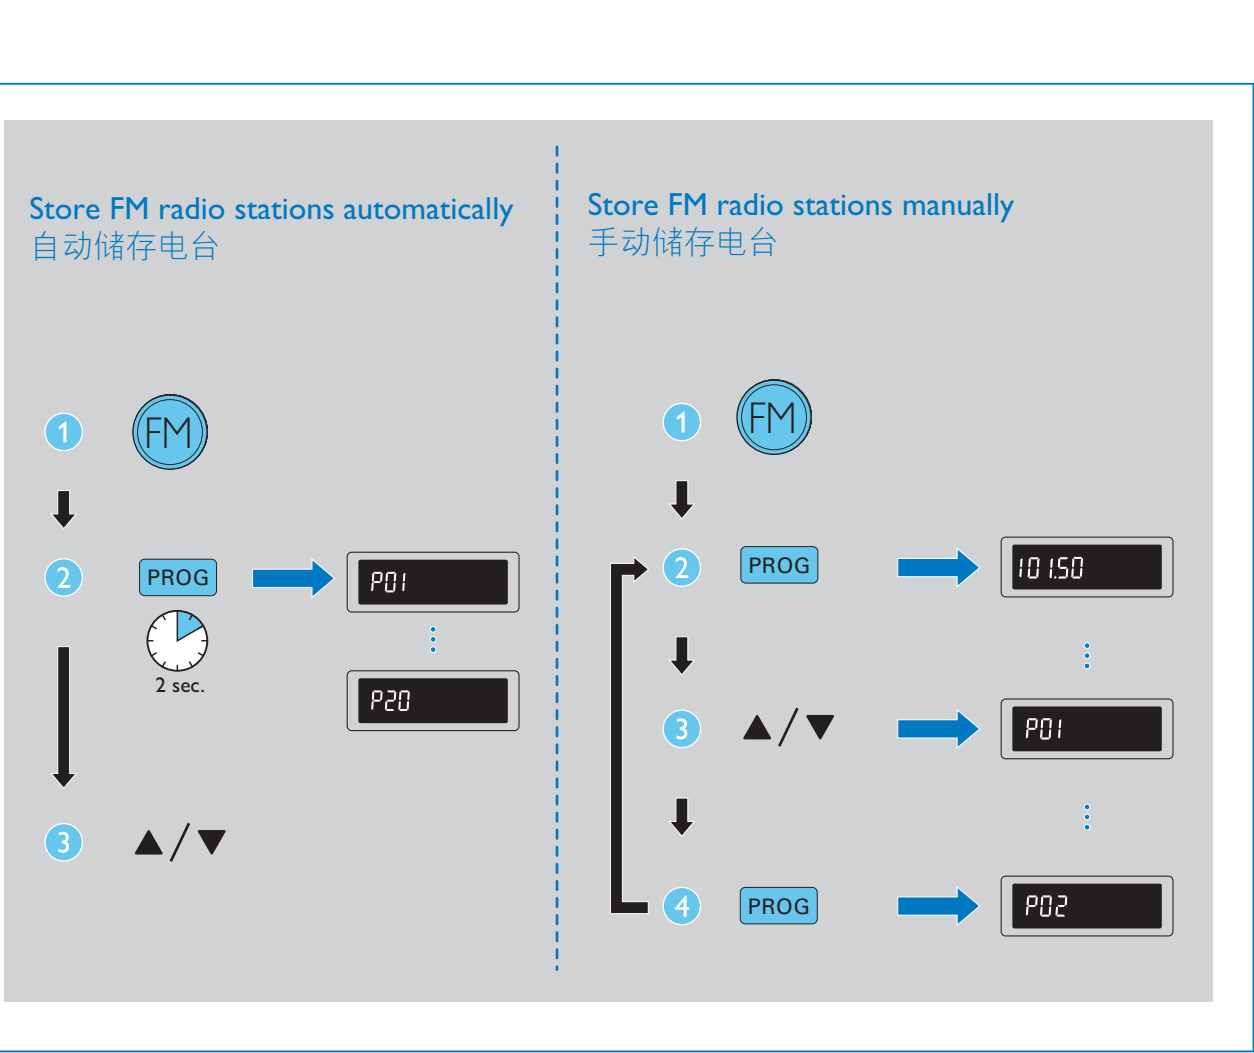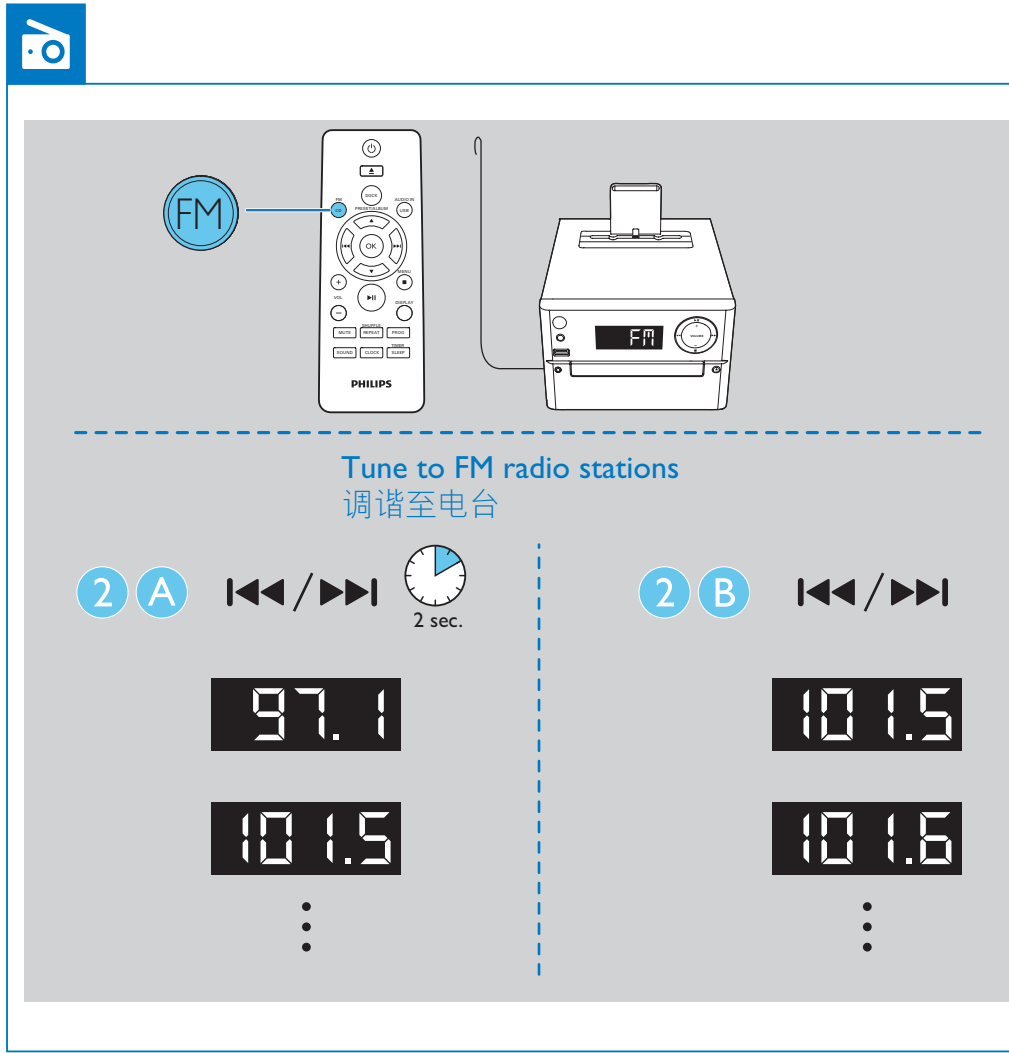

All registered and unregistered trademarks are property of their respective owners.
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

DCM1170_93_Short User Manual_V1.1



Repeat step 2-3 to set minute, select a source (CD, FM, USB, or iPod/iPhone), and adjust volume.

重复步骤 2-3 可设置分钟，选择来源（CD、FM、USB 或 iPod/iPhone），然后调节音量。

English

Important

Safety

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Important Safety Instructions

- Follow all instructions.
- Heed all warnings.
- Do not use this device near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.

To download the full user manual, visit www.philips.com/support. 要获取完整的用户手册，请访问 www.philips.com/support。

Specifications

Maximum Output Power	20 W
Tuning Range	87.5-108 MHz
Tuning grid	50 KHz
USB Direct Version	2.0 full speed
USB 5 V Power	≤500 mA
Disc Diameter	12 cm/8 cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD
AC power	100-240 V~, 50/60 Hz
Operation Power Consumption	18 W
Eco Standby Power Consumption	<0.5 W
Dimensions	
- Main Unit (W x H x D)	180 x 177 x 239 mm
- Speaker Box (W x H x D)	120 x 170 x 160 mm
Weight	
- Main Unit	1.5 kg
- Speaker Box	2 x 1.2 kg

规格

最大输出功率	20 瓦
调谐范围	87.5-108 兆赫
调谐栅	50 千赫
USB 直放版本	2.0 全速
USB 5 伏电源	≤500 毫安
光盘直径	12 厘米/8 厘米
支持的光盘	CD-DA、CD-R、CD-RW 和 MP3-CD
交流电源	100-240 伏、50/60 赫兹
操作功耗	18 瓦
环保节能待机功耗	< 0.5 瓦
尺寸	
- 主装置（宽 x 高 x 厚）	180 x 177 x 239 毫米
- 音箱（宽 x 高 x 厚）	120 x 170 x 160 毫米
重量	
- 主装置	1.5 千克
- 音箱	2 x 1.2 千克

中文简体

注意事项

安全

此 闪电标志 表示设备中的未绝缘材料可能导致触电。为了您家中每个人的安全，请勿卸下产品外盖。

惊叹号 表示需要对某些功能多加注意，您应仔细阅读附带的说明书以防止出现操作和维护问题。

警告：为减少火灾或触电危险，此设备应避免淋雨或受潮，不得将装有液体的物体（如花瓶）放在此设备上。

注意：为防止触电，请完成插入插头。（对于具有极化插头的区域：为防止触电，请将宽插片插入宽插槽。）

重要安全说明

- 遵循所有说明。
- 注意所有警告。
- 不要在靠近水的地方使用本设备。
- 只能使用干布进行清洁。
- 不要堵塞任何通风口。按照制造商的说明进行安装。
- 不要在任何热源附近安装，如散热器、蓄热器、炉具或其它发热设备（包括功放器）。
- 防止电源线被踩踏或挤夹，特别是在插头、电源插座和设备电源线出口位置。
- 仅使用制造商指定的附件/配件。
- 仅使用制造商指定或随设备销售的手推车、支座、三脚架、支架或桌台。使用手推车时，请小心移动载有产品的手推车/设备，以避免翻倒造成伤害。
- 在雷电天气期间或长期不用的情况下，请拔下本设备的电源插头。

Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this unit)

Supported formats:

- USB or memory file format: FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 32 bytes)

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 128 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

兼容的 USB 设备:

- USB 闪存（USB2.0 或 USB1.1）
- USB 闪存播放机（USB2.0 或 USB1.1）
- 存储卡（需要额外的读卡器才能用于本装置）

支持的格式:

- USB 或内存文件格式：FAT12、FAT16、FAT32（扇区大小：512 个字节）
- MP3 位速率（数据速率）：32-320 Kbps 和可变速率
- 目录嵌套最多可达 8 层
- 专辑/文件次数：最多 99
- 曲目/标题数量：最多 999
- ID3 标签 v2.0 或更高版本
- Unicode UTF8 类型的文件名（最大长度：32 个字节）

支持的 MP3 光盘格式

- ISO9660, Joliet
- 最大标题数：128（视文件名长度而定）
- 最大专辑数：99
- 支持的采样频率：32 千赫、44.1 千赫、48 千赫
- 支持的比特率：32~256 (kbps)，可变速率

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	x	○	○	○	○	○
Accessories (Remote control & cables) 附件（遥控器，电源线，连接线）	x	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。
○：Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

x：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 - 2006 标准规定的限量要求。
x：Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.

环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害 的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Be responsible
Respect copyrights

进行受版权保护材料（包括计算机程序、文件、广播和录音）的未经授权复制可能会侵犯版权并构成犯罪。不得将此设备用于这些目的。

Made for
 iPod iPhone

Made for iPod 和 Made for iPhone 表示电子附件专为连接 iPod 或 iPhone 而设计，并经开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全和法规标准不负任何责任。请注意，通过 iPod 或 iPhone 使用该附件可能影响无线性能。iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商标。

本装置包括此标签：

CLASS 1
LASER PRODUCT

注

- 铭牌（铭牌上的信息包括工作电压和消耗功率）位于主机背面，使用前请了解铭牌上的相关信息。