

# Compelling sound quality

Deep bass and crystal clear high notes



The wooden sub-woofer and two satellite speakers faithfully reproduce the full range of audio frequencies from deep bass to crystal clear high notes with the minimum of distortion. Your music, games, films and Internet on a PC or laptop will take a step up in quality and enjoyment.

**Your computer never sounded so good**

- Home audio quality on the PC

**Experience true multimedia**

- Music, games, films, internet
- For PC or Laptop

**Hear every detail**

- Subwoofer + satellite speakers
- Wooden subwoofer
- Bass Reflex Speaker System
- Digital Dynamic Bass Boost

**Easy to use**

- Quick set-up
- Magnetic Shielding



# PHILIPS

## Commercial Specifications

## Sound

• Bass enhancement	Digital Bass boost
• Output power (RMS)	2 x 3 + 6 W
• Total Music Power	24 W
• Volume Control	Analogue Volume Control
• Wires	Fixed Wires

## Loudspeakers

• Loudspeaker Enhancement	Magnetic Shielded LSB
• Satellite speaker freq range	200-20000 Hz
• Subwoofer freq range	20-200 Hz

## Connectivity

• Connector	3.5 mm stereo
• Cable length	2 m

## Convenience

• Power on indication	yes
-----------------------	-----

## Accessories

• Included Accessories	Quick install guide
------------------------	---------------------

## Power

• Power LED indicator	Blue
-----------------------	------

## Packaging data

• 12NC	9082 100 02914
• EAN	87 10895 81606 9
• Quantity	1
• Gross Weight	4.56 kg
• Tare Weight	0.36 kg
• Nett Weight	4.2 kg
• Length	35.6 cm
• Width	24.3 cm
• Height	24.7 cm

## Outer Carton

• EAN	87 10895 81608 3
• Quantity	2
• Gross Weight	9.2 kg
• Tare Weight	0.8 kg
• Nett Weight	8.4 kg
• Length	49 cm
• Width	36.5 cm
• Height	26.4 cm

## Product Highlights

## Home audio quality on the PC

Philips has used over 75 years experience at the leading edge of audio to create PC audio products with the same performance as our award-winning home audio systems.

## Music, games, films, internet

All types of music, games, films and internet audio sources can be played, so no matter what you want to hear, we make your multimedia experiences sound more involving than ever.

## Subwoofer + satellite speakers

The audio system is separated into a subwoofer that is optimized to reproduce bass frequencies and satellite speakers that are optimised for mid- and high-range frequencies. The result is a system that powerfully reproduces the full range of audio frequencies from deep bass to crystal clear high notes with the minimum of distortion.

## Wooden subwoofer

The housing of the subwoofer is made from wood, giving it superior stability and acoustical performance.

## Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Digital Dynamic Bass Boost

Digital Dynamic Bass Boost is an intelligent bass booster that delivers maximum bass enhancement at high volumes without sound distortion and at low volumes without compromising on bottom-end bass frequencies. Technologically advanced electronics constantly monitor volume and bass levels, precisely calibrating both to prevent sound distortion, thus producing optimized bass. Digital Dynamic Bass Boost enables the enjoyment of superb bass performance - regardless of the chosen volume level.

## Quick set-up


Color-coded cables, clear labelling and easy to understand documentation mean you'll be up and running in minutes.

## For PC or Laptop

Can be connected to either a PC or a laptop.

## Magnetic Shielding

Because the powerful magnets in speaker drivers are magnetically shielded, there's no danger of image distortion or damage when placed close to your PC monitor screen.

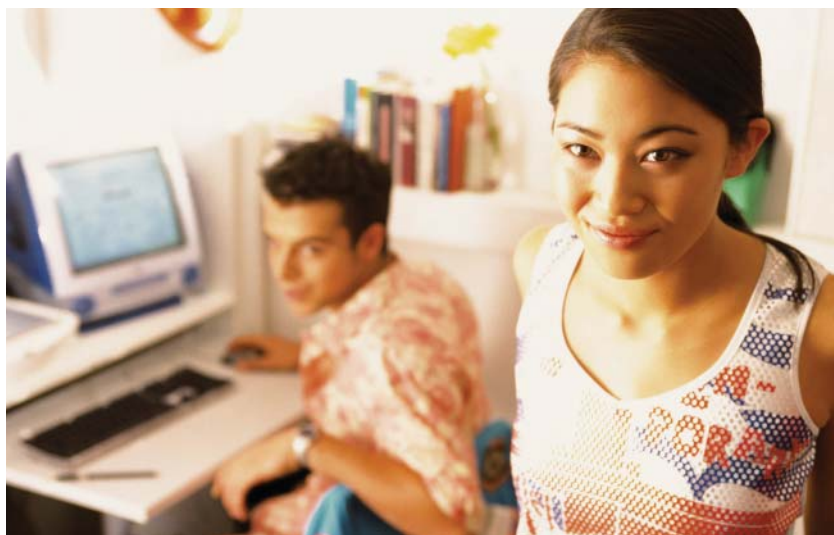

Date of issue: March 2004

Specifications are subject to change without notice

Trademarks owned by Royal Philips Electronics

2004 © Royal Philips Electronics - All rights reserved

[www.philips.com/pcstuff](http://www.philips.com/pcstuff)