



Philips
Clock Radio

Time projection

FM, Digital tuning
Dual alarm
Time & alarm backup



AJ5030



Wake up and beam

with a time projection

Enjoy the convenience of time shone onto any surface you like. Sharpen the image or flip it, so it is always clear and readable on wall or ceiling. This clock also automatically sets the time and offers melody, radio or buzzer as alarm.

Time projection with a style

- Flexible projection angle for easy viewing anywhere
- Adjustable focus for sharpest time projection
- Flip control to reverse projected image

Start the day your way

- Digital tuning with preset stations for extra convenience
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- Repeat alarm for additional snooze
- Wake up to melody, buzzer or radio

Easy to use

- Plug and set the time automatically
- Time and alarm backup for on-time wakeup even with power cut
- Adjustable display brightness for comfort viewing
- Sleep timer for easy falling asleep to your favorite music

PHILIPS

Highlights

Flexible projection angle

Have things your way with a clock that shines the time anywhere you want, thanks to a projection tube that has a flexible casting angle. The tube can be adjusted horizontally and vertically, with fine adjustment controls, so you can get the time image exactly where you want - on the wall, ceiling or piece of furniture. It lets you watch the time without even having to turn your head, and it looks simply great.

Adjustable focus

Get projected time images that are always sharp with an easy-to-use focus control. You can adjust the focus control to maintain a clear projected image range from 1 to 2.5 m. Enjoy clean and sharp projected images, and always have a clear view of time.

Flip control

This clock radio projects the time onto the wall or ceiling for your convenient viewing. With the Flip control feature, you can immediately rotate the projected time 180 degrees for easier viewing from anywhere in the room.

Plug and set

Take the clock out of its box, plug it in and the time is already set for you - automatically. The intelligent clock reads preprogrammed data and sets the correct time according to the default time zone. If you are living outside the default time zone, all you have to do is press the Time zone button and the clock will reset the time. No more reading manuals, no more fiddling with buttons.

Time and alarm backup

When there is a power failure, this intelligent clock will still maintain and keep its reliable time and your settings. The scheduled alarm remains active even when its display is off - all thanks to a pre-installed battery. When the power comes back on, there is no need to adjust the clock or reinstate settings. More amazingly, even if power supply is not restored, the battery provides enough energy for the buzzer to go off at the alarm time you have set - making sure you never wake up late.

Wake up to melody or buzzer



Have a great start to each day with your choice of wake up call. Have a buzzer or melody wake you - or opt for your favorite radio station to rouse you from slumber.


Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal

alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

Sleep timer

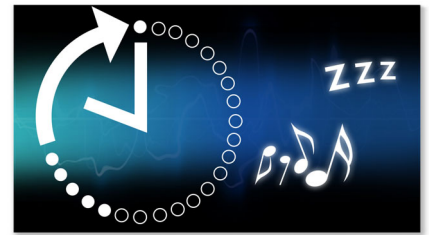

Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep, or worrying about wasting power

Specifications

Convenience

- Alarms: 24 hour alarm reset, Buzzer Alarm, Radio Alarm, Repeat alarm (snooze), Sleep timer
- Clock/Version: Digital
- Display Type: 4 digit display
- Clock Enhancements: Backup Clock

Tuner/Reception/Transmission

- Tuner Bands: FM

Sound

- Sound System: Mono
- Volume Control: rotary
- Output power (RMS): 600mW

Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

Dimensions

- Packaging type: D-box
- Product dimensions (W x H x D):
136 x 66 x 136 mm
- Gross weight: 0.6 kg
- Packaging dimensions (W x H x D):
215 x 159 x 94 mm

Power

- Number of batteries: 1
- Backup battery: CR2032 (included)
- Power supply: 110-240V



Issue date 2016-02-08

Version: 3.0.5

12 NC: 8670 000 71502
EAN: 87 12581 57953 1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com