



Philips  
Clock Radio

**Bluetooth®**  
Universal charging  
Dual alarm  
FM, Digital tuning



AJT5300W

## Enjoy wireless music and charge your smartphone

Start your day fully charged with AJT5300W. This clock radio doubles as a wireless speaker that streams music from any Bluetooth device. With the built-in cradles, it charges any smartphone, iPhone/Android, while you sleep

### Enrich your sound experience

- Wireless music streaming via Bluetooth
- FM digital tuning with presets
- Audio-in for portable music playback

### Easy to use

- USB port to charge any mobile device
- Built-in microphone for hands-free phone calls
- Sleep timer helps you to drop off to your favourite music
- Battery back-up ensures memory of time during power failure

### Start the day your way

- Wake up to your favourite radio tune or a buzzer
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant waking experience
- Repeat alarm for additional snooze

# PHILIPS


# Highlights

## Bluetooth



Bluetooth is a short-range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favourite music from any smartphone, tablet or laptop, including the iPod or iPhone, with a Bluetooth-enabled speaker.

## USB port

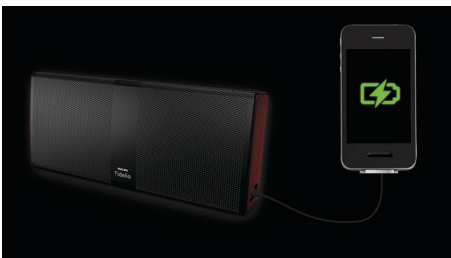

This speaker features a USB port. If your smartphone is running out of battery power either at home or on the go, this portable speaker allows you to transfer the battery power stored in the speaker to your mobile device.

## FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold

the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

## Audio-in



The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Sleep timer




Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically

switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep or worrying about wasting power

## Battery back-up


Battery back-up ensures memory of time during power failure

## Wake up to the radio or a buzzer

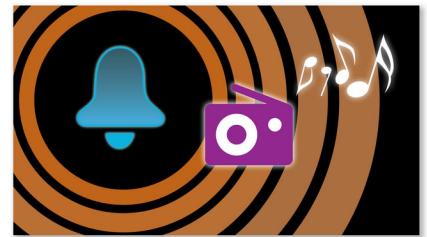

Wake up to sounds from your favourite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

## Dual alarm

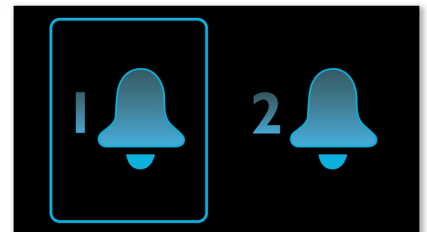

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

# Specifications

## Bluetooth® wireless technology

- Version: V2.1 + EDR
- Profiles: A2DP, HFP, AVRCP
- Range: 10 M (free space)

## Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

## Clock

- Type: Digital
- Display: LED
- Time format: 24 H

## Alarm

- No. of alarms: 2
- Snooze (repeat alarm): Yes, 9 mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Tuner/Reception/Transmission

- No. of preset stations: 20
- Antenna: FM antenna, FM Antenna
- Frequency range: 87.5 - 108 MHz
- Tuner Bands: Digital tuning, FM

## Convenience

- Volume control: Up/Down
- Alarms: Buzzer Alarm, Dual alarm time, Gentle Wake, Radio Alarm, Repeat alarm (snooze)
- Display brightness: High/ Mid/ Low
- Sleep Timer

## Connectivity

- Audio in (3.5 mm)
- Microphone: Built-in microphone

## USB Charging

- Yes
- 5 V, 1 A

## Power

- Power type: AC Input
- Standby power consumption: < 1 W
- Battery type: AA
- Number of batteries: 2
- Backup battery: AA (not included)
- Power supply: 100-240 VAC, 50/60 Hz

## Dimensions

- Packaging type: D-box
- Product dimensions (WxDxH): 182 x 111 x 100 (7.2" x 3.2" x 3.4") mm
- Packaging dimensions (WxDxH): 206 x 115 x 110 mm (9.2" x 3.7" x 3.8")
- Gross weight: 0.6 kg
- Net weight: 0.5 kg

## Accessories

- Quick start guide
- Warranty: Warranty leaflet

## Charging

- USB devices: 5 V

## Loudspeakers

- Built-in speakers: 1



Issue date 2022-05-15

Version: 3.1.6

12 NC: 8670 001 35257  
EAN: 69 51613 99080 3

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)