



Philips Fidelio
wireless portable speaker

Bluetooth



P9BLK

High-fidelity sound made portable

Obsessed with sound

The Philips Fidelio wireless speaker is high performance and portable. It gives great, clear, dynamic sound and is perfect to use at home or on the go. With wireless music streaming via Bluetooth, it gives you fuss-free musical enjoyment.

Peerless sound quality

- Soft dome tweeters for wide and natural sound
- Woofers and wOOx technology for solid, amazingly deep bass
- Optimised crossover filter for a very natural tonal balance
- High-performance amplifier for great loudness and dynamics

Designed to go places

- Premium design in natural wood and aluminium
- Built-in rechargeable Li-ion battery for playback anywhere

Advanced versatility


- Wireless music streaming via Bluetooth
- USB port to charge any mobile device
- Battery level shows automatically when speaker is touched
- Audio-in for easy connection to almost any electronic device

PHILIPS
Fidelio

sense **and** simplicity

Highlights

Soft dome tweeters

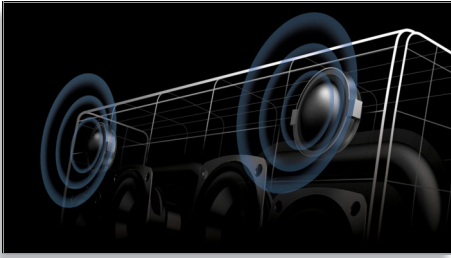

Thanks to the use of soft dome tweeters, high frequencies are very detailed and precise. This is a technology pioneered by Philips in the 1960s and that since then has been used in the vast majority of high-end loudspeaker boxes. The very open spatial presentation also owes a great deal to these tweeters, which are characterised by very low directivity and distortion; compared to systems using only full-range drivers, the sound is wide and natural, from any position in the listening area.

Woofers and wOOx technology

Despite a very compact acoustic volume, the bass is solid and surprisingly deep, making it possible to enjoy all types of music. This is achieved by using a combination of two high-power woofers and one large area passive radiator per channel, all within a very stiff enclosure that does not lose any bass energy. The large moving mass of the passive radiator makes it possible to tune the system to a very low frequency of 80 Hz, while preventing air turbulence that would otherwise appear with a ported design. Feel the rhythm of the music — don't miss a beat.


Optimised crossover filter

Our acoustics engineers spent days and nights optimising the crossover filter to make sure that the sound remains as natural as possible, in very different acoustic environments. From small rooms to open space, from soft listening levels to maximum volume, voices are clear and natural, and the sound is neither aggressive nor tiring, even at loud listening levels. So you can listen for hours and keep on wanting to listen to more of your favourite music.

High-performance amplifier

Loudness and dynamics are great, thanks to a high-performance amplifier coupled with 8 high-efficiency transducers. The tweeters and woofers have both been tailored to this unique product and have a high force factor, resulting in sound that is dynamic and impressive at all listening levels. Music is lively, dynamic and simply enjoyable in any circumstances.

Wireless music streaming

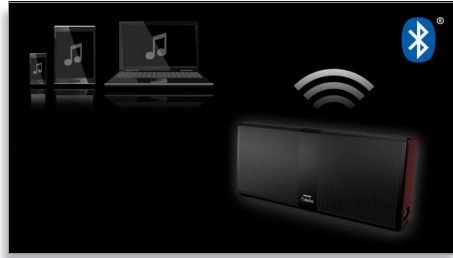


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily enjoy your favourite music, sound from video or game wirelessly on this speaker.

USB port



This speaker features a USB port. If your smartphone is running out of battery power either at home or on the go, this portable speaker allows you to transfer the battery power stored in the speaker to your mobile device.

Battery level

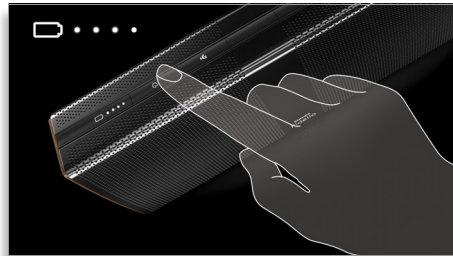

Just touch the speaker lightly and it will display the battery level.

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets and smartphones
- other Bluetooth-enabled device

Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: 2 x 3/4" soft dome tweeter, 4 x 2" full-range woofer
- Output power (RMS): 20 W

Accessories

- Included accessories: AC-DC Adapter, Quick install guide, Warranty certificate, World Wide Warranty leaflet

Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- USB charging

Dimensions

- Product dimensions (WxDxH): 287 x 63 x 127 mm
- Packaging dimensions (WxDxH): 326 x 101 x 224 mm

Power

- Power supply: 100-240 VAC, 50/60 Hz
- Battery type: Li-ion (built-in)
- Operating time on battery: 8 hr



Issue date 2013-04-08

Version: 7.0.4

12 NC: 8670 000 96384
EAN: 08 71258 16628 20

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com