

Philips  
DVD player with USB

DivX playback

DVP3266X



## Enjoy DVD and USB video

with DTS Digital Surround

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Brings audio and video to life

- 192 kHz/24-bit audio DAC enhances analogue sound input
- 5.1 channel audio output for surround sound
- Progressive Scan component video for optimised image quality
- 12-bit/108 MHz video processing for sharp, natural images
- DTS Digital Surround for multi-channel surround sound

### Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

### Plays all your movies and music

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays DivX, MP3, WMA and JPEG digital camera photos
- DivX Certified for standard playback of DivX videos

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives


**PHILIPS**  
sense and simplicity

DVD player with USB  
DivX playback

DVP3266X/94


# Highlights

## 192 kHz/24-bit audio DAC

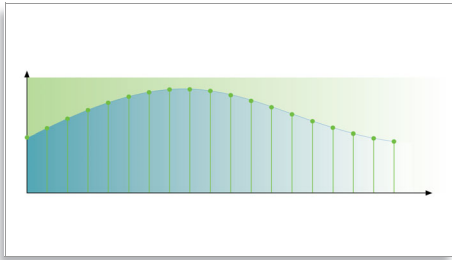


192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## 5.1 channel audio output

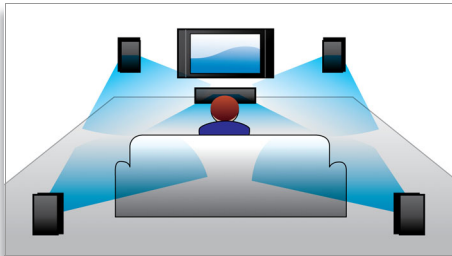

5.1 channel audio output for surround sound


## Plays it all

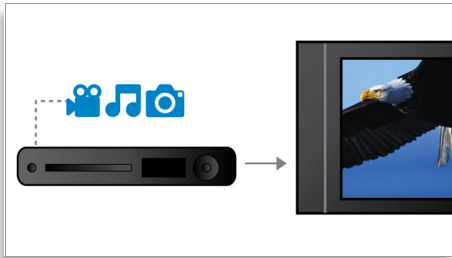

Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG.

Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

## Progressive Scan

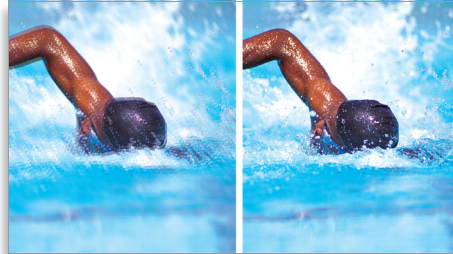

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.


## One-touch MP3 creation



Convert the contents of your favourite CDs to MP3 files on your Philips product and store them directly on a thumb drive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files


right in your living room, without a PC and even while the CD is playing.

## DTS Digital Surround

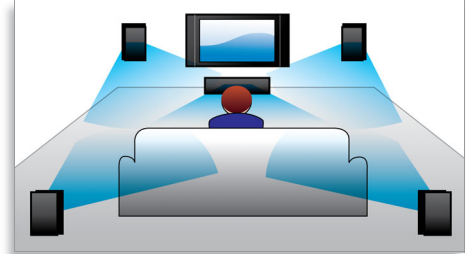

DTS delivers superior surround sound with your DVD movies.

## Hi-Speed USB 2.0 Link

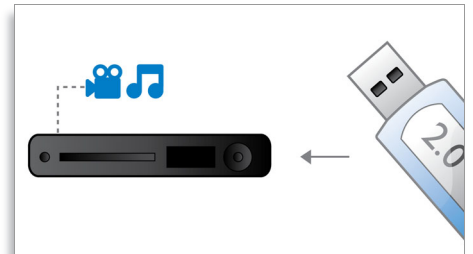

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: >90 dB
- Distortion and Noise (1 kHz): >65 dB
- Crosstalk (1 kHz): >70 dB
- Dynamic Range (1 kHz): >80 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture compression format: JPEG
- Picture enhancement: Flip photos, Rotate, Zoom, Slideshow

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Digital coaxial out, Composite video (CVBS) output, ComponentVideo out Progressive, Analogue audio multi-channel out
- Front/Side connections: USB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1 W

## Accessories

- Included Accessories: Audio/Video cable, 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User Manual

## Dimensions

- Set dimensions (W x H x D): 360 x 37 x 210 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm



Issue date 2009-06-16

Version: 1.0.4

12 NC: 8670 000 36298  
EAN: 87 12581 38915 4

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)