




Philips
Clock radio for iPod/
iPhone

MP3 Link

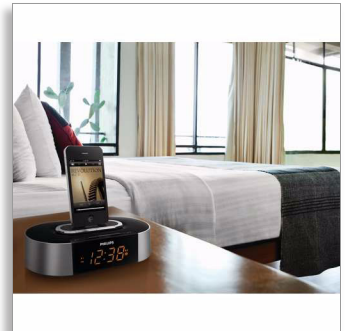

AJ7030D



Wake up to your iPod/iPhone music

Rise and shine to your favourite tunes from your iPod/iPhone or FM with the dashing Philips Clock radio that will brighten your room—and mornings! Its smart dock lets you charge your devices without the need to remove its protective casing.

Enrich your sound experience

- Play and charge your iPod/iPhone simultaneously
- FM digital tuning with presets
- Neodymium speaker driver for rich and clear sound
- 6 W RMS total output power

Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronisation with iPod/iPhone when docked
- MP3 Link for portable music playback
- Time and alarm backup to wake up on time even with power cut
- Sleep timer helps you to drop off to your favourite music

Start the day your way

- Wake up to your iPod/ iPhone music or radio tunes
- Gentle wake for a pleasant waking experience
- Dual alarm to wake you and your partner at different times

PHILIPS
sense and simplicity

Specifications

iPod compatibility

- Compatible with: iPod mini, iPod with colour display, iPod 5th Generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod touch, iPod touch 2nd Generation

Tuner/Reception/Transmission

- Tuner Bands: FM
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

Audio Playback

- Cradle playback mode: Charging iPod, Play and Pause, Next and Previous track

Convenience

- Clock/Version: Digital
- Alarms: 24-hour alarm reset, Buzzer Alarm, Radio Alarm, Repeat alarm (snooze), Sleep timer
- Adjustable display brightness
- Quartz-controlled

Sound

- Sound System: Stereo
- Output power (RMS): 2 x 3 W
- Volume Control: Volume Control up/down

Loudspeakers

- Built-in speakers: 2
- Neodymium magnet system

Connectivity

- MP3-Link: 3.5 mm stereo input

Dimensions

- Product dimensions (W x H x D): 144 x 144 x 62 mm
- Product weight: 0.5 kg
- Weight incl. Packaging: 0.9 kg

Accessories

- Included accessories: 3.5 mm stereo line-in cable, AC-DC Adapter, Quick Use Guide, User Manual, World Wide Warranty leaflet

Power

- Power supply: 100-240 VAC, 50/60 Hz



Highlights

Dock iPod/iPhone in its case




Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Play and charge your iPod/iPhone

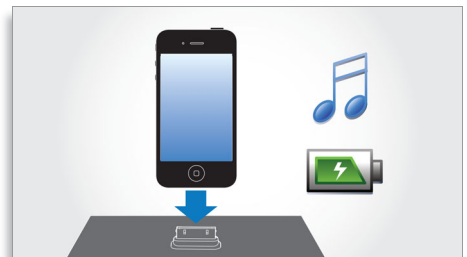

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.



Issue date 2012-06-28

Version: 6.0.10

12 NC: 8670 000 75013
EAN: 87 12581 59724 5

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com