




Philips
DVD Micro Theater

HDMI

wireless subwoofer wall-mountable

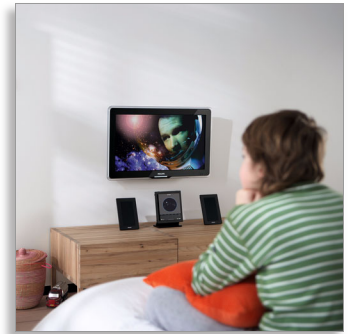

MCD289

Super-sleek wall-mountable theater

with wireless subwoofer

Enhance movie and music playback with the MCD289 and experience easy and clutter-free installation via a digital wireless subwoofer. It plays DVD, DivX, USB and other media. Comes with table-top and wall-mount options.

Enrich your movie experience

- Play DVD, DivX®, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Dolby Digital for ultimate movie experience
- 12-bit/108MHz video processing for sharp, natural images

Enrich your sound experience

- Digital wireless active subwoofer for powerful bass
- View photos and listen to music directly from USB devices
- Class 'D' digital amplifier for quality sound performance
- Digital Sound Control for optimized music style settings
- Loudness for bass and treble enhancement
- Dynamic Bass Boost for deep and dramatic sound
- Total 100W RMS


Design that blends into your interior

- Stylish slim design with table-stand and wall-mount options

PHILIPS
sense and simplicity

Highlights

Dolby Digital

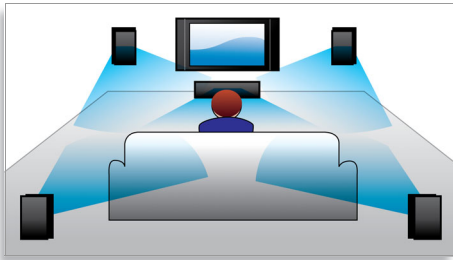

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

USB Direct plays photos/music

Simply plug in your USB device on the system and share your stored digital music and photos with your family and friends.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls

you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

12-bit/108MHz video DAC



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.



12-bit
Video DAC



Specifications

Sound

- Output Power: 2x20W RMS+ 60W
- Output power (RMS): Total 100W RMS
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost, Loudness, Class "D" Digital Amplifier
- Sound System: Dolby Digital

Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 3" woofer
- Subwoofer type: Active

Video Playback

- Playback Media: DivX, DVD-Video, Video CD/ SVCD, Picture CD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Zoom, Parental control, Disc Menu, Fast Backward, Fast Forward, OSD, Slow Motion, Resume Playback from Stop
- DVD Region: 2
- Loader Type: Slot

Still Picture Playback

- Picture compression format: JPEG
- Picture enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable, Fast Forward/Backward, Next/Previous Track Search
- ID3-tag support
- Loader Type: Slot
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning

- RDS: Station Name, RDS Clock Set, Program Type, Radio Text
- Station presets: 20
- Tuner Enhancements: Auto Store

Connectivity

- Aux in: 3.5 mm
- Headphone: 3.5 mm
- Other connections: FM Antenna, Digital audio coaxial out, AV out
- Video Output - Analog: S-Video (on Hosiden), Component Y Pb Pr (cinch)
- USB: USB host

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Display Type: VFD display
- OSD Languages: English, Portuguese, Spanish, Dutch, French, German, Italian, Swedish, Turkish
- Indications: DIM mode
- Wall mountable / Ceiling Throw: Wall Mountable
- Eco Power Standby: 1 watt

Accessories

- Included Accessories: FM antenna, Audio/Video cable, Scart adapter, World Wide Warranty leaflet
- Remote control: 47-key with 2xAAA batteries
- User Manual: 16 languages
- Quick start guide: English, German, Dutch, French, Spanish, Italian

Dimensions

- Set dimensions (W x H x D): 200 x 250 x 110 mm
- Main speaker dimensions (W x H x D): 140 x 220 x 33 mm
- Packaging dimensions (W x H x D): 480 x 368 x 224 mm
- Subwoofer dimensions (W x H x D): 170 x 197 x 302 mm
- Weight incl. Packaging: 8 kg

Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2009-06-12

Version: 2.0.7

12 NC: 8670 000 36125
EAN: 87 12581 38769 3

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com