

Philips  
docking speaker



DS8550

## Sound that fits your home

Obsessed with sound

Get more out of your music, gaming and video experience now. Smart and chic, this docking speaker delivers stunning sound from your iPod, iPhone or iPad, and ensures convenience with a built-in rechargeable battery and Bluetooth streaming.

### Exceptional sound performance

- Superb gaming sound effects via Bluetooth
- Pure digital processing technology for best sound clarity
- Optimal acoustic volume to match speakers' requirements
- Precisely tuned bass pipes for deep, tight bass reproduction

### Chic and classy

- SoundCurve for superb crystal-clear sound
- Great look with or without iPod/iPhone docked

### Advanced flexibility and control

- Built-in rechargeable battery for even better portability
- Comfortable hand grip for easy relocation
- Dock any iPod/iPhone, even in its case
- Free DockStudio app for Internet radio and other cool features
- Video stand for hands-free iPad movie enjoyment



# PHILIPS

# Specifications

## iPad compatibility

- Compatible with: iPad

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

## iPod compatibility

- Compatible with: iPod, iPod mini, iPod with colour display, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod classic, iPod touch, iPod nano 1st Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod touch 2nd Generation, iPod touch 2nd Gen 8/16/32 GB, iPod 5th Generation, iPod nano 6th generation

## iPod/iPhone App

- App name: DockStudio
- Free download from App store
- Compatibility: iPhone OS 3.0
- Playback: Album/track navigation, Playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: Analogue display, Digital display
- Alarm: Multiple alarms, Sleep timer, Wake up to music, Wake up to nature sounds, Wake up to photos
- Battery status: Speaker battery status

## Connectivity

- Bluetooth
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Aux in

## Audio Playback

- Cradle playback mode: Charging iPhone, Charging iPod, Play and Pause, Next and Previous track

## Sound

- Output power (RMS): 2 x 15 W
- Sound System: Stereo
- Loudspeaker types: Bass Reflex Speaker System
- Volume Control: Volume Control up/down

## Loudspeakers

- Speaker Drivers: 2 x 3" full range woofers

## Convenience

- Backlight
- Remote Control: Multi-functional

## Power

- Power supply: 100-240 VAC, 50/60 Hz, Battery
- Battery Type: Built-in battery
- Operating time on battery: 5 hr

## Accessories

- Included accessories: AC Power Cord, Remote Control, 3.5 mm stereo line-in cable, Warranty certificate, World Wide Warranty leaflet, Quick install guide, User Manual

## Dimensions

- Product dimensions (W x H x D): 421 x 158 x 139 mm
- Packaging dimensions (W x H x D): 484 x 220 x 158 mm



# Highlights

## Pure digital sound




Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analogue audio processing technology that is found in docking players that use the analogue audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

## Built-in rechargeable battery

Built-in rechargeable battery for even better portability

## SoundCurve

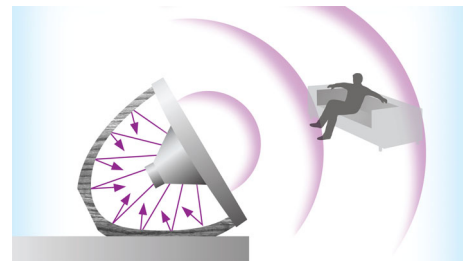

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning-looking speakers.

## Optimal acoustic volume

Smart sound design brings you the best bass reproduction possible. The acoustic volume allocated to each midrange driver perfectly matches its acoustic requirements. Low tones come out deep and tight – delivering strong and rich bass.

## Superb gaming sound effects

The gaming experience isn't complete without great sound effects. Now, your games on a Smartphone or any other portable device can be made even more thrilling, thanks to Philips docking speaker that puts the boom in the sound. Hear all the sounds loud and clear, and boost your experience to new levels. What's more, you can do this with outstanding convenience, via Bluetooth. Simply establish a wireless Bluetooth connection between your portable device and the docking speaker, and play away.

## Video stand for iPad

Video stand for hands-free iPad movie enjoyment



Issue date 2017-04-07

Version: 7.1.7

12 NC: 8670 000 66892  
EAN: 87 12581 55964 9

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)