



Philips  
5.1 Home theater

Smart TV  
3D Blu-ray



HTS3583

## Powerful surround sound

### With Blu-ray 3D

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful 600W surround sound and immersive 3D Blu-ray Disc playback.

#### **Great listening experience**

- Exposed speaker drivers for powerful surround sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 600W RMS power delivers great sound for movies and music

#### **Connect and enjoy all your entertainment**

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Optional WiFi accessory to wirelessly connect to internet
- Smart TV to enjoy online services & access multimedia on TV
- DivX Plus HD Certified for high definition DivX playback
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- Optional dock for convenient playback from your iPod/iPhone
- Turn your Smartphone into a remote for Philips AV products

#### **Designed to enhance your cinema at home**

- Modern design to complement your home environment

# PHILIPS

# Highlights

## 600W RMS power




600W RMS power delivers great sound for movies and music

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Dolby TrueHD and DTS-HD

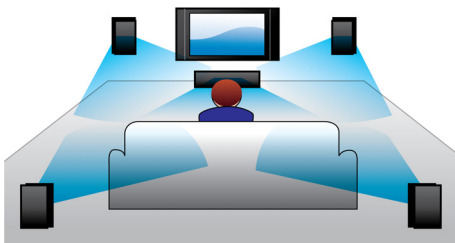

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so

you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Smart TV



Philips home theater & Blu-ray player with Smart TV offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

## Optional WiFi accessory

Optional WiFi accessory to wirelessly connect to internet

## Optional dock



Attach this dock to your home theater system and you can enjoy your music, videos and pictures from your iPod devices and iPhone. Dock is sold as an optional accessory.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



# Specifications

## Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, STS3001 Speaker stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

## Connectivity

- Front Connections: Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- Smart TV: Net TV, MyRemote

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.4 kg
- Center Speaker (W x H x D): 159 x 84.5 x 80 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm
- Front Speaker Weight: 0.35 kg

- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (WxHxD): 240 x 1007 x 240 mm
- Rear Speaker Weight: 1.6 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 160 x 267.5 x 265 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 2.5 kg
- Packaging (W x H x D): 905 x 261 x 377 mm
- Weight incl. Packaging: 11.6 kg

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 1 x 2.5" woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Drivers per Tallboy speaker: 1 x 2.5" woofer
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 110 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 100 W
- Satellite speaker output power: 2 x 100 W
- Tallboy speaker output power: 2 x 100 W
- Subwoofer output power: 100 W
- Total Power RMS @ 30% THD: 600 W

## Sustainability

- Packaging: Electronic User Manual

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2015-09-03

Version: 1.1.1

12 NC: 8670 000 99056  
EAN: 87 12581 67325 3

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)