




Philips
wireless portable speaker

10 W, 10 hr

Long Bluetooth range
Waterproof, dustproof
Quick charge option

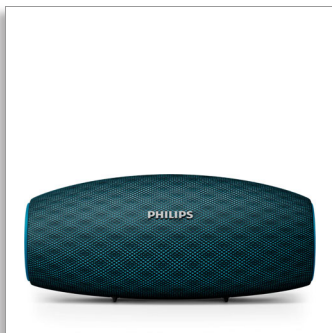

BT6900A

Music never stops

My music never stops. EverPlay wireless portable speaker keeps playing all the time without interruption thanks to the strong Bluetooth connection and intuitive charging options. Its custom fabric makes it beautiful as well as super durable

Intuitive charging

- Quick-charge recharges speaker 3 times faster
- Battery indicator to easily view power level
- USB cable doubles as a strap

Strong Bluetooth connection

- Wireless music streaming via Bluetooth
- Strong Bluetooth connection up to 30 m or 100 ft
- Built-in microphone for hands-free phone calls

Powerful sound

- Bass radiators for extra bass boost and extension
- Big sound from front-firing neodymium speaker
- Anti-clipping function for loud, distortion-free music

Super durability

- Durable build – shockproof, dustproof and waterproof (IP57)
- High-performance DuraFit fabric

PHILIPS

wireless portable speaker
10 W, 10 hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

Highlights


Front-firing speaker

EverPlay speaker makes no compromises when it comes to quality sound. With a front-firing neodymium driver, it delivers clear, natural, powerful sound with deep and rich bass. Perfect for any style of music, whether you're playing it outdoors or indoors

Bass radiators


EverPlay speaker gives powerful sound from a compact form factor, with the help of a large bass radiating area. It delivers extra bass boost and extension.

Anti-clipping function

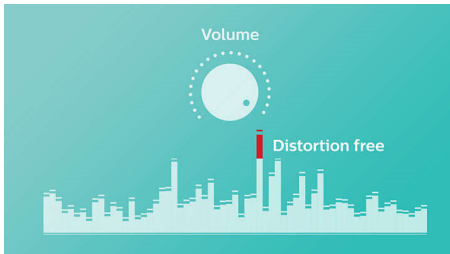

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.


Wireless music streaming

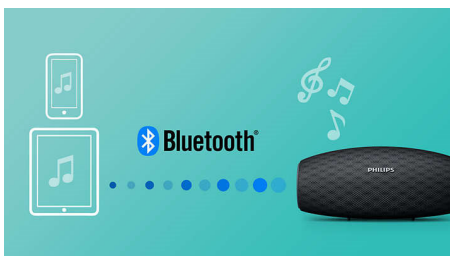

Bluetooth is a wireless communication technology that is both robust and energy-

efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily enjoy your favourite music and sound from videos or games wirelessly on this speaker.

30 m Bluetooth range

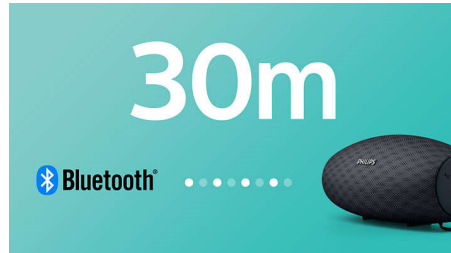

Move freely around with your smart phone, without worrying about dropping your music. EverPlay speaker offers an incredibly stable and long range Bluetooth connection up to 30 metres or 100 feet, three times faster than industry standards. The speakers are equipped with a sensitivity antenna and radio frequency filter to minimise background interference.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Quick charging




Charging the speaker usually takes quite some time. EverPlay offers a quick-charge option that can recharge the speaker three times faster than a normal USB adapter. By using a Qualcomm Quick-Charge adapter (not included), which is commonly used in new

BT6900A/00

Android phones, to charge the speaker, the charging time is much faster.

Battery indicator

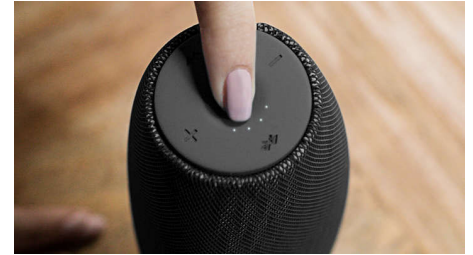

Finally, a Bluetooth speaker that provides a simple, clear way to see how much remaining power you have! With EverPlay, simply push the power button to see how much battery is left.

USB strap

Recharging has never been so easy. When the power starts to run low, use the handy two-in-one strap-USB charging cable. Plug it in for power, or use it to attach the speaker to a bag for easy portability.

Durable build



EverPlay speaker is super durable and features dust, shock and water resistance. Dust cannot interfere with the operation of the speaker. And it is able to withstand immersion in water up to 1 metre for up to 30 minutes. This means that a session in the shower, getting caught in the rain or a quick drop into a body of water will not cause damage. Under Shockproof designation, this product is tested in a "Torture Chamber" to undergo a roller swing test with simulated 5-year product life-time reliability. EverPlay is truly durable!

wireless portable speaker
10 W, 10 hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

BT6900A/00

Specifications

Sound

- Output power (RMS): 10 W
- Sound System: Mono

Design and finishing

- Colour: Blue

Loudspeakers

- Speaker driver: 1 x 2" full range driver and 1 x 2" passive radiator

Connectivity

- Audio Connections: 3.5 mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 30 m or 100 ft

Convenience

- Water resistance: IPX7
- Built-in microphone: for speaker conference
- Dustproof

Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus
- other Bluetooth-enabled device

Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 10 hour(s)

Accessories

- Included accessories: USB cable for PC charging, Quick install guide

Dimensions

- Weight incl. Packaging: 0.488 kg
- Product dimensions (WxDxH): 160 x 71 x 72 mm
- Packaging dimensions (WxDxH): 175 x 122 x 94 mm
- Product weight: 0.313 kg



Issue date 2024-03-24

Version: 7.5.5

EAN: 48 95185 62865 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com