



## Enjoy music from your iPod/iPhone

Built-in with Bass Reflex speakers, this docking speaker delivers rich, deep bass and powerful sound. Its smart dock lets you charge your iPod/iPhone without the need to remove its protective casing.

### Crystal clear sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Shielding technology to block mobile phone interference
- 8W RMS total output power

### Enjoy your favorite music

- Play and charge your iPod/iPhone simultaneously
- MP3 Link for portable music playback


### Advanced versatility

- Dock any iPod/iPhone, even in its case
- Auto clock synchronization with iPod/iPhone when docked
- Compact design for any space, any lifestyle

Philips  
docking speaker

for iPod/iPhone

Clock display

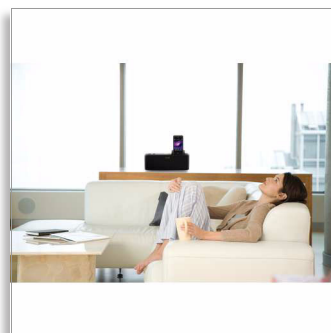

AD345

**PHILIPS**  
sense and simplicity

# Highlights

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Auto clock synchronization



When connect and dock, this docking system will automatically synchronize the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.



## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

# Specifications

## iPod compatibility

- Compatible with: iPod mini, iPod nano, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation, iPod 5th generation, iPod 6th Generation, iPod with color display

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

## Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 8 W RMS

## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Power supply: 100 - 240V AC, 50/60Hz

## Accessories

- AC/DC Adaptor

## Convenience

- Charging device: iPod, iPhone
- Display Enhancements: Brightness Control
- Auto clock synchronization

## Dimensions

- Product dimensions (WxDxH): 265 X 74 X 94 mm
- Packaging dimensions (WxDxH): 354 x 108 x 127 mm
- Product weight: 0.9 kg
- Weight incl. Packaging: 1.4 kg



Issue date 2013-01-22

Version: 2.0.9

12 NC: 8670 000 91153  
UPC: 6 09585 22724 8

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)