

Philips Fidelio  
SoundRing wireless  
speaker

with AirPlay



DS3881W

## Surround yourself with natural, immersive sound

### Obsessed with sound

Fill your room to capacity with wonderfully natural and immersive sound. This Philips Fidelio SoundRing wireless speaker takes music wirelessly from your iPod Touch, iPhone, iPad and computer's iTunes - and delivers it to your entire room.

#### Crystal clear sound

- SoundRing for all-around sound from a compact device
- FullSound enhances sound detail for rich and powerful sound
- 16W RMS total output power

#### Elegant and contemporary

- A truly distinctive design to complement your lifestyle
- 360-degree design for gorgeous look from any angle

#### Advanced versatility

- Stream music with AirPlay wireless technology
- Play and charge your iPod/iPhone/iPad via USB port
- AUX-in for easy connection to almost any electronic device
- Built-in rechargeable battery for even better portability


#### Intuitive control

- SoundStudio app for complete control of audio settings

**PHILIPS**  
Fidelio


# Highlights

## SoundRing

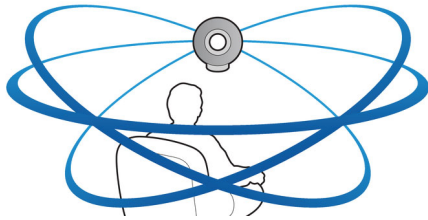

A truly distinctive design and engineered to provide room-filling sound. It comprises a central bass sound pipe and four high definition drivers - two front-firing and two side-firing drivers powered by Neodymium magnets, to radiate sound all around, for a great clarity throughout the whole room.

## FullSound™

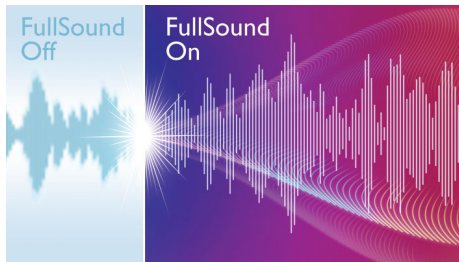


Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

## AirPlay wireless technology




AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

## SoundStudio App

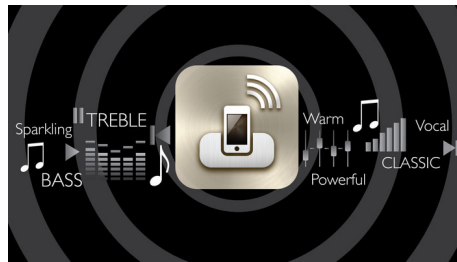

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

## Play & charge iPod/iPhone/iPad

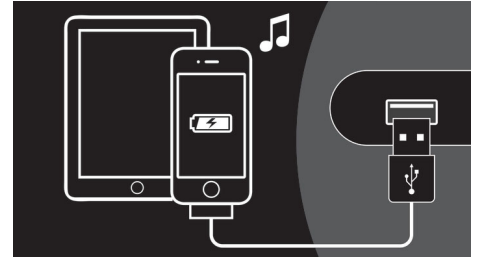

This speaker comes with a USB port, allowing you to conveniently charge your iPod, iPhone, iPad. Simply connect your Apple device with its USB cable to the back of the speaker. You can play any music from your Apple device whilst it is charging.

## AUX-in connection



The AUX-in connection allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the speaker, AUX-in connection is also extremely convenient as all you have to do is to plug your portable MP3 player to the speaker.

## Built-in rechargeable battery

For greater convenience in the same elegant style, this SoundRing can be charged on the stand supplied. Just dock the speaker on it to enjoy more hours of listening pleasure.



# Specifications

## Compatibility

- Compatible with: all iPod, iPhone and iPad

## iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

## Loudspeakers

- Speaker drivers: 4x1.5"/4cm full-range driver
- Output power (RMS): 16W

## Accessories

- Included accessories: AC-DC Adapter, Charging base, 3.5mm stereo line in cable, Warranty certificate, World Wide Warranty leaflet, Quick start guide
- User Manual: in CD

## Connectivity

- AirPlay
- Aux in
- USB: for playing and charging iPod/iPhone/iPad

## Dimensions

- Product dimensions: (WxDxH) 197 x 114 x 211 mm
- Packaging dimensions (WxDxH): 237 x 229 x 176 mm
- Product weight: 1.5 kg
- Weight incl. Packaging: 1.88 kg

## Power

- Power supply: 100-240VAC, 50/60Hz
- Operating time on battery: 3 hr (Airplay), 6 hr (Aux-in, USB)



Issue date 2020-07-09

Version: 4.3.4

12 NC: 8670 000 82161  
EAN: 00 60958 52200 96

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)