

Philips
Wireless noise-cancelling
headphones

32 mm drivers/closed-back

On-ear
Soft ear cushions
Compact folding



SHB8750NC

More sound, less noise wirelessly

No wires, no noise and no compromise. Immerse yourself in music with advanced ActiveShield™ active noise cancelling technology. Connect wirelessly with NFC one-tap pairing, enjoy music and manage calls with smart control on earpads.

Art of Noise Cancellation

- ActiveShield™ noise cancelling reduces noise by up to 97%

Clear and natural sound

- 32mm neodymium speaker drivers deliver precision sound
- High-quality Bluetooth 4.0
- Soft ergonomic cushions for long wearing comfort

Make life more convenient

- Convenient hands-free calling with mic and Bluetooth® 4.0
- Control calls, music and volume with ear-shell switches
- Simple NFC one-tap pairing
- Rechargeable battery offers up to 16 hours of wireless music
- Multi-point plays music and calls on two devices at once
- Activate Siri and Google Now with a press-on earcan button
- Extra audio cable means music can continue without power
- Compact folding for easy carrying and storage

PHILIPS

Wireless noise-cancelling headphones
32 mm drivers/closed-back On-ear, Soft ear cushions, Compact folding

SHB8750NC/00

Highlights

32 mm high-definition drivers



Finely tuned 32 mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide an excellent and impressive precision sound.

ActiveShield™



ActiveShield™ active noise-cancelling technology features two feed-backward microphones used for cancelling low frequencies. It detects ambient noise and inverts the sound wave, effectively cancelling it out and converting background noise to silence.

Compact folding



The compact, foldable design makes it the perfect on-the-go companion.


Extra audio cable included

Unlike most noise-cancelling headphones, the headphones work with or without battery to consistently deliver excellent audio in any environment. If the battery runs out, simply plug in the audio cable and continue enjoying your favourite music.

Hands-free calls

Convenient hands-free calling with mic and Bluetooth® 4.0

Multi-point

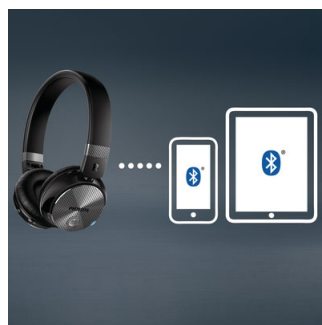


Multi-point allows you to connect your Philips Bluetooth headphones with two Bluetooth-enabled devices simultaneously. Simply pair up the two devices to enjoy movies and music while effortlessly taking calls in between.

Rechargeable battery

Enjoy 16 hours of continuous music playback even with Bluetooth and active noise-cancelling on, 28 hours when only Bluetooth is on and 33 hours when only ANC is on.

Simple NFC pairing

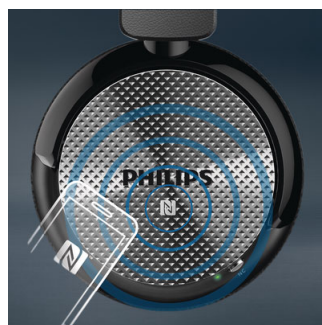

Simple NFC pairing lets you connect your Bluetooth® headphones with any Bluetooth-enabled device – with just a single touch.

Button controls



Button controls on the right ear shell enable you to control music and calls with a press.

Soft ergonomic cushions



Soft ergonomic cushions for long wearing comfort

Works with Siri/Google Now

Compatible with Siri and Google Now, the latest Philips Bluetooth headphones make using your virtual assistant even easier. All you need is a press on the earcan button to activate Siri on iPhone or Google Now on Android devices.

Bluetooth 4.0



Enjoy high quality wireless sound with Bluetooth 4.0.

Specifications

Design

- Colour: Black

Sound

- Frequency range: 10–22 000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 30 mW
- Sensitivity: 105 dB
- Speaker diameter: 32 mm
- Acoustic system: Closed
- Diaphragm: PET

Connectivity

- Audio Connections: 3.5 mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth version: 4.0
- Maximum range: Up to 10 m
- Cable Connection: single sided
- Finishing of connector: Gold-plated
- Cable length: 1.2 m
- Connector: 3.5 mm stereo

Accessories

- Audio cable: Extra 1.2-m audio cable
- Quick start guide: Included
- USB cable: Included for charging

Convenience

- Call Management: Answer/End Call, Reject Call, Microphone mute, Call on Hold, Switch between call and music, Switch between 2 calls
- Volume control

Power

- Battery Type: Li-Polymer
- Rechargeable
- Music play time: 16* hr

- Standby time: 45* hr
- Talk time: 15* hr

Outer Carton

- Gross weight: 2.260 lb
- Gross weight: 1.025 kg
- GTIN: 1 69 25970 71097 5
- Outer carton (L x W x H): 20.3 x 16.2 x 21.6 cm
- Outer carton (L x W x H): 8.0 x 6.4 x 8.5 inch
- Net weight: 1.362 lb
- Net weight: 0.618 kg
- Number of consumer packages: 3
- Tare weight: 0.407 kg
- Tare weight: 0.897 lb

Packaging dimensions

- Packaging dimensions (W x H x D): 19.4 x 19.9 x 5 cm
- Packaging dimensions (W x H x D): 7.6 x 7.8 x 2.0 inch
- EAN: 69 25970 71097 8
- Gross weight: 0.297 kg
- Gross weight: 0.655 lb
- Net weight: 0.454 lb
- Net weight: 0.206 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.201 lb
- Tare weight: 0.091 kg
- Type of shelf placement: Both

Product dimensions

- Product dimensions (W x H x D): 6.3 x 7.1 x 1.5 inch
- Product dimensions (W x H x D): 16 x 18 x 3.8 cm
- Weight: 0.386 lb
- Weight: 0.175 kg



Issue date 2020-07-17

Version: 3.0.4

12 NC: 8670 001 38166
EAN: 69 25970 71097 8

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Actual results may vary