

Philips
Classic micro music system

• Tape

MC147



Obsessed with sound

Relax with great music

Tune in to superb sound from a surprisingly compact design. The Philips classic micro music system will enhance your living space while enriching your music listening experience. Just press Play to enjoy room-filling, dynamic bass sounds.

Enrich your sound experience

- Play CD, CD-R and CD-RW
- Dynamic Bass Boost for deep and dramatic sound
- Autostop cassette deck
- 4 W RMS total output power

Start the day your way

- Wake-up and sleep timer functions
- Digital tuning with preset stations for extra convenience

Fits any space, any lifestyle

- Handy remote control for extra convenience

PHILIPS

Highlights

Play CD, CD-R and CD-RW




Philips is known for making products which are compatible with many discs available in the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. A single CD can store up to 10 hours of music. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Autostop cassette deck

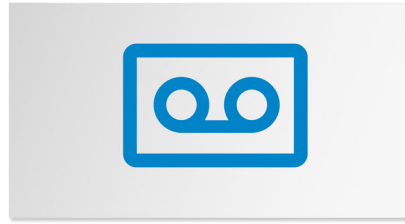

Autostop cassette deck

4 W RMS



This system has a 4 W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.


Wake-up and sleep timer



Many alarm clocks feature a variety of alarm choices. This Philips Clock radio wakens you with the radio or the traditional alarm buzzer.

The Sleep Timer allows you to programme the required length of time for the music to coincide with how long you normally take to fall asleep. No matter what your alarm clock needs, whether it's a morning buzzer that produces a steady tone, or listening to your favourite music as you go to sleep, this clock radio has it all.

Digital tuning with presets

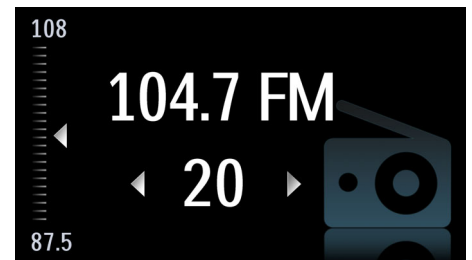

Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

Handy remote control



With a handy remote control for greater convenience at your fingertips, all you have to do is sit back and relax.



Specifications

Sound

- Output power: 2 x 20 W RMS
- Volume control: up/down
- Sound enhancement: Dynamic Bass Boost

Loudspeakers

- Speaker drivers: 3" woofer

Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: repeat/shuffle/programme
- Cassette deck technology: mechanical

Audio recording

- Recording media: tape
- Tape recording enhancement: CD synchro start recording

Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- Station presets: 20
- Antenna: FM fixed pigtail antenna, MW antenna
- Tuner enhancement: auto digital tuning

Connectivity

- Audio/Video output: Headphone (3.5 mm)
- MP3 Link: 3.5 mm stereo line in

Convenience

- Loader type: top
- Clock: on main display, sleep timer
- Display type: LCD display
- Backlight colour: Blue

Accessories

- Remote control
- Others: FM/MW antenna, User Manual
- Guaranteed: Worldwide Guarantee booklet

Dimensions

- Gross weight: 5.1 kg
- Main speaker dimensions (W x D): 134 x 152 mm
- Main speaker height: 230 mm
- Main unit depth: 216 mm
- Packaging width: 370 mm
- Main unit height: 233 mm
- Packaging height: 270 mm
- Main unit width: 148 mm
- Packaging depth: 326 mm



Issue date 2013-05-10

Version: 1.0.8

12 NC: 8670 000 34208
EAN: 87 12581 36589 9

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com