




Philips  
Portable DVD Player

17.8 cm (7") widescreen LCD

DivX playback

PET716S

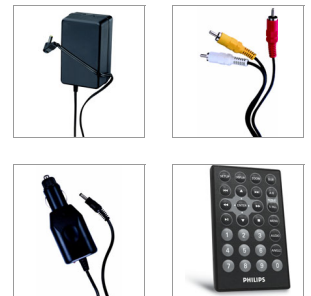

## DVD and DivX® movies on the go

Sit back, relax and watch movies on the go on the 7" TFT LCD display on the Philips PET716. Enjoy DVD, DivX®, MPEG4 movies, MP3-CD and CD on the go. Admire your JPEG photos anytime, anywhere.

### Immerse yourself in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- Plays MP3-CD, CD and CD-RW music
- Share JPEG image files with Picture CD

### For your viewing comfort

- 17.8 cm (7") TFT colour LCD display for high-quality viewing
- Enjoy movies in 16:9 widescreen format
- Built-in quality stereo speakers

### For ultimate convenience

- Up to 2 hours playback with rechargeable battery\*
- Car adapter and handy remote control included
- Few buttons for simple and easy control

**PHILIPS**  
sense and simplicity

# Highlights

## Play DVD, DivX and MPEG4

With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX®

CDs can be played back on selected DVD players, DVD Recorders and Home Theatre Systems.

## MP3-CD, CD and CD-RW music

MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without

radically degrading their audio quality. A single CD can store up to 10 hours of music.

## Share picture CD (JPEG)

Multi-format playability allows you to view images on the go and play most disc formats for maximum disc compatibility and viewing pleasure.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w) x 234(H) x 3(RGB)
- Brightness: 200 cd/m<sup>2</sup>
- LCD panel type: Anti-glare polariser
- Contrast ratio (typical): 250:1
- Effective viewing area: 154.1 x 86.6 mm
- Pixel pitch: 0.107(w) x 0.370(H) mm
- Response time (typical): 30 ms

## Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9 V
- Headphone jack: 3.5 mm Stereo Headphone
- AV output: Composite (CVBS) x 1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adapter: DC 9 V, 110-240 v, 50/60 Hz
- Cables: 1 x AV Cables
- Remote control: AY5510 slim remote
- User Manual: English/French/German/Spanish
- Car kit: cigarette outlet adapter, 12vDC

## Power

- Battery Type: Built-in battery

## Dimensions

- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.32 kg
- Packaging dimensions (W x H x D): 230 x 245 x 67 mm
- Product dimensions (W x H x D): 197 x 37 x 153 mm
- Packaging type: D-box
- Product weight: 0.71 kg



Issue date 2011-06-10

Version: 1.0.3

12 NC: 8670 000 37265  
EAN: 87 12581 39747 0

© 2011 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)