

PHILIPS



True Wireless Headphones

Natural sound

Noise Canceling

Clearer calls on the go

Bluetooth LE Audio*



TAT3508WT

Music to calls, flow through your day

Always be working it! These true wireless noise-canceling earbuds sound great, and they reduce wind noise. You can immerse in your tunes and enjoy clear calls on the go. Slip the charging case into your pocket and you're set for the day.

Great sound

- Warm, natural sound. Philips sound signature
- Always hear your music. Noise Canceling
- Clearer calls on the go. They'll hear you, not the noise
- Better connectivity and sound. Next-generation Bluetooth*

Comfortable and convenient


- Secure, comfortable in-ear fit
- IPX4 splash and sweat resistant
- Multipoint connection and touch controls
- Philips Headphones app. Control noise canceling and more

Ready for you

- Always ready. Pocket-sized charging case and mono mode
- No worries. Up to 21 hours play time with the case
- Quick charge for 15 minutes and get an extra hour
- Charging case dimensions: 35x62x28 mm

Highlights

Noise Canceling

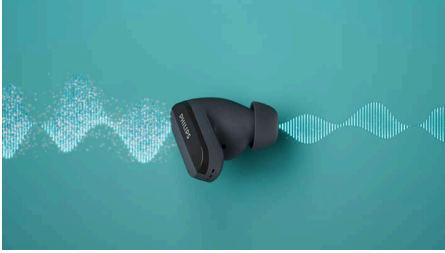

Noise canceling quiets external noise, including wind, so you can focus on your tunes or calls. Leave it on auto or use the Philips Headphones app to adjust. Want to hear more of what's going on around you? Tap an earbud to activate Awareness Mode.

Clearer calls on the go



When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

Next-generation Bluetooth*



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec* to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.

Philips sound signature

Music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

Pocket-sized charging case

Head out with the small charging case in your pocket and your earbuds will always be ready for you. They'll stay protected and charging when you're not using them, and mono mode means you can use either earbud while the other one charges.

Multipoint and touch controls

Touch controls on the earbud stalks keep things simple and multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time. Google Fast Pair lets you pair to a compatible Android device with a single tap.

IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

21 hours play time with case

You get 7 hours play time from a full charge, and an extra 14 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

Secure, comfortable in-ear fit

You get real comfort thanks to soft, interchangeable silicone ear-tip covers. The ear tips insert securely into your ear canal, creating a perfect seal that helps diminish external noise. Plus, the stalks make these earbuds easy to insert and remove.

Specifications

Sound

Frequency range: 20 - 20,000 Hz
Speaker diameter: 10 mm
Impedance: 32 Ohm
Maximum power input: 5 mW
Sensitivity: 95 dB (1k Hz)
Driver type: Dynamic

Connectivity

Bluetooth version: 5.3
Wireless
Bluetooth profiles: A2DP, AVRCP, HFP, TMAP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: SBC
Type of wireless transmission: Bluetooth

Outer Carton

Length: 29.5 cm
Number of consumer packagings: 24
Width: 25.5 cm
Gross weight: 3.83 kg
Height: 27.7 cm
GTIN: 1 48 95229 13161 0
Nett weight: 1.584 kg
Tare weight: 2.246 kg

Convenience

Water resistance: IPX4
Philips Headphones app support
Google fast pair
Mono mode for TWS
Firmware updates possible
Type of controls: Touch

Inner Carton

Length: 13.7 cm
Number of consumer packagings: 3
Width: 11.7 cm
Height: 11.9 cm
Nett weight: 0.198 kg
Gross weight: 0.41 kg
Tare weight: 0.212 kg
GTIN: 2 48 95229 13161 7

Power

Number of batteries: 3 pcs
Music play time: 7 + 14 hour(s)
Charging time: 2 hour(s)
Fast charging time: 15 mins for 1 hr

Battery type(Charging case): Lithium Polymer (built-in)

Battery type(Earbud): Lithium Polymer (built-in)
Battery weight (Total): 11.5 g
Battery capacity(Case): 400 mAh
Battery capacity(Earbud): 55 mAh

Packaging dimensions

Height: 13 cm
Packaging type: Box
Type of shelf placement: Hanging
Width: 11 cm
Depth: 4.2 cm
Number of products included: 1
EAN: 48 95229 13161 3
Gross weight: 0.113 kg
Nett weight: 0.066 kg
Tare weight: 0.047 kg

Accessories

Quick Start Guide
Eartips: 3 pairs (S/M/L)
Charging case
Charging cable: USB-C cable, 200 mm

Design

Color: White
Ear coupling material: Silicone
Ear fitting: In-ear
In-ear fitting type: Silicone ear tip

Telecommunication

Microphone for call: an AI mic
Wind noise reduction

Dimensions

Charging case dimension(WxDxH): 6.28 x 2.81 x 3.54 cm
Earbud dimension(WxDxH): 2.52 x 2.14 x 2.55 cm
Total weight: 0.045 kg

UPC

UPC: 8 40063 20311 2

ANC features

ANC technology: Hybrid
Awareness mode
ANC (Active Noise Canceling)
Auto wind noise cancelation

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant
Voice assistant activation: Manual
Voice assistant support

