




Philips
HiFi Stereo Headphones

SHP8500

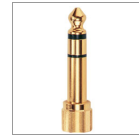

Dynamic HiFi sound performance

HiFi

Comfortable and fully adjustable headphones with neodymium speaker drivers deliver dynamic sound performance

The perfect listening experience

- 40mm speaker driver delivers sound without distortion
- The whole ear is covered to optimize sound quality
- High quality Linear Crystal Oxygen Free Copper cable

You'll forget you're wearing them!

- Ergonomic cushions improve wearing comfort and bass
- Easy adjustable headband ensures optimum fit and comfort

Always ready

- The 3m-long cable is ideal for use with headsets
- Single-sided cable reduces tangling and improves comfort
- Gold-plated adaptor for ultra reliable connection

PHILIPS

Specifications

Sound

- Acoustic system: Open
- Magnet type: Neodymium
- Frequency response: 10 - 28 000 Hz
- Impedance: 32 Ohm
- Maximum power input: 1500 mW
- Sensitivity: 106 dB
- Speaker diameter: 40 mm

Connectivity

- Cable Connection: One-sided
- Cable length: 3 m
- Finishing of connector: Gold-plated

Accessories

- Adaptor plug: Gold-plated 3.5-6.3 mm adaptor plug
- Velcro cable strap: Velcro cable strap supplied

Packaging dimensions

- Packaging dimensions (W x H x D):
23.5 x 25.5 x 11.3 cm
- Gross weight: 0.56 kg

- Nett weight: 0.29 kg
- Tare weight: 0.27 kg
- EAN: 87 10895 95750 2
- Number of products included: 1
- Packaging type: Carton

Outer Carton

- Gross weight: 9.8 kg
- Outer carton (L x W x H): 52.8 x 38.5 x 61.1 cm
- Nett weight: 3.48 kg
- Tare weight: 6.32 kg
- EAN: 87 10895 95752 6
- Number of consumer packagings: 12

Inner Carton

- Gross weight: 2.06 kg
- Inner carton (L x W x H): 34.5 x 25 x 28 cm
- Nett weight: 1.68 kg
- Tare weight: 0.38 kg
- EAN: 87 10895 95751 9
- Number of consumer packagings: 3

Highlights

3m cable

A handy cable length to make it easier for you to move freely around while using your headphones.

40 mm speaker driver

The 40 mm speaker driver is made of a composite mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

Ergonomically shaped cushions

The ergonomic earcushion shape and luxurious materials ensure a more comfortable fit and better bass performance thanks to reduced audio leakage.

Single-sided cable

The cable is conveniently connected to just one side, considerably reducing the risk of tangling and simplifying winding the cable up for storage.

Easy adjustable headband

The easily adjustable mechanism provides a comfortable close fitting acoustic seal between the ear cushion and ear, ensuring optimal performance.



Issue date 2019-04-24

Version: 4.0.5

12 NC: 9082 100 07804
EAN: 87 10895 95750 2

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com