



Philips  
Headphones

8.6-mm drivers/semi-closed back  
In-ear

SHX10



## Feel the bass, see the beat.

The Philips HX1 in-ear headphones not only let you feel the bass. They let you see it. They are your music, visualised. Designed to party! Be the light and the centre of the party with your pulsing LED headphones.

### Give light to your music

- Powerful LED syncs to every beat of your music
- Control music visibility with the LED button
- Up to 6 hours of powerful LED light

### Ignite your bass

- Neodymium drivers deliver deep bass and powerful sound
- The Bass Reflex Port improves bass

### Powerful design expression

- Supreme durability and toughness with a robust feel
- A rubber cable for extra durability
- Choose from 3 pairs of ear caps for the perfect fit

# PHILIPS

Headphones  
8.6-mm drivers/semi-closed back In-ear

## Highlights

### 3 pairs of ear caps



Ear caps come in a choice of 3 sizes - small, medium and large - for a personalised and perfect fit.

### Bass Reflex Port



The Bass Reflex Port improves bass by venting air out, improving efficiency of the system at low frequencies.

### Bright LEDs



A powerful LED syncs to every beat of your music so you can see and hear sound. For the first time ever, you can share your music visually.


### Durable rubber cable

A rubber cable for extra durability

### LED button

Control music visibility easily with the LED slide switch button on the in-line battery box.

### Long playtime

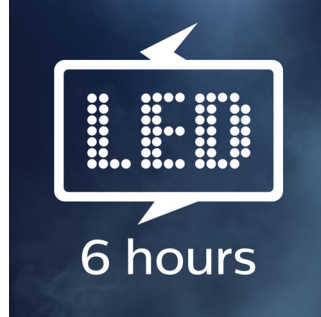

Up to 6 hours of powerful LED light

### Neodymium drivers



8.6-mm (8.3") Neodymium drivers deliver deep bass, amplifying the pulse of your music. They deliver high definition sound with a wide dynamic range, reproducing even the most minute details.

### Tough build



These headphones are built with toughness and durability in mind, giving you a robust and indestructible look and feel.

SHX10/00

## Specifications

### Sound

- Acoustic system: Semi-closed
- Magnet type: Neodymium
- Impedance: 16 ohm
- Maximum power input: 20 mW
- Sensitivity: 103 dB
- Speaker diameter: 8.6 mm
- Frequency response: 10 - 22,000 Hz

### Connectivity

- Cable Connection: two-parallel, symmetric
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: nickel plated
- Type of cable: copper

### Power

- Amount of batteries: 1 (built-in)
- Battery type: Lithium Polymer
- Battery weight: 1.8 g

### Accessories

- USB cable



Issue date 2016-11-16

Version: 3.0.5

12 NC: 8670 001 31814  
EAN: 69 25970 70804 3

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)