



Philips  
CD Soundmachine

**Bluetooth**  
Black/Gold  
5W



**PX3225GT**

## Enjoy your music wherever you go

with USB direct

Enjoy powerful sound from multiple sources. Bluetooth wireless streaming, USB playback, even multi-type CD support, all in one compact and portable device.

### Enjoy your music from different sources

- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- FM/MW (AM) stereo tuner
- Audio-in for easy portable music playback
- Stream music wirelessly via Bluetooth™ from your smartphone

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- 20 preset tuning stations

### Powerful sound you can hear and feel

- 5W Total output power
- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program
- Bluetooth
- USB playback mode: fast forward/backward, next/previous track search, play/pause, repeat/shuffle/program

## Tuner/Reception/Transmission

- Tuner bands: FM, MW (AM)
- Antenna: FM antenna

## Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 2 x 2.5 W

## Loudspeakers

- No. of built-in speakers: 2

## Connectivity

- USB: USB host
- Audio in (3.5mm)
- Bluetooth profiles: A2DP, AVRCP

## Power

- Power supply: AC or battery input
- Mains power: AC 110V-127V and 220-240V selectable
- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6

## Convenience

- Display type: LCD display
- Loader type: top

## Accessories

- Cables/Connection: power cord
- Warranty: Warranty leaflet
- Others: User Manual

## Dimensions


- Product dimensions (WxDxH): 252 x 228 x 128 mm
- Packaging dimensions (WxDxH): 280 x 160 x 260 mm
- Product weight: 1.5 kg
- Weight incl. Packaging: 1.9 kg

# Highlights

## USB Direct for MP3 music

USB Direct for MP3 music playback

## Play MP3-CD, CD and CD-R/RW

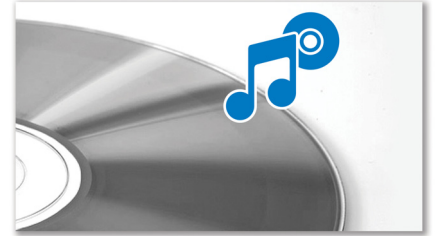

MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

## CD Shuffle/Repeat



The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## 20-track CD programmable

The CD programmable playback feature allows you to enjoy your favorite tracks in the sequence you want.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2015-10-26

Version: 1.0.2

12 NC: 8670 001 32103  
EAN: 48 95185 61845 6

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)