

# PHILIPS



Soundbar 7.1.2 with  
wireless subwoofer

Fidelio

888W max. Wireless subwoofer

Detachable surround speakers

Dolby Atmos. IMAX Enhanced

DTS Play-Fi compatible



B97

## True surround sound on demand

Immerse in the drama. Feel the emotion. This Fidelio soundbar with detachable satellite speakers and Dolby Atmos will surround you with incredibly detailed, realistic sound. Deep bass adds palpable impact to effects and music.

### A seamless experience

- 4K pass-through. Dual HDMI inputs
- Easily connect to your favorite sources
- Connects to your favorite voice assistant-enabled devices

### Immerse in movies and music

- Dolby Atmos and Dolby Surround. Heighten the excitement
- IMAX Enhanced. Immersive, heart-pounding audio
- HDMI eARC. Enjoy Dolby Atmos and DTS:X audio formats
- Play-Fi. High-quality multi-room audio
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

### The surround-sound maestro

- 7.1.2 channels. 888 W max. 450 W RMS (1%THD)
- Effortless immersion. From movie night to music
- Philips Fidelio. Feel the drama
- Detachable satellite speakers. Surround sound on demand

# Highlights

## Effortless connection



With a Philips Fidelio soundbar, nothing comes between you and the moment. Whether it's the removable rear speakers, which can be clicked on or off in seconds on movie night. The seamless way you can switch between all your favorite sources. Or the low profile for easy placement. Just unbox, plug in, and relax.

## Feel the drama



This soundbar creates an unforgettably immersive experience. 7.1.2 channels fill any room with rich, deep soundtracks, thunderous effects, and sparkling dialogue. The wireless subwoofer adds impact to every explosion and every beat.

## Surround sound on demand




Want to fully immerse on movie night? Simply remove the detachable speakers from the ends of the soundbar and place them behind you to create a true surround-sound setup. The dedicated center channel ensures you'll hear every word—from blockbusters to podcasts.

## Dolby Atmos and Dolby Surround



Get the full Dolby Atmos experience from this soundbar's up-firing speakers. Your favorite movies and shows will sound breathtakingly realistic as sound flows above and around you. If you're watching non-Atmos content, the soundbar switches to Dolby Surround.


## IMAX Enhanced

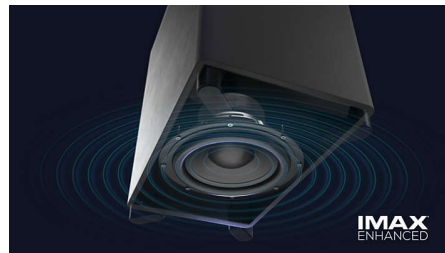

This powerful soundbar is certified IMAX Enhanced, which means it's capable of delivering an audio experience that truly takes you to

another world. The 240 W subwoofer looks great freestanding, and the soundbar itself has a low profile for simple placement.

## Play-Fi. Multi-room and more

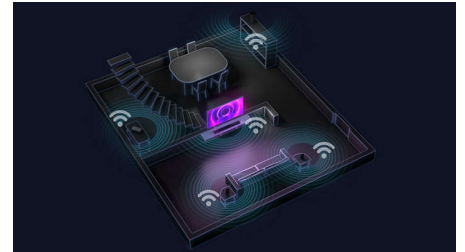

DTS Play-Fi compatibility makes this premium Fidelio soundbar a powerful component in a multi-room audio setup. You can easily sync and group Play-Fi-compatible speakers, and stream playlists to every room in high-quality audio without dropping a beat.

## All your favorite sources

For music, Spotify Connect lets you stream Spotify's best-quality signal over Wi-Fi. You can also stream hi-res playlists from your mobile device via Apple AirPlay 2 or Bluetooth. For movies and gaming, 4K pass-through lets you connect 4K HDR video sources with no loss of resolution.

## Connect with voice assistants



Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.

Specifications

Sound

Sound Enhancement: Movie, Music, Voice, Sport, Custom

Sound System: Dolby Atmos, DTS:X, IMAX Enhanced

Total harmonic distortion: 1%

Speaker system output power: 888W MAX / 450W RMS (1%THD)

Loudspeakers

Subwoofer freq range: 35 - 150 Hz

Subwoofer type: Active, Wireless subwoofer

Subwoofer impedance: 3 ohm

Number of sound channels: 7.1.2

Number of woofers: 1

Woofer diameter: 8"

Soundbar freq range: 150 - 20k Hz

Detachable rear drivers: 2 full range (L+R), 2 tweeters (L+R)

Center drivers: 2 full range (L+R)

Front drivers: 4 full range (L+R), 2 tweeters (L+R)

Side-firing drivers: 2 tweeters (L+R)

Up-firing drivers: 2 full range (L+R)

External subwoofer enclosure: Bass reflex

Connectivity

Bluetooth: Receiver

Bluetooth version: 4.2

EasyLink (HDMI-CEC)

Aux in: 3.5mm

Optical input x 1

HDMI content protection: HDCP 1.4/2.3

HDMI IN x 2

HDMI Out (eARC/ARC) x 1

WiFi: 2.4GHz/5GHz, IEEE 802.11 a/b/g/n/ac

DLNA Standard: No

Multiple speaker connection

Multiple speaker technology: DTS Play-Fi Multi-room

Smart Home: Built-in Chromecast, Spotify Connect, Works with Alexa, Works with Apple AirPlay 2, Works with OK Google

Wireless speaker connection: Satellite speakers, Subwoofer

Supported Audio Formats

HDMI ARC/eARC: Dolby Atmos, Dolby Digital, Dolby Digital EX, Dolby Digital plus, Dolby TrueHD, DTS, DTS 96/24, DTS Digital Surround (5.1-ch), DTS:X, DTS-ES, DTS-HD High Resolution Audio, DTS-HD Master Audio

Play-Fi: AIFF, FLAC, MP3, WAV, MPEG4 AAC, MPEG4 M4A

Bluetooth: SBC

HDMI IN1/IN2: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby TrueHD, Dolby Digital EX, DTS, DTS 96/24, DTS Digital Surround (5.1-ch), DTS:X, DTS-ES, DTS-HD High Resolution Audio, DTS-HD Master Audio

Optical: Dolby Digital, LPCM 2ch

Outer Carton

Length: 116.5 cm

Number of consumer packagings: 2

Width: 53.5 cm

Gross weight: 44.1 kg

Height: 48 cm

GTIN: 1 48 95229 11636 5

Nett weight: 33.2 kg

Tare weight: 10.9 kg

Convenience

Remote Control

Night mode: No

Compatibility

Smartphone/tablet APP control

Power

Subwoofer Power supply: 220-240V AC, 50/60Hz

Main unit power supply: 100-240V AC, 50/60 Hz

Subwoofer standby power: < 0.5 W

Main unit standby power: < 0.5 W

Auto standby

Packaging dimensions

Height: 45.8 cm

Packaging type: Box

Type of shelf placement: Laying

Width: 115 cm

Depth: 40.5 cm

Number of products included: 1

EAN: 48 95229 11636 8

Gross weight: 20.69 kg

Nett weight: 16.6 kg

Tare weight: 4.09 kg

Accessories

Included accessories: Remote Control (with battery), Power cord, Quick start guide, World Wide Warranty leaflet

Design

Color: Black

Wall mountable

Dimensions

Main Unit (W x H x D): 1312 x 55.6 x 120 mm

Main Unit Weight: 5.97 kg

Subwoofer (W x H x D): 230 x 400 x 407 mm

Subwoofer Weight: 9.6 kg

Satellite Speaker (W x H x D): 183 x 55.6 x 120 mm

Satellite Speaker Weight: 0.786 kg

Video

3D pass-through

Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG

