

Philips
DVD Mini Hi-Fi System

120W

FWD197



Enjoy DVD and MP3-CD in rich sound

with USB Direct

This system is all you need to stay entertained in the comfort of your home. Rely on DBB to deliver deeper and more powerful bass to bring all your favorite movies and music to life. Enjoy photos and music directly from your USB devices.

Enrich your movie experience

- Dolby Digital for ultimate movie experience
- Progressive Scan component video for optimized image quality
- DivX Certified for standard playback of DivX videos

Enrich your sound experience

- MAX Sound for instant power boost
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings


Continuous enjoyment of your favorite music

- Digital tuning with preset stations for extra convenience
- Autostop cassette deck
- USB Direct for MP3/WMA music playback

PHILIPS
sense and simplicity


Highlights

Dolby Digital

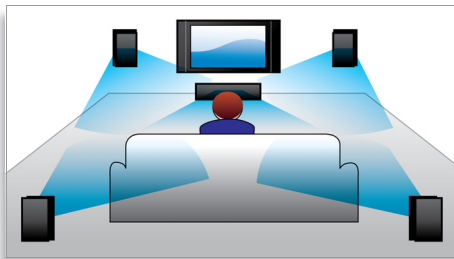

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Progressive Scan

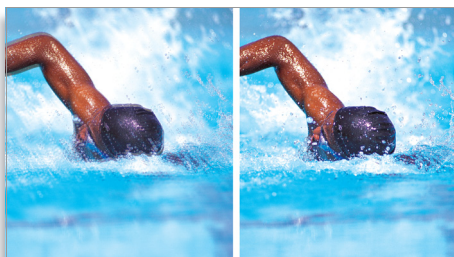

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance


and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Dynamic Bass Boost




Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital tuning with presets

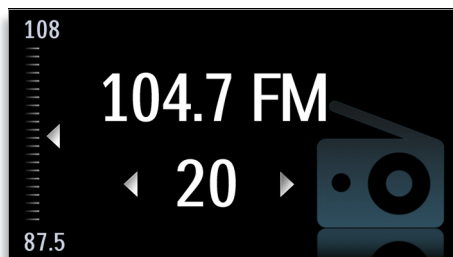

Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

Autostop cassette deck

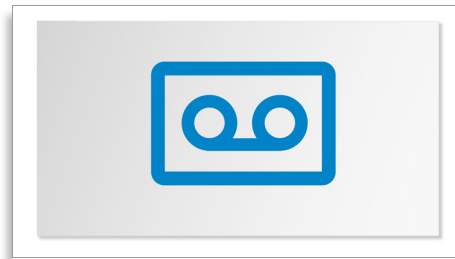


Autostop cassette deck

USB Direct



With the USB Direct mode, you can simply select the music on a USB device and playback all your content. All you have to do is plug in your USB device to playback music or export content from the device.

DivX Certified

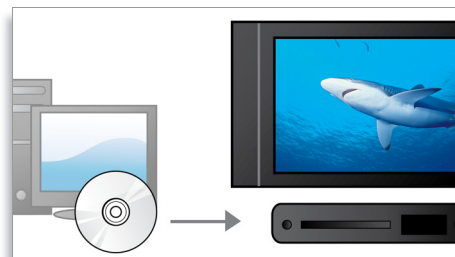

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

Specifications

Sound

- Total Sound Power (RMS): 100 W
- Output power: 1800 W PMPO
- Sound enhancement: MAX sound, digital sound control, Dynamic Bass Boost, Dolby Digital

Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 2" tweeter, 5.25" woofer
- Loudspeaker enhancement: 2-way
- Speaker types: bass reflex speaker system

Video Playback

- DVD region code: 3
- Playback media: DVD, DVD+R/+RW, DVD-R/-RW, SVCD, video CD, picture CD, DivX
- Video enhancement: progressive scan
- Disc playback modes: disc menu, OSD, fast backward, fast forward, slow backward, slow forward, A-B Repeat, angle, Zoom, resume playback from stop
- USB Direct Playback: JPEG

Audio playback

- Playback media: MP3-CD, WMA-CD, CD, CD-R, CD-RW
- Disc playback modes: repeat/shuffle/program
- Number of decks: 1
- Cassette deck technology: mechanical
- Cassette Playback Modes: semi-auto stop
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, stop

Audio recording

- Recording media: tape
- Tape recording enhancement: automatic recording level, CD synchro start recording

Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- Station presets: 40
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Audio/Video output: 2xRCA (Audio), component video out, composite video (CVBS) out, S-Video out
- USB: USB host

Convenience

- Number of discs: 1
- Display type: LCD display
- Loader type: top, tray
- Clock: sleep timer
- On-Screen display languages: English, French, Portuguese, Spanish, Thai

Accessories

- Remote control
- Cables/Connection: audio cable, composite video cable (Y)
- User Manual: English
- Others: Quick start guide
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 11.2 kg
- Main speaker dimensions (W x D): 207 x 186 mm
- Main speaker height: 310 mm
- Main unit depth: 285 mm
- Packaging width: 730 mm
- Main unit height: 292 mm
- Packaging height: 374 mm
- Main unit width: 220 mm
- Packaging depth: 260 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz

Digital photo playback

- Playback media: Kodak Picture CD, picture CD
- Picture Enhancement: flip photos, rotate, slideshow, Zoom
- Picture Compression Format: JPEG



Issue date 2011-07-21

Version: 6.4.6

12 NC: 8670 000 49723
EAN: 87 12581 46511 7

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com