



Philips  
CD Soundmachine

Dock for iPod

AZD208



## Enjoy iPod and CD music wherever you go

Share your favorite iPod tunes out loud wherever you go. Not only will you enjoy great portability and ease of use, you can charge your iPod while it plays. What's more, you can also play CDs, CD-Rs and CD-RWs. Free your music now.

### Enjoy your music from multiple sources

- Play and charge your iPod simultaneously
- Play CD, CD-R and CD-RW
- MP3 Link for portable music playback

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Highlights

## Play and charge your iPod



Enjoy your favorite MP3 music while charging your iPod! The dock lets you connect your iPod directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod while it plays so you can enjoy your music and not have to worry about your iPod battery running out. Use the remote control to navigate, select and playback the music stored on your iPod. The Docking entertainment system automatically charges your iPod while it is docked.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level.


To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Play CD, CD-R and CD-RW



Philips is known for making products which are compatible with many discs available in the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

## CD Shuffle/Repeat

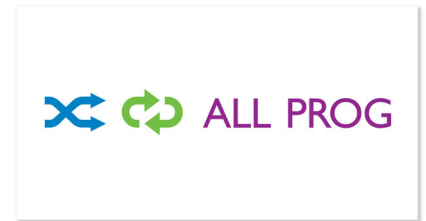

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.



# Specifications

## iPod compatibility

- Compatible with: iPod touch, iPod 5th Generation, iPod with color display, iPod mini, iPod classic 120GB, iPod classic 160GB, iPod classic 80GB, iPod nano, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation

## Audio Playback

- Loader Type: Top
- Cradle playback mode: Charging iPod, Play and Pause, Next and Previous track, Fast forward and backward, Repeat, Shuffle play
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play, 20-Track Programmable

## Sound

- Output power (RMS): 2x1.3W
- Sound System: Stereo
- Sound Enhancement: Dynamic Bass Boost
- Speaker diameter: 3"
- Volume Control: rotary

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Antenna: FM Antenna

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- Aux in: (MP3 Link)

## Convenience

- Display Type: LCD

## Power

- Mains power: AC 220 -240V
- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6

## Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

## Dimensions

- Product dimensions (W x H x D):  
297 x 112 x 164 mm
- Packaging dimensions (W x H x D):  
139 x 284 x 324 mm



Issue date 2014-02-13

Version: 2.0.9

12 NC: 8670 000 64406  
EAN: 87 12581 55130 8

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)