



Philips  
Portable DVD Player

22.9 cm (9")  
5-hr playtime

PD9000



## Longer movies enjoyment on the go

Enjoy your movies anytime, anyplace! The PD9000 portable DVD player features 9" TFT LCD screen for your great viewing experience. You can indulge in up to 5 hours of DVD/DivX®/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 22.9 cm (9") TFT color widescreen LCD display
- Built-in stereo speakers

### Extra touches for your convenience

- Up to 5-hour playback with a built-in battery\*
- AC adaptor, car adaptor and AV cable included
- Car mount pouch included for easy in-car use
- Full Resume on Power Loss

# PHILIPS

Portable DVD Player  
22.9 cm (9") 5-hr playtime

PD9000/51


## Highlights

### 5-hour built-in battery\*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

### DVD, DVD+/-RW, (S)VCD, CD

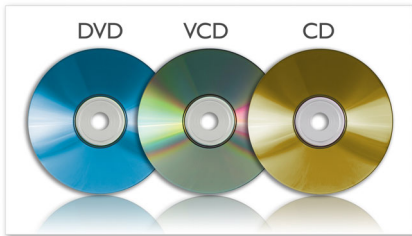

The Philips Portable DVD player is compatible with most DVD and CD discs available in the

market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

### 22.9cm/9" TFT color widescreen



The high resolution color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

### Car mount pouch



Mount your portable DVD player easily to your car headrest. You can enjoy DVD movies on the road.

### DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.



# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
17,8 x 24 x 3,95 cm
- Weight: 0,952 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
27,2 x 28,5 x 7 cm
- Nett weight: 1,31 kg
- Gross weight: 1,575 kg
- Tare weight: 0,265 kg
- EAN: 87 12581 53388 5
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

## Outer Carton

- Outer carton (L x W x H): 28,2 x 23,3 x 30 cm
- Nett weight: 3,93 kg
- Gross weight: 5,075 kg
- Tare weight: 1,145 kg
- Number of consumer packagings: 3

## Picture/Display

- Diagonal screen size: 9 inch / 23 cm
- Resolution: 640(w)x220(H)x3(RGB)
- Display screen type: LCD TFT

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone),  
>62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop

- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 1
- AV output: Composite (CVBS) x1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: DC-IN 9V, 0.8A, 110-240v, 50/60Hz
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5511 slim remote
- Cables: 1 x AV Cables
- User Manual: Multi-languages
- Pouch: Car mounting pouch

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs\*

## Dimensions

- Master carton dimensions: 225 x 295 x 280 mm
- Master carton quantity: 3
- Master carton weight: 4.83 kg
- Packaging dimensions (W x H x D):  
272 x 285 x 70 mm
- Product dimensions (W x H x D):  
239 x 39 x 178 mm
- Product weight: 1.1 kg
- Packaging type: D-box



Issue date 2014-02-13

Version: 1.1.9

12 NC: 8670 000 61427  
EAN: 87 12581 53388 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.