

Philips  
True wireless sports  
headphones

### Premium sound

Noise Cancelling Pro  
Crystal-clear calls  
Reliable in-ear fit



TAA7507BK

## Tune in to your workout

From inspiring playlists to calls with your trainer, these true wireless headphones will keep you moving. Enjoy superb sound and noise cancellation, plus a fit you can rely on—from daily distances to big runs, they'll stay in your ears.

### Detailed, energising sound

- Premium sound. Go big on the tunes that get you going!
- Hear only the sounds you want. Noise Cancelling Pro
- Get out there. IPX5 water resistant
- Hi-Res Audio Wireless. Superb sound for streaming

### For your kind of active life

- No worries. Up to 28 hours play time with the case
- Charge for 15 minutes, get an extra hour
- Crystal-clear calls, even if it's windy
- AI and bone-conducting mics remove environmental noise

### Seamlessly brilliant

- Reliable in-ear fit. Move it, don't lose it
- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Control noise cancelling and more
- Touch controls. Supports your favourite voice assistants

# PHILIPS

True wireless sports headphones  
Premium sound Noise Cancelling Pro, Crystal-clear calls, Reliable in-ear fit

TAA7507BK/00


# Highlights

## 28 hours play time with case



Don't want to worry about daily charging? You get 7 hours play time and an extra 21 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours—if you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged wirelessly or via USB-C.

## Crystal-clear calls

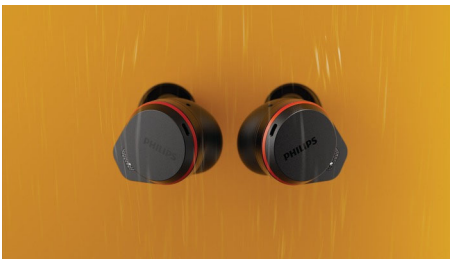

Need to take a call while you're out on a run? With these headphones, there's no need to take cover from the wind. When you're on a call, two AI mics and a bone-conducting mic combine to clearly transmit the sound of your voice.

## IPX5 water protection



An IPX5 rating means that these headphones don't mind a drop of rain or a downpour, so

they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, the headphones won't mind that either.

## Noise Cancelling Pro



Busy gym? Noisy train? Multiple mics and advanced audio processing filter out external noise. Adaptive noise cancellation automatically senses what you're doing and adjusts environmental sound levels accordingly, so you'll always hear your music.

## Premium sound



These true wireless headphones boast detailed sound with rich, clear bass—courtesy of graphene-coated drivers that reproduce every sparkling high and weighty low. iOS or Android, you'll enjoy all the immersion you need to keep your energy up—and the music pauses if you take an earbud out.

## Reliable in-ear fit



Hit your targets, beat your best or run for fun. Doesn't matter why you move—these headphones stay right in your ears where you want them. Because no two ears are the same, you get three interchangeable sizes of in-ear tips and stabilisers, which you can mix and match for your perfect fit.

## Hi-Res Audio Wireless

Whichever streaming service you use, these Hi-Res Audio Wireless-certified headphones will unlock the best possible sound. The codec that works best with your phone or tablet is selected automatically. Whether you use iOS or Android devices, you'll enjoy a superbly detailed listening experience.

## Philips Headphones app

You can use the Philips Headphones app to adjust the level of noise cancellation or activate wind cancellation—and the app lets you update your headphones with the latest software. An equaliser lets you fine-tune your sounds to fit your workout.

## Simple control

Touch controls keep things simple, and helpful confirmation tones let you know you've activated a function. Siri and the Google Assistant are both supported, and you can connect to two devices at once. Great if you're streaming music from a phone and getting training alerts from your smartwatch.



# Specifications

## Sound

- Impedance: 25 Ohm
- Speaker diameter: 9.2 mm
- Sensitivity: 100 dB (1 kHz)
- Frequency range: 20 - 40,000 Hz (LDAC)
- Maximum power input: 5 mW
- Driver type: Dynamic, Graphene coated
- Hi-Res Audio

## ANC features

- ANC (Active Noise Canceling)
- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- Auto wind-noise cancellation

## Telecommunication

- Microphone for call: 2 AI mics, 1 bone mic
- Wind noise reduction

## Connectivity

- Bluetooth version: 5.2
- Supported codec: LDAC, AAC, SBC
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Multipoint connection
- Type of wireless transmission: Bluetooth
- Wireless

## Convenience

- Auto pause (IR sensor)
- Philips Headphones app support
- Firmware updates possible
- Water resistance: IPX5
- Automatic power off: 60 minutes
- Mono mode for TWVS
- Type of controls: Touch

## Design

- Colour: Black
- Ear fitting: In-ear
- Ear coupling material: Silicone
- In-ear fitting type: Silicone ear-tip, Stabiliser

## Power

- Music play time (ANC on): 7 + 21 hr
- Music play time (ANC off): 8 + 24 hr
- Battery type (Earbud): Lithium Polymer (Built-in)
- Battery capacity (Earbud): 55 mAh
- Battery type (Charging case): Lithium Polymer (Built-in)
- Battery capacity (Case): 500 mAh
- Battery life standby time: 200 hr
- Charging time: 2 hr

- Fast charging time: 15 mins for 1 hr
- Number of batteries: 3 pcs
- Battery weight (Total): 13.05 g
- Wireless charging
- Rechargeable

## Voice assistant

- Voice assistant support
- Voice assistant activation: Manual
- Voice assistant compatible: Apple Siri, Google Assistant

## Accessories

- Eartips: 3 pairs (S/M/L)
- Charging cable: USB-C cable, 200 mm
- Others: 1 pcs lanyard, 3 sizes x Stabilisers
- Quick Start Guide

## Dimensions

- Charging case dimension (W x D x H):  
7.16 x 2.97 x 4.32 cm
- Earbud dimension (W x D x H):  
2.26 x 2.17 x 2.62 cm
- Total weight: 0.058 kg

## Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D):  
11 x 13 x 4.7 cm
- Gross weight: 0.152 kg
- Net weight: 0.091 kg
- Tare weight: 0.061 kg
- EAN: 48 95229 12629 9

## Outer Carton

- Number of consumer packages: 24
- Outer carton (L x W x H): 33.1 x 25.7 x 26.7 cm
- Gross weight: 4.72 kg
- Net weight: 2.184 kg
- Tare weight: 2.536 kg
- GTIN: 1 48 95229 12629 6

## Inner Carton

- Number of consumer packages: 3
- Inner carton (L x W x H): 15.8 x 12.1 x 12.2 cm
- Gross weight: 0.532 kg
- Net weight: 0.273 kg
- Tare weight: 0.259 kg
- GTIN: 2 48 95229 12629 3

## UPC

- UPC: 8 40063 20230 6



Issue date 2023-08-24

Version: 4.1.2

12 NC: 8670 001 82074  
EAN: 48 95229 12629 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life of play time is approximate and may vary depending on application condition.