



Tuned for Sports

Non-slip, secure fit with silicone grip

Robust and ergonomic, the ultra-light ActionFit SHQ5200 Headphones are designed for the most demanding workouts. 40-mm neodymium drivers ensure powerful bass while open acoustics and detachable ear cushions always keep you comfy, dry and cool.

Designed for a secure and comfortable fit

- Detachable, washable ear cushions keep you cool and dry
- Non-slip headband with silicone grip lets you move freely
- Snug-fit headband optimally fits any ear contour

Designed for high performance

- Ultra-lightweight 99-g headphones for superb fit and comfort
- Kevlar-reinforced cable for ultimate durability


Excellent sound with added bass boost

- 40-mm neodymium drivers for mega bass and fuelled performance
- Open acoustic design keeps you alert to your surroundings

Philips
Sports Headband
Headphones

ActionFit

On-ear
Orange and Black

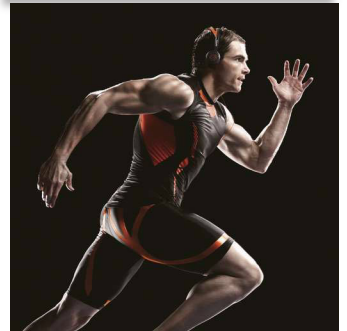

SHQ5200



PHILIPS

Highlights

40-mm neodymium drivers



Get into your groove with music that packs a solid punch, thanks to powerful 40-mm neodymium drivers that pump out mega-deep and dynamic bass. Your ActionFit headphones are designed to fuel your workout performance – no matter how demanding. Experience a vividly moving sound experience, whatever your workout and wherever you go.

Detachable and washable cushions



Go ahead and sweat it out – your ActionFit SHQ5200 headphones feature unique ear cushions that are covered by a moisture-wicking fabric that keeps you comfortable, cool and dry throughout your workout. Just detach the cushions for a wash after several uses and they'll be as good as new.


Non-slip headband



The ActionFit SHQ5200 headphones feature a specially designed headband that fits securely throughout your toughest workout. Its non-slip


headband is built with an innovative silicone grip that ensures sufficient contact points on your head, preventing any side-slips or front-back pendulum effects while you move freely during your workout.

Open acoustic design

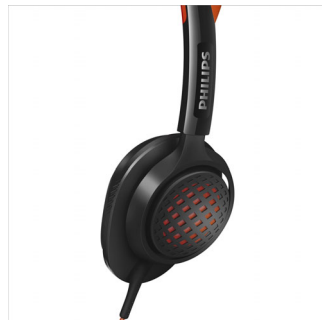

For your safety, your ActionFit headphones allow you to be aware of your environment – especially when exercising outdoors. Their open acoustic platform lets you discern what is happening around you while still enjoying your music fully.

Snug-fit headband

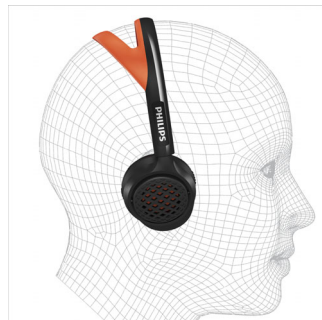

Your ActionFit headphone features a discreetly designed snug-fit headband with ergonomic ear cups that are stringently tested to fit all ears – no matter what shape and size – comfortably and perfectly.

Ultra-light 99 g

Weighing in at a lean 99 g, the ActionFit SHQ5200 is one of the lightest headphones on the market. Its efficiently engineered architecture features individual parts that are specifically designed to achieve a precise balance of ergonomic structure and comfortable weight. The headband frame is made of high-grade polypropylene, ensuring a consistently firm grip and discreetly stylish fit.

Kevlar-reinforced cable

Your ActionFit headphones are specially designed for durability and strength. Their Kevlar-coated cable is well protected against tearing and breaking, and can withstand extreme environments – and workouts.

Specifications

Connectivity

- Type of cable: Kevlar cable
- Cable Connection: one-sided
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: Gold-plated

Accessories

- Included: protective pouch

Packaging dimensions

- Packaging dimensions (W x H x D): 19.5 x 22.5 x 7.5 cm
- Net weight: 0.122 kg
- Gross weight: 0.258 kg
- Tare weight: 0.136 kg
- EAN: 69 23410 71939 0
- Type of shelf placement: Both
- Number of products included: 1
- Packaging type: Carton

Outer Carton

- Outer carton (L x W x H): 24.5 x 21 x 22.8 cm
- Net weight: 0.366 kg
- Gross weight: 1 kg
- Tare weight: 0.634 kg
- GTIN: 1 69 23410 71939 7
- Number of consumer packages: 3

Product dimensions

- Product dimensions (W x H x D): 14 x 19.2 x 5.6 cm
- Weight: 0.102 kg

Sound

- Acoustic system: Open
- Diaphragm: PET
- Frequency response: 18 - 21,000 Hz
- Magnet type: Neodymium
- Sensitivity: 101 dB
- Speaker diameter: 40 mm
- Maximum power input: 40 mW
- Impedance: 32 ohm



Issue date 2015-07-02

Version: 1.3.11

12 NC: 8670 000 97346
EAN: 06 92341 07193 90

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com