



Philips  
Soundbar speaker

Virtual surround  
External subwoofer  
Opt, Coax, Aux in, Audio in



HTL2151

## Powerful sound for any TV

with subwoofer

Enjoy your movies and music with Virtual Surround Sound and deep bass via just one cable! This Philips Soundbar with dedicated subwoofer enriches your home entertainment when used with TVs, BD/DVD players, gaming consoles and MP3 players

### Connect and enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy MP3/WMA music directly from your portable USB devices

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Ultra-compact soundbar - just 80cm/32" wide

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- External subwoofer adds thrill to the action
- Twin tweeters for optimum clarity performance




# PHILIPS

## Soundbar speaker

Virtual surround External subwoofer, Opt, Coax, Aux in, Audio in

# Highlights

### Virtual Surround Sound

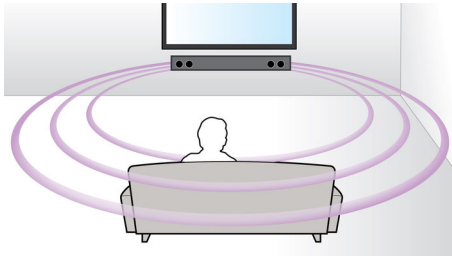

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

### External subwoofer



External subwoofer adds thrill to the action


### Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop

via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

### Dolby Digital

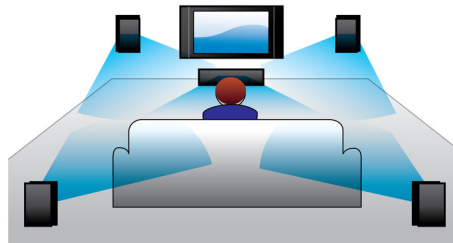

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

### USB



Enjoy MP3/WMA music directly from your portable USB devices

### Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

HTL2151/F7

# Specifications

### Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control
- Sound System: Dolby Digital
- Speaker output power: 15 W x 2
- Subwoofer output power: 30 W
- Total Power RMS @ 30% THD: 60 W

### Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 8 ohm

### Connectivity

- Side Connections: Audio In (3.5mm), USB
- iPod/iPhone: via 3.5mm Audio In
- Rear Connections: Digital optical in, Subwoofer out, AUX in, Digital coaxial in

### Design

- Wall mountable

### Power

- Power consumption: 30 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

### Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

### Dimensions

- Main Unit (W x H x D): 31.5 x 2.1 x 3 inch
- Main Unit (W x H x D): 800 x 52.4 x 75.6 mm
- Main Unit Weight: 1.2 kg
- Subwoofer (W x H x D): 11.6 x 9.5 x 6.5 inch
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 788 x 233 x 292 mm
- Weight incl. Packaging: 6 kg

### Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2020-07-08

Version: 7.2.6

12 NC: 8670 001 01057  
UPC: 6 09585 23232 7

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)