

# PHILIPS



Over-ear wireless  
headphones

Fidelio

Noise Cancellation Pro+

Natural, balanced sound

Premium leather design

38 hours of play time



L3

## Get inside the music. Anywhere.

What if you could always be in the perfect place to listen to the music you love? Exquisitely tuned drivers, excellent Active Noise Cancelling and the right fit combine to create the perfect listening environment. Wherever you are.

### Detailed sound, no distractions

- Philips Fidelio. Engineered for exceptional performance
- 40 mm drivers. Natural, balanced sound
- State-of-the-art hybrid Active Noise Cancelling

### Seamless in every way

- Touch controls. 38 hours play time (32 hours with ANC)\*
- Connect to any source. Wireless or wired
- IR sensor. Music pauses when you take the headphones off
- Philips Headphones app. Customise your experience
- One-touch pairing. Google Fast Pair\*

### Quality in every detail

- Crafted for listening. Premium design
- Memory foam ear-cup cushions. Always a perfect fit
- Sumptuous Muirhead leather. Responsibly sourced
- Dual mics for crystal-clear calls. On-board voice control

# Highlights

## Philips Fidelio



From the sound to the materials, these over-ear closed-back wireless headphones are crafted to bring you deep into the music. No matter what size or shape your head is, the soft memory-foam ear-cup cushions fit closely and the music pauses if you take the headphones off.

## Natural, balanced sound



The perfectly tuned drivers in these Hi-Res Audio certified headphones deliver beautifully balanced sound - whether ANC is turned on or off. Bass is tight and impactful without being overpowering. Midrange frequencies are full and smooth. High frequencies sparkle with detail.

## Hybrid Active Noise Cancelling



Listen at the perfect volume - wherever you are. Adaptive noise cancelling uses one external mic and one internal mic to filter out unwanted sounds, leaving you free to immerse. Awareness Mode lets you bring the world back in when you need to.

## Crystal-clear calls




Two mics in each ear cup focus on the sound of your voice, dramatically reducing noise from the world around you. The fully integrated Google Assistant and Alexa are there to help you pull up your favourite playlists as soon as you ask.

## Touch controls



A full charge gives you more than a day of music and a speedy 15 minute charge gives you 6 hours play time. There are touch controls for music and calls and buttons for ANC on the ear cups, which also fold flat for easy storage.

## Crafted for listening

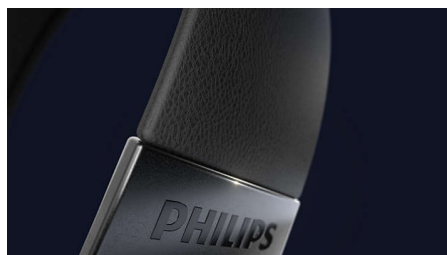


Lightweight aluminium and responsibly sourced Muirhead leather ensure that these wireless headphones feel as premium as the sound. The aluminium of the ear-cup rings is in matte dark satin, with embossed Philips Fidelio branding. The music pauses automatically when you take the headphones off.

## Philips Headphones app.



The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset ANC modes. It also features a dedicated equaliser, and you can use the app to control the music you're streaming or access song information.

## Google Fast Pair\*

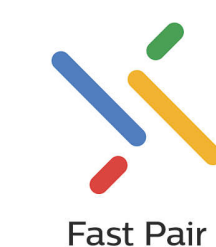

Google Fast Pair lets you pair your headphones to a compatible Android device with a single tap. When the headphones are placed near your Android device, you are automatically asked if you want to connect.

## Connect to any source



Solid Bluetooth connectivity, with AAC support for iOS devices and aptX HD for Android or Windows, ensures the best possible sound when streaming. The detachable cable lets you plug into high resolution equipment for wired listening.

Specifications

Sound

Frequency range: 7 - 40,000 Hz  
Speaker diameter: 40 mm  
Impedance: 16 Ohm  
Maximum power input: 20 mW  
Sensitivity: 103 dB (1k Hz)  
Driver type: Dynamic  
Hi-Res Audio

Connectivity

Bluetooth version: 5.1  
Wireless  
Bluetooth profiles: A2DP, AVRCP, HFP  
Detachable cable  
Maximum range: Up to 10 m  
Multipoint connection  
Supported codec: AAC, SBC, aptx, aptx-HD  
Type of wireless transmission: Bluetooth  
Headphone socket: 2.5 mm

Outer Carton

Length: 25.4 cm  
Number of consumer packages: 3  
Width: 22.8 cm  
Gross weight: 3.655 kg  
Height: 26 cm  
GTIN: 1 48 95229 10839 1  
Net weight: 1.161 kg  
Tare weight: 2.494 kg

Convenience

Automatic power off  
Volume control  
Philips Headphones app support  
Google Fast Pair  
Auto pause (IR sensor)  
Firmware updates possible  
Type of controls: Touch

Power

Rechargeable  
Number of batteries: 3 pcs  
Talk time: 38 hr  
Charging time: 2 hour(s)  
Music play time (ANC on): 32 hour(s)  
Music play time (ANC off): 38 hour(s)  
Fast charging time: 15 mins for 6 hrs  
Battery weight (Total): 10.1 g

Battery capacity (Headphones): 800 mAh  
Battery type (Headphones): Lithium Polymer (built-in)

Packaging dimensions

Height: 21.67 cm  
Packaging type: Box  
Type of shelf placement: Hanging  
Width: 20.9 cm  
Depth: 7.69 cm  
Number of products included: 1  
EAN: 48 95229 10839 4  
Gross weight: 1.068 kg  
Net weight: 0.387 kg  
Tare weight: 0.681 kg

Product dimensions

Height: 20.35 cm  
Width: 19 cm  
Depth: 5.15 cm  
Weight: 0.36 kg

Accessories

Others: 1 pcs hard carrying case  
Audio cable: 2.5-3.5 mm stereo cable, L=1.2 m  
Quick Start Guide  
Charging cable: USB-C cable, 500 mm  
Included adapters: Aeroplane adapter

Design

Colour: Black  
Wearing style: Headband  
Foldable design: Flat  
Ear coupling material: Synthetic leather  
Ear fitting: Over-ear  
Earcup type: Closed-back

Telecommunication

Microphone for call: 2 mics  
ENC microphone

UPC

UPC: 8 40063 20164 4

ANC features

ANC technology: Hybrid, ANC Pro+  
Awareness mode  
Adaptive ANC  
Microphone for ANC: 4 mic  
ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant  
Voice assistant activation: Manual  
Voice assistant support

