

PHILIPS

Portable MP3-CD
Player

MP3-CD playback

EXP2545



Enjoy skip-free MP3 music

Get into your groove with the eXp2545 MP3-CD players and enjoy 7.5 hours of skip-free music on one MP3-CD. A classic favourite, it comes with LCD display and is a great choice for easy and hassle-free music enjoyment on the go

Jogproof

- 100-second Magic ESP™

Play your CDs and MP3-CDs

- Play CD, CD-R and CD-RW discs
- Enjoy 7.5 hours of music on one MP3-CD

Enhanced bass performance


- Dynamic Bass Boost for deep and dramatic sound

Highlights

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume

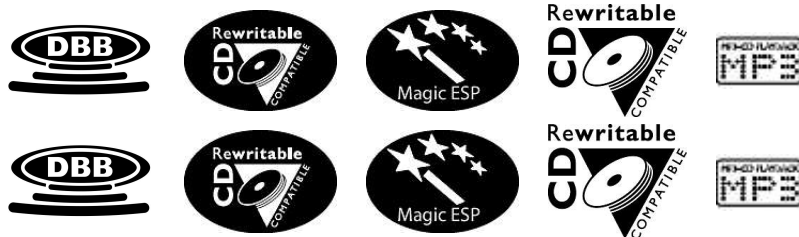

settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Sound

D/A converter: 1-bit

Frequency response: 20 - 20 000 Hz

Output Power: 2 x 4mW RMS

Sound Enhancement: Dynamic Bass Boost

Signal to noise ratio: > 85dB

Volume Control: digital

Connectivity

DC in: 4.0 mm, 4.5V, centre +

Headphone: 3.5 mm

Convenience

Display Type: LCD

Indications: album number, battery status, Cd functions, DBB, ESP, time, track

Accessories

Headphones

Included accessories: User Manual

Dimensions

Master carton quantity: 5

Packaging Depth: 45 mm

Product dimensions (WxDxH):

140x140x27.5mm

Packaging Height: 272 mm

Packaging type: Clamshell

Packaging Width: 196 mm

Master carton depth: 260 mm

Master carton weight: 2.39 kg

Master carton height: 244 mm

Master carton width: 305 mm

Product weight: 0.38 kg

Audio Playback

Disc Playback Modes: Hold, Next/Previous Album Search, Next/Previous Track Search, Repeat Play, Shuffle Play

Playback Media: MP3-CD, CD, CD-R, CD-RW

MP3 bit rates: 32 - 320 kbps

Electronic Skip Protection(CD): 45 seconds

File systems supported: ISO-9660, Joliet

Magic ESP (MP3-CD): 100 seconds

Battery

Type: AA, LR6, UM3 (not included)

