

Philips  
5.1 Home theater

3D Blu-ray

HTS3564



## Powerful cinematic sound with deep bass

### With Blu-ray 3D

Bring the power of the cinema into your home! Pump up your home entertainment experience with powerful speakers with two Bass tubes offering powerful 1000W surround sound and immersive 3D Blu-ray Disc playback.

#### **Great listening experience**

- 1000W RMS power delivers great sound for movies and music
- Powerful speakers with double basspipes for great sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound

#### **Designed to enhance your cinema at home**

- Modern design to complement your home environment

#### **Connect and enjoy all your entertainment**

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DivX Plus HD Certified for high definition DivX playback
- Optional WiFi accessory to wirelessly connect to internet
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- Access your favorite YouTube videos & Picasa photos\* easily

# PHILIPS


# Highlights

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Dolby TrueHD and DTS-HD

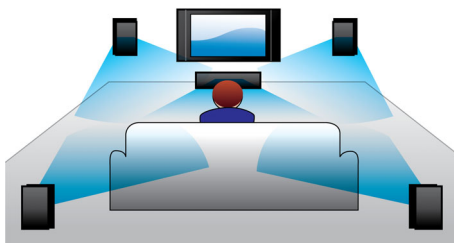

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Double bass sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of

online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 166 W
- Satellite speaker output power: 4 x 166 W
- Subwoofer output power: 166 W
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC)

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW,

DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

## Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 180 W
- Power supply: 220-240V
- Standby power consumption: < 0.9 W

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 161 x 95 x 92 mm
- Center Speaker Weight: 0.77 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 87 x 161 x 95 mm
- Front Speaker Weight: 0.56 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 95 x 161 x 87 mm
- Rear Speaker Weight: 0.5 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 196 x 392 x 342.2 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 6.3 kg
- Packaging (W x H x D): 467 x 361 x 372 mm

## Accessories

- Included accessories: 2 x AAA Batteries, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet



Issue date 2015-08-07

Version: 1.0.2

12 NC: 8670 000 98856  
EAN: 08 71258 16723 17

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To upgrade for access to YouTube and Picasa, visit  
[www.philips.com/support](http://www.philips.com/support)

\* The YouTube video playback feature on your home theater is  
designed to work with stable internet services. If your internet  
connection or access to YouTube is slow or unstable, the feature  
may not function properly.