



Philips
Micro music system

CD, MP3-CD, USB, FM
Desktop or wall-mount option
20W max



MCM2250

Sound system that fits your home

Obsessed with sound

Enjoy great music from multiple sources. Listen to MP3-CDs and the radio, or to portable devices via Audio in and USB. Mount the Philips MCM2250 micro system on a wall, or place it on a tabletop with its 2-in-1 stand - it fits into any home

Enrich your sound experience

- 20W RMS maximum output power
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control

Enjoy your music from multiple sources

- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback

Design that blends into your interior

- Wall-mountable option for flexible placement
- Compact design fits any space, any lifestyle
- Stylishly sleek and compact design

PHILIPS

Micro music system
CD, MP3-CD, USB, FM Desktop or wall-mount option, 20W max

Specifications

Sound

- Volume control: up/down
- Maximum output power (RMS): 20 W
- Sound Enhancement: Digital Sound Control

Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.75" woofer
- Speaker types: bass reflex speaker system

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)

Connectivity

- Headphones: 3.5 mm
- USB: USB host
- Audio in (3.5 mm)

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: slot

Accessories

- Included accessories: AC-DC Adapter, FM antenna
- Remote control: 21-key remote
- User Manual: Multi-language

Dimensions

- Set dimensions (W x D): 420 x 99 mm
- Set height (with stand): 223 mm
- Packaging width: 460 mm
- Packaging height: 142 mm
- Packaging depth: 265 mm
- Gross weight: 4.2 kg
- Net weight: 3.3 kg

Power

- Power supply: 110-240V, 50/60 Hz



MCM2250/12


Highlights

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

Wall-mountable

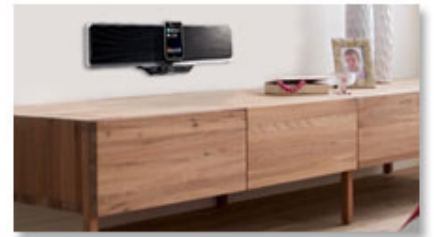

The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalising technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.



Issue date 2015-01-19

Version: 1.0.6

12 NC: 8670 001 05527
EAN: 87 12581 69443 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com