



Philips  
Wireless home speaker

Wi-Fi. Multi-room audio  
DTS Play-Fi compatible  
Connects with voice assistants  
Built-in LED



TAW6505

## Bigger sound. Any room.

This powerful wireless speaker gives you 80 W of rich sound — on its own or as part of a multi-room setup. You get stereo sound packed with detail, perfect synchronisation and easy control whether connecting to your TV or other speakers.

### Multi-room audio and Ambilight

- DTS Play-Fi. High-quality multi-room audio
- Rich sound in any room. Perfect syncing between rooms
- Built-in LED light. Works with Philips Ambilight TV
- 2 x 3.5" woofers, 2 x 1" tweeters, 80 W output power
- Two passive radiators for powerful bass

### Unpack. Connect. Enjoy

- Connects to all of your devices
- Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast
- Spotify Connect. Tidal. Deezer. It's all here
- AC-powered. Dimensions: 350 x 132 x 151 mm

### At home in your home

- Multi-room setup via Philips Sound or Play-Fi app
- Boost the sound of your smart assistant speakers
- Connects to your favourite voice assistant-enabled devices


# PHILIPS

Wireless home speaker  
Wi-Fi. Multi-room audio DTS Play-Fi compatible, Connects with voice assistants, Built-in LED

TAW6505/10

# Highlights

## Play-Fi. Multi-room and more

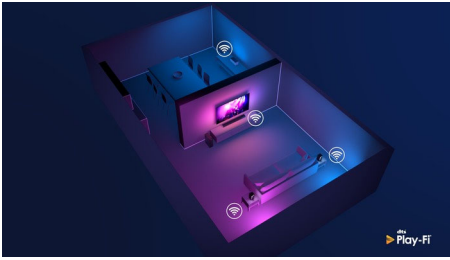

This wireless speaker is DTS Play-Fi compatible, so you can easily sync with other Play-Fi-compatible speakers for multi-room audio. If your soundbar supports Play-Fi Surround, you can even make this speaker part of a true surround-sound setup on movie night.

## Rich sound in any room

Two woofers, two passive radiators and two tweeters combine to give you room-filling sound with powerful bass and sparkling treble. Wi-Fi streaming gives you the highest-quality signal and ensures that the audio syncs perfectly between speakers or rooms.

## Bigger sound for smart speaker

Ask Alexa-enabled devices or any device that has the Google Assistant to play music through the speaker. Turn the volume up for a party. Turn it down late at night. Get the news and more. All completely hands-free.

## All your streaming services

Whether you're streaming directly from Spotify or accessing hi-res albums on Tidal via the Play-Fi app, this speaker streams it all.

From party playlists in the lounge to podcasts in the office, everything you love will sound richer, deeper and clearer.

## Connects to all of your devices

With Wi-Fi, Bluetooth, Google Chromecast and Apple AirPlay 2 compatibility you can stream your favourite music and podcasts however you want. If you use iOS devices you can use Siri to control the speaker with your voice.

## Works with Ambilight

This wireless speaker doesn't just do music, it does Ambilight too. Simply press the Ambilight link button on the speaker to connect to your TV. Enjoy a deeper Ambilight effect while you're watching movies or gaming or while listening to music.



# Specifications

## Sound

- Output Power: 80 W at 10% THD
- Volume control: up/down
- Loudspeaker Enhancement: Passive radiators x 2

## Speaker

- No. of sound channels: 2.0
- Tweeter: 1" x 2
- Woofer: 3.5" x 2

## Power

- Power supply: 100 - 240 V AC, 50/60 Hz
- Standby mode

## Convenience

- User Interface: Built-in LED: multi-colour

## Connectivity

- DTS Play-Fi Multi-room
- Spotify Connect
- Chromecast built in
- Works with Ok Google

- Works with Alexa
- Works with Apple Airplay 2
- Audio in (3.5 mm)
- Bluetooth profiles: SBC 4.0, A2DP, AVRCP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Network connections: Wi-Fi - 802.11 ac, Wi-Fi - 802.11 b/g/n
- Network setup: Play-Fi APP
- Wi-Fi antenna: Built-in

## Accessories

- Included accessories: AC Power Cord, World Wide Warranty leaflet, Quick start guide

## Dimensions

- Product dimensions (WxDxH):  
350 x 132 x 151 mm
- Product weight: 3.5 kg
- Packaging dimensions (WxDxH):  
388 x 211 x 203 mm
- Weight incl. Packaging: 4.4 kg



Issue date 2022-02-10

Version: 7.1.2

12 NC: 8670 001 67933  
EAN: 48 95229 10986 5

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)