

PHILIPS

Soundbar speaker

2.1 CH wired subwoofer

Bluetooth®

HDMI ARC

120 W

HTL2163B



Powerful sound for any TV with subwoofer

Enjoy your films and music with Virtual Surround Sound and deep bass via just one cable! This Philips Soundbar with dedicated subwoofer enriches your home entertainment when used with TVs, BD/DVD players, gaming consoles and MP3 players

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies


- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action

Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote

Highlights

Virtual Surround Sound

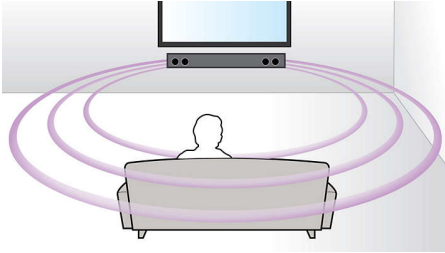

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

External subwoofer




External subwoofer adds thrill to the action

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Dolby Digital

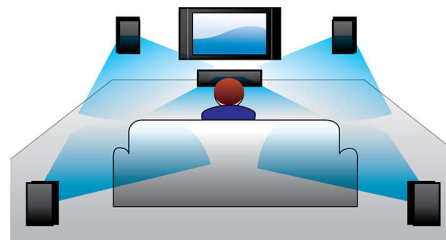

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Bluetooth



Bluetooth is a short-range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favourite music from any smartphone, tablet or laptop, including the iPod or iPhone, with a Bluetooth-enabled speaker.



Specifications

Sound

Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode

Sound System: Dolby Digital

Subwoofer output power: 60 W

Speaker output power: 30 W x 2

Total Power RMS @ 10% THD: 120 W

Loudspeakers

Loudspeaker types: Integrated with main unit

Subwoofer freq range: 45 - 200 Hz

Subwoofer driver: 1 x 5.25" woofer

Subwoofer type: Passive

Subwoofer impedance: 3.6 ohm

Speaker Drivers per side: 1 woofer, 1 Mylar tweeter

Speaker Impedance: 8 ohm

Tweeter Impedance: 16 ohm

Connectivity

Integrated Connections: Bluetooth

Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC)

iPod/iPhone: via 3.5 mm Audio In, via Bluetooth

Top connections: Audio In (3.5 mm), USB 2.0

Convenience

EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

Power

Power consumption: 30 W

Power supply: 110-240V, 50/60 Hz

Standby power consumption: < 0.5 W

Accessories

Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AC Adapter

Design

Wall mountable

Dimensions

Main Unit (W x H x D): 843 x 52 x 60 mm

Weight incl. Packaging: 6.3 kg

Main Unit Weight: 1.4 kg

Packaging (W x H x D): 400 x 292 x 349 mm

Subwoofer (W x H x D): 165 x 240 x 295 mm

Subwoofer Weight: 2.5 kg

Subwoofer cable length: 3 m

Sustainability

Packaging: 80% recycled corrugated board, Soya based ink

