

Philips
DVD home theater system



HTS6515D

Complete home theater from fewer speakers

with Ambisound

Featuring Ambisound, this exquisitely slim system delivers embracing 5.1 surround sound from just two speakers, in any sort of room. Also wall-mountable, it provides excellent sound and picture quality and fits stylishly into any home.

Hear and see

- Ambisound for 5.1 surround sound from fewer speakers
- FullSound™ to bring CD listening experience to MP3
- 1080p HDMI upconverts to high definition for sharper images

Live

- Simple to set up on the wall or tabletop

Connect

- Integrated dock for iPod for playback with on-screen control
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- MP3 Link plays music from portable media players

Use

- EasyLink controls all EasyLink products with a single remote




asimpleswitch.com

PHILIPS

sense and simplicity


Highlights

Ambisound

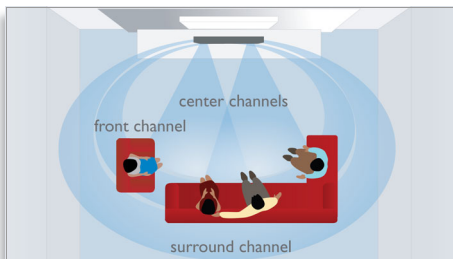


Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Integrated dock for iPod

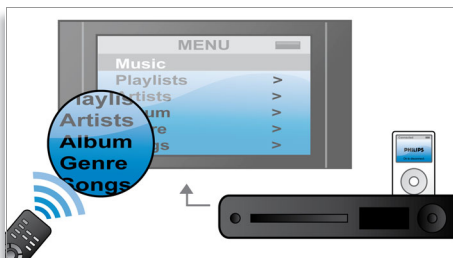


An integrated dock lets you play movies, music and photos from your iPod. What's more, you can control the iPod and browse through its contents on your TV screen - all with the home theater system's remote. Doing away with cumbersome cables and connections, the integrated dock brings portable entertainment into your home - with absolute ease.

Hi-Speed USB 2.0 Link

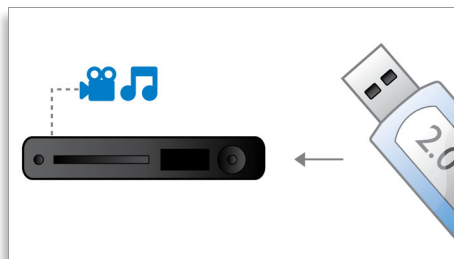

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

FullSound™

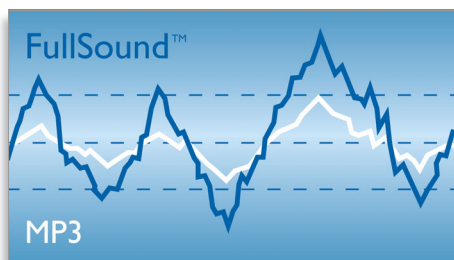

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

1080p HDMI



1080p HDMI upconversion delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Progressive Scan

Sound

- Sound System: Ambisound, Dolby Digital, Dolby Prologic II, DTS, Stereo
- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, Sports, News

Loudspeakers

- Loudspeaker types: 2x Horizontal Speakers
- Speaker Drivers: 3 x 2.5" Full Range woofers
- Speaker Impedance: 4, 8 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 30-180 Hz

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture enhancement: Slideshow with music playback, Rotate, Zoom

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front / Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Interconnect (to Power Box)
- Subwoofer (Power Box): Coaxial Digital input, AUX In (cinch, 2 pairs), FM Antenna, Easy Fit Speaker connectors, Interconnect (to Main Unit)

Dimensions

- Set dimensions with stand (W x H x D): 419 x 48 x 214 mm
- Set weight (with stand): 1.7 kg
- Speaker width (with stand): 336 mm
- Speaker height (with stand): 115 mm
- Speaker depth (with stand): 130 mm
- Speaker weight (with stand): 1.72 kg
- Subwoofer dimensions (W x H x D): 295 x 443 x 295 mm
- Subwoofer Weight: 9.5 kg
- Packaging dimensions (W x H x D): 590 x 493 x 366 mm
- Weight incl. Packaging: 20 kg

Accessories

- Included Accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, FM antenna, Interconnect cable, Speaker Cables, Power cord, Wall mounting bracket, Product Registration Card, iPod adaptors (4x)

Power

- Power supply: 120V, 60Hz
- Standby power consumption: <1 W



Issue date 2009-06-15

Version: 2.0.6

12 NC: 8670 000 36262
UPC: 6 09585 14685 3

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com