




Philips Micro Music System

Internet radio, DAB+

Bluetooth, Spotify Connect
USB, MP3-CD
50W

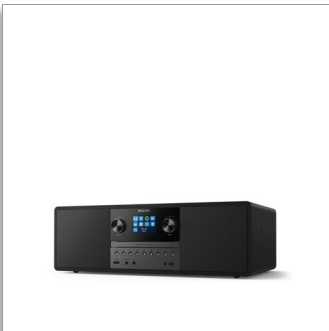

TAM6805

All in one

With internet radio, Spotify Connect, Bluetooth, and a CD player, this compact all-in-one micro system can play it all. You can also connect other sources via audio-in or USB. Enjoy richer sound from a system that fits into almost any room.

Rich sound for your music

- Compact all-in-one micro system
- Integrated bass-reflex speaker system
- 2x 3" full-range drivers. 50 W maximum output power
- Digital Sound Control. Choose a preset sound style

More to love

- Classic looks. Modern functions
- All your music, podcasts, and more
- Internet radio. DAB+ FM radio
- USB port. Connect a legacy source or charge a mobile
- Spotify Connect. Bluetooth. Audio-in. CD player

Fill the room with tunes

- At home in your home
- AC-powered. Remote control
- Main unit dimensions: 420x262x140 mm

PHILIPS

Highlights

All your music



From classic tunes to the latest podcasts. You can stream Spotify's best-quality signal over Wi-Fi with Spotify Connect. You can also stream playlists and more via Bluetooth, play CDs, or connect to other sources via audio-in or USB.

Internet radio, DAB+ FM



Internet radio is your ticket to thousands of global stations broadcasting every conceivable

kind of program. The digital tuner delivers crystal-clear reception, and you can set presets for your favorite internet, DAB+, or FM stations.

Rich sound for your music



Two speakers are built right into the cabinet of this all-in-one micro system. You get clear sound and good bass from the full-range drivers and bass-reflex ports. The 50 W maximum output is perfect for kitchens, offices, and smaller living areas.

Classic looks

The wooden cabinet and integrated speakers recall the design of retro hi-fi separates. A clear color display shows the source or station, as well as album art and song information.

Textured dials control volume, source selection, and tuning.

Digital Sound Control

Hip-hop or choral, symphony or rock opera? Whatever you love, this micro system's Digital Sound Control function lets you enjoy it more. Pick from preset sound styles designed to bring out the best in your music.

At home in your home

This AC-powered micro system looks great in any room. Bluetooth wireless range is 10 m, and you can charge a smart device via the USB port. An easy-to-use remote puts key functions at your fingertips.

Specifications

Sound

- Maximum output power (RMS): 50W
- Sound enhancement: digital sound control, bass reflex speaker system
- Sound mode: Powerful, Clear, Bright, Warm, Balanced
- Volume control: rotary
- Frequency response: 50-20000 Hz, ± 3 dB
- Speaker impedance: 6 ohm

Loudspeakers

- Number of sound channels: 2.0
- Driver configuration: Full range
- Number of full range drivers: 2
- Full range driver diameter: 3"

Audio playback

- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- Audio supported formats: MP3
- Max sample rate: 24-bit/44.1kHz

Tuner/Reception/Transmission

- Tuner type: Digital
- Tuner bands: FM, DAB/DAB+, Internet Radio
- Antenna: Detachable pigtail (75 ohm)
- Station presets: 20 FM, 20 DAB, 40 Internet radio/Podcasts, 10 Spotify
- RDS: Yes.

Connectivity

- WiFi: 802.11 a/b/g/n
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: 10M (free space)
- Bluetooth version: 4.2
- USB: USB host, Max. 2A Charging
- Audio in: 3.5mm
- Headphone jack: 1x 3.5mm

- Smart Home: Spotify Connect
- DLNA Standard: n.a.

Convenience

- Clock: On main display, 24/12 hour display
- Clock update: DAB / Internet radio
- Display screen type: 2.4" TFT
- Loader type: tray
- Alarms: Yes, Buzzer, Internet radio, DAB, FM
- No. of alarms: 2
- Sleep timer
- Remote Control

Design

- System components: Main unit
- Wall mountable: No

Compatibility

- Smartphone/tablet APP control: No

Power

- Power supply: 100-240VAC, 50/60Hz

Accessories

- Included accessories: AC power cord (x2), FM antenna, Remote Control, 2 x AAA Batteries, Quick start guide, Warranty Leaflet
- Power cord: Length 1.5 m

Dimensions

- Main Unit (W x H x D): 420 x 140 x 262 mm
- Main Unit Weight: 4.43 kg

Packaging dimensions

- EAN: 48 95229 10984 1
- Packaging dimensions (W x H x D): 49.2 x 21.6 x 33.8 cm
- Gross weight: 6.07 kg
- Nett weight: 4.7 kg
- Tare weight: 1.37 kg
- Number of products included: 1
- Packaging type: Box
- Type of shelf placement: Standing



Issue date 2022-07-05

Version: 10.0.2

12 NC: 8670 001 67931
EAN: 48 95229 10984 1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com