



Philips PixelPop
wireless portable speaker

Bluetooth®

Splash proof
By-packed strap
8hrs, rechargeable battery



BT110A

Small size, big bass

This compact BT110 has all the acoustic essentials that normally come only with a big speaker. That's why it sounds clear and loud with surprising good bass. Oh, it's also splash-proof and has a strap. It's ready for anyplace and anytime.

Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion free music
- Passive radiator for better low frequency performance

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere
- Splash-proof design ideal for outdoor use (IPX4)
- Carry it anywhere with the by-packed finely knitted strap

Simplicity in use

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth


PHILIPS

wireless portable speaker
Bluetooth® Splash proof, By-packed strap, 8hrs, rechargeable battery

BT110A/00


Highlights

Wireless music streaming

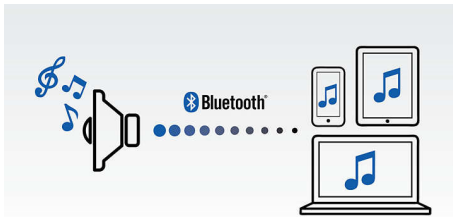

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Anti-clipping function

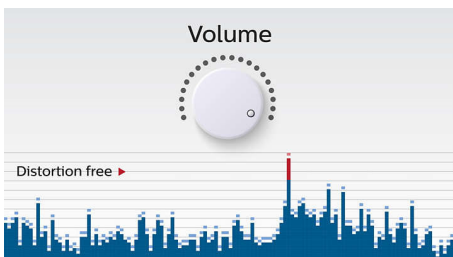


Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

Splash-proof design



Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, making music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

by-packed finely knitted strap

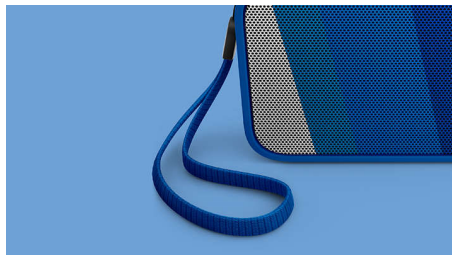

Our by-packed strap is made of a vibrant and finely knitted fabric sleeve making it stylish enough to be a fashion accessory.


Built-in microphone



With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting.

Or, call your friend from a party. Either way, it works great.

Built-in rechargeable battery

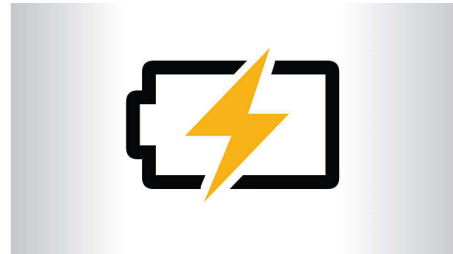

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

Audio-in



Audio-in for easy connection to almost any electronic device

Advanced audio performance

Advanced audio performance with a compact design

Passive radiator

Passive radiator for better low frequency performance

wireless portable speaker
Bluetooth® Splash proof, By-packed strap, 8hrs, rechargeable battery

BT110A/00

Specifications

Sound

- Output power (RMS): 4W
- Sound System: Mono
- Speakers: 1 x 1.5" full range driver and passive radiator

Design and finishing

- Color: Blue

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 20m or 66ft
- Audio in (3.5mm)
- USB charging

Convenience

- Splash proof: IPX 4
- Built-in microphone: for speaker conference

Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Power

- Battery type: lithium (built-in)
- Operating time on battery: 8 hour(s)

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide, carrying strap

Dimensions

- Weight incl. Packaging: 0.25 kg
- Product dimensions (WxDxH): 98 x 35 x 77 mm
- Packaging dimensions (WxDxH): 108 x 84 x 145 mm
- Product weight: 0.15 kg



Issue date 2024-03-24

Version: 3.1.6

EAN: 48 95185 62006 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com