



Philips CitiScape Indies  
Headphones with mic

8.6mm drivers/closed-back

In-ear  
Flat cable

**SHE7055PP**

## Clear natural sound

with anti-tangle flat cable

Add zest to your life with CitiScape Indies' urban-cool colors, inspired by the most vibrant cities and hoods. Soft, noise-isolating ear caps seal in the amazingly clear sound and dynamic bass for a comfy and immersive experience.

### **Stay connected to your music and friends**

- Switch from music to phone calls with built-in microphone

### **Total sound immersion on the move**

- Finely tuned 9mm drivers deliver clear sound & dynamic bass
- Noise isolating ear caps to block out the city's noise

### **Design for convenience**

- Flat anti-tangle cable with slider to keep you tangle-free
- Rubberized cable relief enhances durability

### **Supreme comfort**

- Choose from 3 pairs of ear caps for a perfect fit
- Ultra small and snug earphones for a comfy fit

# PHILIPS


# Highlights

## Built-in microphone



Your CitiScape headphones feature a built-in microphone so you can easily switch from listening to music to taking phone calls. It's a breeze staying connected with your music – and with the people who matter most to you.

## Choice of 3 pairs of ear caps

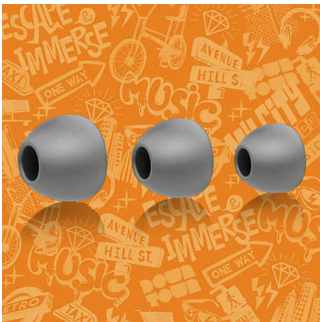

Your CitiScape in-ear headphones come with 3 pairs of ear caps so you can treat your ears to a perfect fit. The ear caps come in 3 sizes, from small to large – and are all stylish yet superbly comfortable.

## Finely tuned 9mm drivers




Finely tuned 9mm drivers deliver clear sound & dynamic bass

## Flat cable & slider



Flat anti-tangle cable with slider to keep you tangle-free

## Noise isolating ear caps

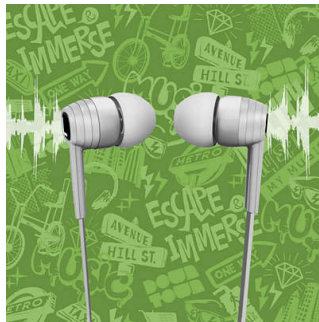

Noise isolating ear caps to block out the city's noise

## Rubberized cable relief

Rubberized cable relief enhances durability to help extend the life of your headphones, a soft rubber where the cable connects the ear shell protects the connection from damage through repeated bending.

## Ultra-small earphones

Ultra small and snug earphones for a comfy fit

# Specifications

## Sound

- Acoustic system: Closed
- Frequency response: 8 - 23 000 Hz
- Diaphragm: PET
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Type: Dynamic
- Voice coil: CCAW
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB
- Maximum power input: 25 mW

## Connectivity

- Microphone: Built-in microphone
- Type of cable: OFC
- Cable Connection: two-parallel, symmetric
- Finishing of connector: chrome-plated
- Cable length: 1.2 m

## Design

- Color: Purple



Issue date 2024-03-08

Version: 2.1.5

UPC: 4 89518 56103 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)