




**Philips
Micro Music System**

Internet radio

Bluetooth, Spotify Connect
USB, MP3-CD
100W

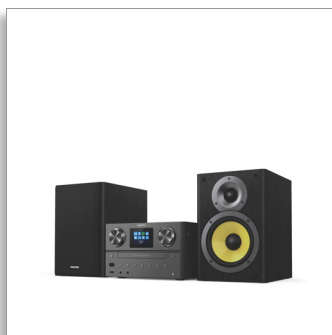

TAM8905

Love it all. Play it loud.

Fill your room with the sounds you love. With internet radio, Spotify Connect, Bluetooth, and a CD player, this attractive micro system can play it all. You can also tune in to FM radio—all in big 100 W sound.

Big sound for your music

- All your music, podcasts, and more
- 5.25" woofer. Dome tweeters. 100 W maximum output power
- Bass-reflex loudspeakers. Crisp highs and rich low tones
- Digital Sound Control. Choose a preset sound style

Fill the room with tunes

- AC-powered. Remote control
- At home in your home
- Main unit dimensions: 230x145x262 mm
- Speaker dimensions: 174x260.6x229 mm

More to love

- Classic looks. Modern functions
- Internet radio. FM radio
- Spotify Connect. Bluetooth. Audio-in. CD player
- USB port. Connect a legacy source or charge a mobile

PHILIPS

Highlights

All your music



From classic tunes to the latest podcasts. You can stream Spotify's best-quality signal over Wi-Fi with Spotify Connect. You can also stream playlists and more via Bluetooth, play CDs, or connect to other sources via audio-in or USB.

Internet radio. FM radio



Internet radio is your ticket to thousands of global stations broadcasting every conceivable kind of program. The digital tuner delivers crystal-clear reception, and you can set presets for your favorite internet or FM stations.

Crisp highs and rich low tones



Bookshelf-style loudspeakers give you great sound with crisp highs from the dome tweeters and powerful bass from 5.25" woofers and bass-reflex ports. A 100 W maximum output brings big sound to any room. Perfect for a lounge or open-plan living space.

Classic looks

The matte aluminum central unit and wooden speaker cabinets recall the design of hi-fi separates. A clear color display shows the source or station, as well as album art and song information. Textured dials control volume, source selection, and tuning.

Digital Sound Control

Hip-hop or choral, symphony or rock opera? Whatever you love, this micro system's Digital Sound Control function lets you enjoy it more. Pick from preset sound styles designed to bring out the best in your music.

At home in your home

This AC-powered micro system looks great in any room. Bluetooth wireless range is 10 m, and you can charge a smart device via the USB port. An easy-to-use remote puts key functions at your fingertips.

5.25" woofer. Dome tweeters

5.25" woofer. Dome tweeters. 100 W maximum output power

AC-powered. Remote control

AC-powered. Remote control

Main unit dimensions

Main unit dimensions: 230x145x262 mm

Speaker dimensions

Speaker dimensions: 174x260.6x229 mm

Spotify Connect. Bluetooth

Spotify Connect. Bluetooth. Audio-in. CD player

USB port

USB port. Connect a legacy source or charge a mobile



Specifications

Sound

- Sound enhancement: digital sound control, bass reflex speaker system
- Volume control: rotary
- Frequency response: 50-20000 Hz, ± 3 dB
- Sound mode: Powerful, Clear, Bright, Warm, Balanced
- Maximum output power (RMS): 100W
- Speaker impedance: 4+12 ohm

Loudspeakers

- Driver configuration: 2-way
- Number of sound channels: 2.0
- Number of tweeters: 2
- Number of woofers: 2
- Tweeter diameter: 25mm
- Woofer diameter: 5.25"

Connectivity

- USB: USB host, Max. 2A Charging
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: 10M (free space)
- Headphone jack: 1x 3.5mm
- Audio in: 3.5mm
- WiFi: 802.11 a/b/g/n
- DLNA Standard: n.a.
- Smart Home: Spotify Connect

Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- Audio supported formats: MP3
- Max sample rate: 24-bit/44.1kHz

Tuner/Reception/Transmission

- Antenna: Detachable pigtail (75 ohm)
- Tuner bands: FM, Internet Radio
- Station presets: 20 FM, 40 Internet radio/Podcasts, 10 Spotify
- RDS: Yes.
- Tuner type: Digital

Convenience

- Clock: On main display, 24/12 hour display
- Remote Control
- Loader type: tray
- Sleep timer
- Display screen type: 2.4" TFT
- Clock update: Internet radio
- No. of alarms: 2
- Alarms: Yes, Buzzer, Internet radio, FM

Compatibility

- Smartphone/tablet APP control: No

Power

- Power supply: 100-240VAC, 50/60Hz

Packaging dimensions

- Height: 31.6 cm
- Packaging type: Box
- Type of shelf placement: Standing
- Width: 62 cm
- Depth: 33.5 cm
- Number of products included: 1
- Gross weight: 9.948 kg
- Nett weight: 8.22 kg
- Tare weight: 1.728 kg
- UPC: 8 40063 20337 2

Accessories

- Included accessories: AC power cord (x2), FM antenna, Remote Control, 2 x AAA Batteries, Quick start guide, Warranty Leaflet
- Power cord: Length 1.5 m

Design

- Wall mountable: No
- System components: Main control unit, Speakers

Dimensions

- Main Unit (W x H x D): 230x145x262 mm
- Main Unit Weight: 2.17 kg
- No. of speaker unit: 2
- Set (W x H x D): 578 x260.6x262 mm
- Set Weight: 7.62 kg
- Speaker Unit (W x H x D): 174x260.6x229 mm
- Speaker Weight (per Unit): 2.716 kg



Issue date 2024-04-06

Version: 1.1.1

UPC: 8 40063 20337 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com