



Philips  
Linea V design cordless  
phone

1.8" display/ white backlight  
Handset speakerphone



M3501B

## The finest line to connect

Design takes centre stage with the precision-engineered Philips LINEA V, with edgy form harmonising with an iconic silhouette. Elegant architecture supports smart functions and comfort, making the LINEA V a must-have masterpiece.

### Eco-conscious product

- Zero power emission when ECO+ mode is activated

### Ultimate calling experience

- High contrast 4.6cm (1.8") 2-line reverse display
- HQ-Sound: high quality acoustic engineering for superb sound
- Handset speakerphone allows you to talk handsfree
- Save up to 50 favorite contacts in your phonebook
- Privacy settings: call block & call barring
- Stay connected during power cuts via micro-USB power bank
- Enjoy 10 hours of talk time on a single charge

### Exquisite design with high quality execution

- Slender design and compact footprint for space efficiency
- Calibrated, seamlessly integrated keys for precise dialing
- Charge handset either way around

**PHILIPS**

# Highlights

## 4.6cm (1.8") reverse display



High contrast, white-on-black reverse LCD display ensures easy reading and also blends well with the overall sleek design language.

## 50-name phone book


Save up to 50 favorite contacts in your phonebook.

## Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke whenever you are dialing a number or entering a phonebook contact. Detailed study of keypad materials and structures, as well as extensive user tests result in the right balance between the key pressing force and the key response to ensure precise dialing.

## Compact footprint

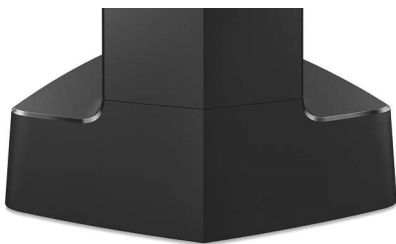


Slender design and compact footprint for space efficiency

## ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

## Handset speakerphone

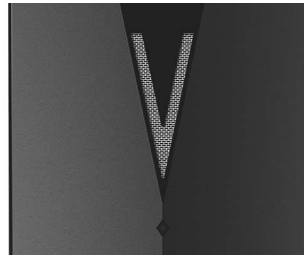

Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Hassle-free charging

Charge handset either way around

## HQ-Sound



HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon

decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything - high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## Micro-USB connector

The integrated micro-USB connector socket on the base unit ensures that the phone can stay powered via a pre-charged power bank, allowing you to make calls even if the power cuts out. The power bank charging feature supports most power bank products which are able to provide a minimum output current below 85mA without automatic shutdown. Power bank sold separately.

## Privacy settings

Value your privacy and quiet at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you chose to blocked, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls to specific numbers starting with certain digits (for example, pay per call numbers).

## Up to 10 hours talk time

Enjoy 10 hours of talk time on a single charge

# Specifications

## Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound

## Convenience

- Alarms: Alarm Clock
- Menu structure in the handset: List Menu
- Base Station keys: Paging key
- Number of keys: 20
- Speakerphone - talk handsfree
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indication
- Backlit keypad: Soft Amber
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Multi base capability: 1
- Multi handset capability: Up to 4
- Battery charge indication
- Programmable hot keys: Key 1 and 2
- Keypad lock
- Key tone on/off
- Auto hang up
- Illuminated keypad
- Up to 10 hrs talk time
- Up to 180 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; in door <50m
- Block callers/ Blacklist\*: Restrict the phone from ringing on specific incoming numbers
- Event notifications: For events status

## Power

- Battery Capacity: 300 mAh
- Mains power: AC 100-240V ~50/60Hz

- Battery type: 2xAAA NiMH Rechargeable
- Power Consumption: < 0.7 W

## Packaging dimensions

- Height: 22.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 12.1 cm
- Depth: 10.1 cm
- Number of products included: 1
- EAN: 48 95185 63161 5
- Gross weight: 0.518 kg
- Nett weight: 0.364 kg
- Tare weight: 0.154 kg

## Picture/Display

- Display size: 4.6cm / 1.8"
- Backlight color: White
- Display type: 1-line dot matrix + 1-line numeric + hard icons
- Backlight: Yes

## Memory Capacity

- Call log entries: 20 entries
- Phonebook: 50 names and numbers
- Redial List Capacity: 10 entries
- Phonebook store in the base

## Security

- Transmission encryption : Yes

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- Eco+

## USB Charging

- Yes

## Network Features

- Compatible: GAP



Issue date 2024-03-22

Version: 1.1.2

EAN: 48 95185 63161 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\*\*This feature requires additional subscription of Caller ID service.  
Please check with your local network operator for details.