

Philips
Mini Hi-Fi System

DVD

FWD39



DVD and MP3-CD Playback

Savor the magic of movies and music on the FWD39 with DVD and MP3-CD playback. DTS and Dolby Digital ensure a rich movie experience. Enjoy music powerfully enhanced by MAX Sound, 3-Way Speaker System and 1800W PMPO.

Enrich your movie experience

- 3 DVD Changer
- Progressive Scan component video for optimized image quality
- Dolby Digital for movies or concerts in full surround sound

Impressive power and bass

- 3-way Speaker System with MAX bass port
- 2x50W RMS/1800W PMPO

Longer listening, greater enjoyment

- Play DVD, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Dual Logic Tape Deck with auto replay

Extensive sound features


- MAX Sound for instant power boost
- 3-step Dynamic Bass Boost for deep bass experience
- Digital Sound Control for optimized music style settings
- Virtual Ambience Control provides simulated sound settings

PHILIPS
sense and simplicity

Highlights

3 DVD changer 3 DVD Changer

Progressive Scan

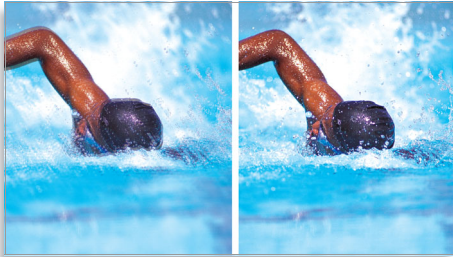

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Dolby Digital Surround

Because Dolby Digital and DTS, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

3-way spk sys with MAX port

3-way Speaker System with MAX bass port

2x50W RMS/1800W PMPO

2x50W RMS/1800W PMPO

Play DVD, MP3, WMA, Picture CD



The Philips player is compatible with most DVD and CD discs available in the market.

DVD, (S)VCD, MP3-CD, WMA-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, especially much more sharpen picture than a VCD because of the higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

Dual Logic Tape Deck

Dual Logic Tape Deck with auto replay

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

3-step Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from level one to level three - at the

touch of a button! You can customize the bass level that fits your style. Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Virtual Ambience Control

Virtual Ambience Control (VAC) creates a virtual sound environment which digitally mimics the acoustic characteristic of special rooms or environments such as concert halls, the cinema, arcades, discos, etc. By realistically recreating the sound ambience of these different settings, VAC will dramatically enhance your enjoyment of your favorite music.



Specifications

Sound

- Output Power: 2x50W RMS / 1800W PMPO
- Sound Enhancement: MAX Sound, Dynamic Bass Boost 3 steps, Digital Sound Control, Virtual Ambience Control, Virtual Environment Control

Loudspeakers

- Main Speaker: 2" tweeter, 3 way, 5.25" woofer, Bass Reflex Speaker System, Piezo
- Number of Loudspeakers: 2

Video Playback

- Playback Media: DVD, DVD+RW, Picture CD, SVCD, Video CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, Resume Playback from Stop, Slow Backward, Slow Forward, Zoom
- DVD Region.: 3
- Loader Type: Motorised
- Number of Discs: 3
- Video Enhancement: Progressive Scan

Audio Playback

- Cassette Deck Technology: Logic
- Cassette Playback Modes: Automatic Stop, Electronic Speed Control
- Compression format: MP3, Windows Media™ Audio
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA
- Disc Playback Modes: 99-Track Programmable, Repeat/one/all/program, Repeat/one/disk/program
- Number of decks: 2

Audio Recording

- Recording Media: Tape
- Tape Recording Enhancement: Automatic Recording Level, CD Synchro Start Recording

Tuner/Reception/Transmission

- Auto digital tuning
- Station presets: 40
- Tuner Bands: FM Stereo, MW
- Tuner Enhancements: Auto Store, Easy Set (Plug & Play)

Connectivity

- Aux in: Line in
- Headphone: 3.5 mm
- Other connections: Composite video (CVBS) out, Digital output (cinch), FM Antenna, Microphone socket, MW Antenna, S-Video out, Subwoofer out, ComponentVideo out Progressive

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer
- Clock: On main display
- Display Type: FTD
- Eco Power Standby: 1 watt
- Karaoke: Echo control, Key control, MIC volume

Accessories

- Included Accessories: AC Power Cord, Component video cable (R/G/B), FM/MW Antenna, Video Cable, Batteries for remote control, Quick start guide, User Manual
- Remote control: 45-key
- Standard Package Includes: International Guarantee

Dimensions

- Main speaker dimensions (W x H x D): 248 x 310 x 195 mm
- Packaging dimensions (W x H x D): 611 x 411 x 440 mm
- Set dimensions (W x H x D): 265 x 310 x 367 mm
- Weight incl. Packaging: 15.6 kg

Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2009-08-09

Version: 9.0.12

12 NC: 9073 100 12319
EAN: 87 10895 86102 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com