


Philips  
InSight wireless HD baby  
monitor

• for iPhone/iPad

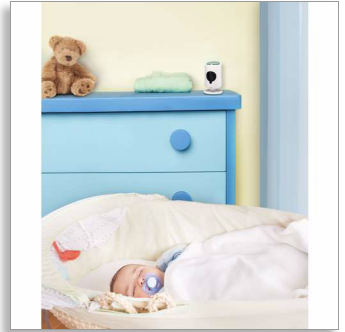

B120

# Always close to your baby

Watch from anywhere on your iPhone/iPad

The Philips InSight wireless HD baby monitor lets you watch and listen to your baby from your iPhone/iPad. Watch in crystal clear HD quality and with night vision you can watch your baby even in the dark.

## Stay close to your baby wherever you are

- Wi-Fi baby monitor for placement anywhere in your home
- Watch your baby on iPhone via free App on WiFi/3G/4G network
- HD video quality for crystal clear viewing
- Night vision mode to see baby clear in the dark

## Stay reassured with alerts and notifications

- Hear your baby continuously even when phone is locked
- Phone alerts when monitor detects noise/motion
- Parents talk to baby via iPhone/iPad
- Real time monitoring with temperature & humidity sensor
- Parents to share monitors in multi-user mode

## Easy, safe and secure

- Easy set-up of Wi-Fi baby monitor via QR code
- Encrypted direct networking for secure connection
- PVC-BFR free power cables and monitor

# PHILIPS

# Highlights


## Continuous audio streaming

InSight wireless HD baby monitor streams audio continuously even when your iPhone or iPad is locked or when you are docking or charging your iPhone or iPad.

## Easy set-up via QR code

Set-up is simple with the InSight app. Pair your In.Sight wireless HD baby monitor with your Wi-Fi network via the ingenious QR code set-up. The app will generate a QR code for your home Wi-Fi settings. Hold the iPhone or iPad with QR code in front of the monitor lens and the monitor will automatically pair with your Wi-Fi network, easily and instantly. You can even name your monitors so you can easily track each monitor.

## Encrypted direct networking

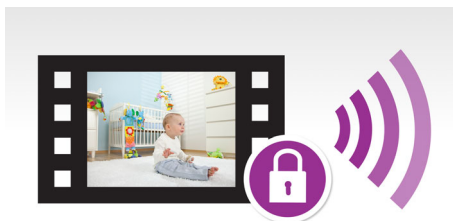

InSight wireless monitor uses highly secure encryption to provide you with privacy at all times. InSight wireless monitor uses a unique encryption key each time it makes a connection, providing you a highly secure connection each time you look at your loved ones.


## HD video quality



InSight wireless HD baby monitor allow you to watch your baby in vivid detail. View videos in high definition 720p quality. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for progressive scan or the sequential appearance of the lines

in each frame. With 720p resolution, videos are sharper and more true-to-life.

## Parents talk via iPhone/iPad

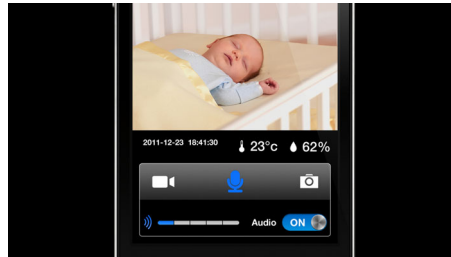

With InSight wireless HD baby monitor, you can talk to your baby anytime you want. Simply press "talk" on your iPhone or iPad and sing her a nursery rhyme. Watch as she falls asleep in your soothing voice.

## Multi-user mode

Share monitors with your spouse, family, friends and even your baby sitters. InSight app lets you share each monitor with two other users so that they have access to live videos and sound via their iPhone or iPad as well. You can even upgrade the app to share the monitor with up to 10 users.

## Night vision mode



Night vision mode allows you to see your baby's lovely face in the dark. Infrared light goes on for the monitor to capture clear black and white video when it is dark. Night vision mode switches on and off automatically, or you can adjust it manually.

## Noise and motion alerts

It's impossible to predict when something might happen to your baby. InSight wireless HD baby monitor keeps watching with adjustable noise and motion detection. You will be alerted anytime noise or motion is detected. Automatically receive push

notifications on your iPhone or iPad when the monitor detects motion or noise.

## Temperature & humidity sensor

Temperature and humidity sensors on InSight wireless HD baby monitor show temperature and humidity level on your iPhone or iPad. The humidity sensor measures humidity level, for instance, detecting dry air that may irritate baby's throat. The app will even alert you when the temperature is too high/low or the humidity is too dry/humid. Temperature and humidity range settings can be adjusted accordingly.

## PVC and BFR-free

InSight wireless HD baby monitor is free from brominated flame retardant (BFR) and polyvinyl chloride (PVC). It adheres to the stringent safety standards for infant utensils and is absolutely baby-proof, safe and eco-friendly.

## Watch your baby on 3G/WiFi/4G



InSight wireless HD baby monitor allow you to watch your baby on your iPhone or iPad wherever you are . Once you have downloaded the free Apple App and set up your In.Sight wireless baby monitor, you can access the video stream from your iPhone or iPad anywhere on 4G LTE, 3G or Wi-Fi networks. There's no limit to where and how you view your loved ones.

## Wi-Fi enabled baby monitor

Have ultimate peace of mind with InSight wireless baby monitor. It connects to Wi-Fi 801.11 bgn networks. Place the monitor right in your baby room, you can watch and hear your baby right from your iPhone or iPad wherever you are.



Night Vision



Tap and zoom



Noise and motion alerts



Temperature and humidity sensor



Multi-user mode



Easy set-up

# Specifications

## Lens & Sensor

- Sensor: 720p HD video image sensor
- Aperture: F2.8
- Digital zoom: 2x digital
- Focus mode: Fixed
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red
- IR control: via App
- IR range: 4 meters

## Video Quality

- HD/VGA/QVGA streaming
- Resolution: HD (1280 x 720p) at 30 fps
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

## Features

- Wi-Fi: 802.11 a/ b/ n
- Motion detection
- Noise detection
- Direction adjustable base
- LED indicator
- Reset button
- Screw holes: Yes, 1
- Temperature measurement: -10 – 50 °C
- Humidity measurement: 20 – 90%

## Software

- Installation: via App
- Automatic App update

- Web browser support
- System supported: iOS4.3 or above
- iPad compatibility: iPad 2, New iPad, iPad with Retina display, iPad mini
- iPhone compatibility: iPhone 4, iPhone 4S, iPhone 5
- iPod compatibility: iPod Touch 4th generation & up

## Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws / wall anchors: 1
- Quick Start Guide

## Input and Output

- Audio: 2-way, parent talk back
- Microphone: High-sensitive, Mono
- Built-in speaker
- USB: Mini-USB port

## Minimum Requirements

- Windows: Windows 7, Internet Explorer 9.0, Chrome 20.0, Firefox
- MAC: MACINTOSH 10.6, Safari 5.1.7, Chrome 21.0, Firefox

## Dimensions

- Packaging dimensions (W x H x D):  
158 x 160 x 70 mm
- Product dimensions (W x H x D):  
66.2 x 104 x 66.2 mm



Issue date 2013-05-17

Version: 2.0.1

12 NC: 8670 000 98825  
EAN: 87 12581 67215 7

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Viewing live video over your home Wi-Fi network using the InSight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

\* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.