



Philips
HD Media player

Netflix
YouTube
Built-in WiFi



HMP2000

Enjoy Netflix and YouTube on your TV

Sit back and enjoy movies on the TV. The HMP2000 comes integrated with Netflix and YouTube, offering a virtually endless list of videos and on-demand movies. Blockbusters and hot TV series are available instantly in your living room now.

See more

- HDMI digital output for easy connection with only one cable
- Netflix-Streaming TV Episodes and Movies over the Internet
- View photos in various formats
- Play video in multiple formats
- Watch YouTube videos directly on your big screen TV*

Engage more

- Built-in Wi-Fi to enjoy your connected media wirelessly
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Internet services integrated

PHILIPS

Highlights


HDMI for simple AV connection



HDMI™

HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backward-compatible with (Digital Video Interface) DVI.

Hi-Speed USB 2.0 Link

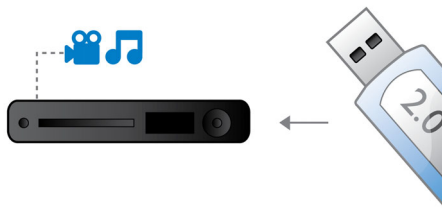

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your

USB device, select the movie, music or photo and play away.

Photo in various formats



View and enjoy your photos in a wide range of formats, including JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP and HD JPEG – directly on your wide-screen TV! Turn your living room into a photo gallery and share wonderful memories with your friends and family.

YouTube videos



Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn your computer on. Simply ensure that your Blu-ray player or Home theater system is connected to the Internet, either wirelessly* or through

cables - then sit back and enjoy the best of YouTube.

Netflix video streaming

NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming*, and you are ready to go.

Built-in Wi-Fi (infotainment)

Thanks to the built-in Wi-Fi, by simply connecting your player directly to your home Wi-Fi network, you can conveniently connect to the Internet without the clutter from the cables. Now you can enjoy built-in infotainment services, such as videos, music, news, weather, photos and more!

Specifications

Product dimensions

- Product dimensions (W x H x D): 9 x 4,5 x 10 cm
- Weight: 0,1575 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
22 x 14,2 x 6,2 cm
- Nett weight: 0,36 kg
- Gross weight: 0,495 kg
- Tare weight: 0,135 kg
- EAN: 87 12581 66770 2
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 23 x 20 x 15,5 cm
- Nett weight: 1,08 kg
- Gross weight: 1,625 kg
- Tare weight: 0,545 kg
- GTIN: 1 87 12581 66770 9
- Number of consumer packagings: 3

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Smart Picture, Video upscaling, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Distortion and Noise (1kHz): 65 dB
- Sound System: Dolby Digital

Video Playback

- Compression formats: H.264, MKV, MPEG1, MPEG2, WMV (V9), VC-1

Audio Playback

- Playback Media: USB flash drive
- Compression format: MP3, WMA, Dolby Digital, PCM
- MP3 bit rates: 32 - 320 kbps

Digital Photo Playback

- Picture Compression Format: BMP, GIF, JPEG, PNG, TIFF
- Picture Enhancement: Zoom
- Playback Media: USB flash drive

Connectivity

- Front / Side connections: USB
- Rear Connections: HDMI output

Convenience

- On-Screen Display languages: Danish, English, Finnish, French, German, Italian, Polish, Portuguese, Spanish, Swedish, Turkish, Czech, Greek, Hungarian, Russian, Romanian, Slovak, Ukraine
- EasyLink (HDMI-CEC): One touch play, One touch standby
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- Subtitle support: .psb, .smi, .srt, .ssa, .sub

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1 W

Accessories

- Included accessories: AC-DC Adapter, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 90 x 50 x 100 mm



Issue date 2017-04-04

Version: 1.0.5

12 NC: 8670 000 97585
EAN: 87 12581 66770 2

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Netflix unlimited streaming membership required.